


TEAC®

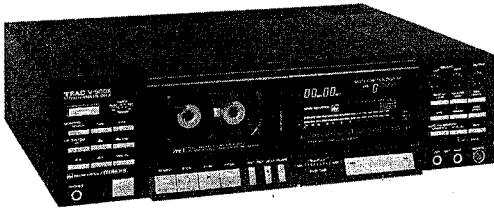

SERVICE MANUAL

V-900X/V-800X/V-700

Stereo Cassette Deck

1 SPECIFICATIONS AND SERVICE DATA

仕様及びサービス・データ

Notes:

- Improvements may result in changes in specifications and service data.
- 0 dB is referenced to 0.775 V in this manual.

SPECIFICATIONS

Track system	4-track, 2-channel stereo
Heads	3: Erase, record and playback
Type of tape	Standard compact cassette, C-60 and C-90
Tape speed	4.76 cm/s (1-7/8 ips)
Input (level and impedance)	
MIC:	Specified input level: -57 dB (1.09 mV)/10 kohms Minimum input level: -67 dB (346 μ V)
LINE IN:	Specified input level: -9 dB (275 mV)/50 kohms Minimum input level: -19 dB (86.9 mV)
Output (level and impedance)	
OUTPUT:	Specified output level: -4 dB (490 mV) 50 kohms or more
PHONES:	Specified output level: -9.8 dB (250 mV)/8 ohms
Equalization	
METAL:	3180 μ s + 70 μ s
CrO ₂ :	3180 μ s + 70 μ s
NORMAL:	3180 μ s + 120 μ s
Head configuration	
	1/2-track, 1-channel erase head
	1/4-track, 2-channel record and playback head
Motors	
	1 DC FG servo DD capstan motor (V-900X)
	1 DC servo capstan motor (V-800X/V-700)
	1 DC reel motor
	1 mechanism control motor
Bias frequency	100 kHz
Operation position	Horizontal
Power requirements	
	100/120/220/240 V AC, 50/60 Hz (General Export Models)
	120 V AC, 60 Hz (U.S.A./Canada)
	220 V AC, 50 Hz (Europe)
	240 V AC, 50 Hz (U.K./Australia)
Power consumption	
	38 W (V-900X)
	36 W (V-800X)
	34 W (V-700)
Dimensions	See Fig. 1-1 on page 3.
Weight	7.5 kg (16.5 lbs) net

CAUTION

△ Parts marked with this sign are safety critical components. They must always be replaced with identical components — refer to the appropriate parts list and ensure exact replacement.

注 意

△印は安全重要部品です。交換する時は必ずティアック指定の部品を使用してください。

注

- 仕様およびサービス・データは改善のため、予告なく変更することがあります。
- 本マニュアルの 0 dB は 0.775 V を基準としています。

SERVICE DATA**MECHANICAL**

Tape speed deviation	3000 Hz \pm 45 Hz (V-900X) 3000 Hz \pm 60 Hz (V-800X/V-700)
Tape speed drift	45 Hz (V-900X), 60 Hz (V-800X/V-700)
Wow and flutter	
Playback:	0.06% (WRMS)
Record/playback:	0.20% (RMS) (V-900X), 0.25% (RMS) (V-800X/V-700)
Pinch roller pressure	
	330 to 470 g (11.6 to 16.6 oz) (V-900X) 380 to 520 g (13.4 to 18.3 oz) (V-800X/V-700)
Reel Torque	
Take-up:	30 to 60 g-cm (0.42 to 0.83 oz-inch)
Supply:	2 to 6 g-cm (0.028 to 0.083 oz-inch)
F.F./REW:	110 to 170 g-cm (1.5 to 2.4 oz-inch)
Fast winding time	100 seconds for MTT-551 (C-60)

ELECTRICAL

Frequency response	See Figs. 5-9 to 5-12
Signal-to-noise ratio	
Playback:	NORMAL: 47 dB min.
Overall:	METAL, CrO ₂ : 46 dB min.
	NORMAL: 45 dB min.
	dbx IN, for all tape positions: 65 dB min.
Erase efficiency	65 dB min. at 1 kHz (measured with input 10 dB higher than the specified input level)
Channel separation	30 dB min. at 1 kHz
Adjacent track crosstalk	40 dB min. at 125 Hz
Total harmonic distortion	
	2.5% or less with METAL, CrO ₂ and NORMAL tapes

- Dolby Noise Reduction System manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.
- dbx Noise Reduction system made under license from dbx, Incorporated. The name "dbx" and the dbx symbol are trademarks of dbx, Incorporated.

- ドルビーノイズリダクションシステムは、ドルビー研究所からの実施権に基づき製造されています。
- ドルビー及び DD は、ドルビー研究所の登録商標です。
- dbx および dbx マークは dbx インコーポレーテッドの登録商標です。
- dbx システムは dbx インコーポレーテッドの実施権に基づいて製造されています。

EXPLODED VIEWS PARTS LIST SCHEMATIC DIAGRAMS

V-900X/V-800X/V-700

PRELIMINARY

暫定版

This parts list is for temporary use only. Discard when the service manual which includes the final parts list is delivered.

この部品表は暫定版です。サービスマニュアルが届きましたら
廃棄して下さい。

NOTES

1. All resistors are rated $\pm 5\%$ tolerance, 1/4 watt and of carbon type, unless otherwise noted.
Resistor values are in ohms (k=kilo-ohms M=megohms).
2. All capacitor values are in microfarads (p=picofarads).
3. Δ Parts marked with this sign are safety critical components. They must always be replaced with identical components.
Refer to the appropriate parts list to ensure exact replacements.

INSTRUCTIONS FOR SERVICE PERSONNEL


BEFORE RETURNING APPLIANCE TO THE CUSTOMER, MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT.

TEAC[®]

February, 1984

5704020400

EXPLODED VIEW-1

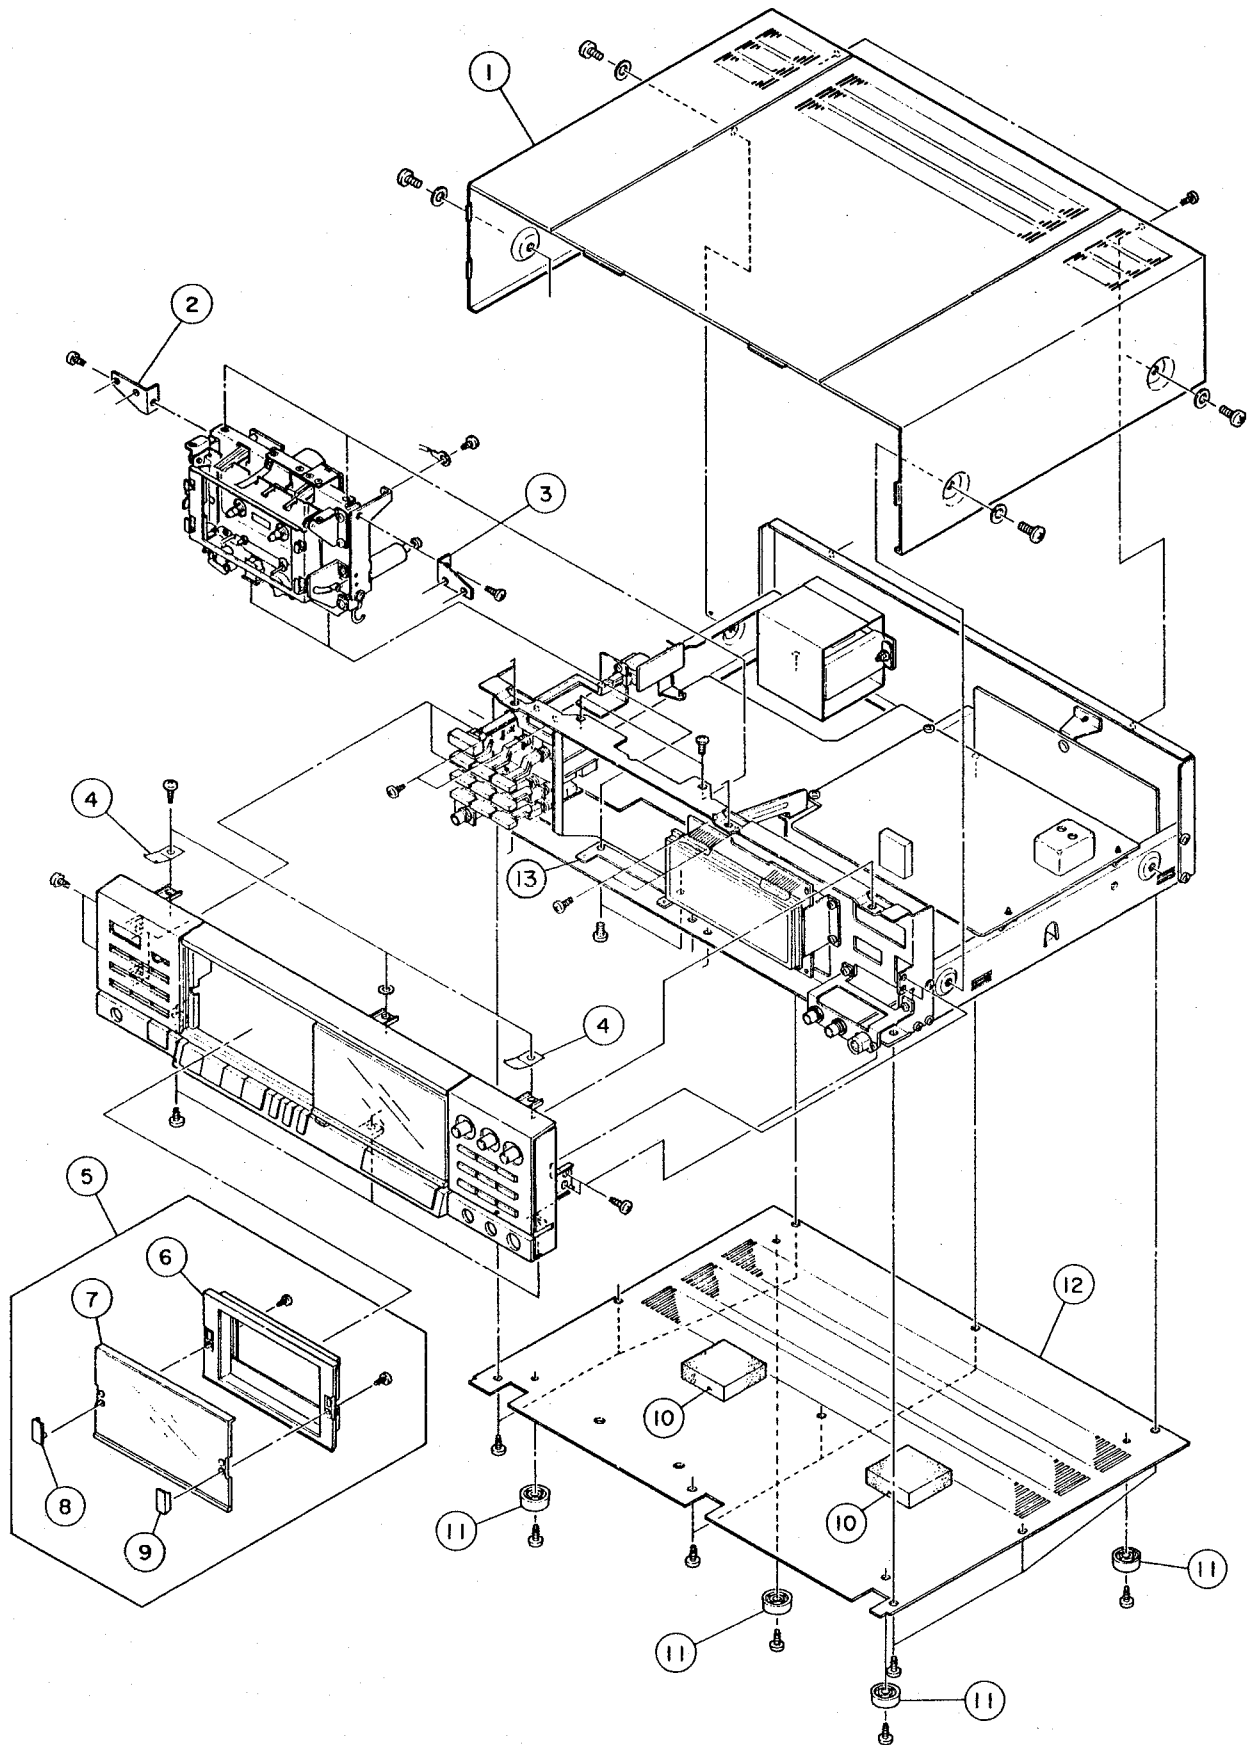

2 REMOVAL OF EXTERNAL COMPONENTS

外装部品の外し方

Disassemble in number-order

番号順に外して下さい

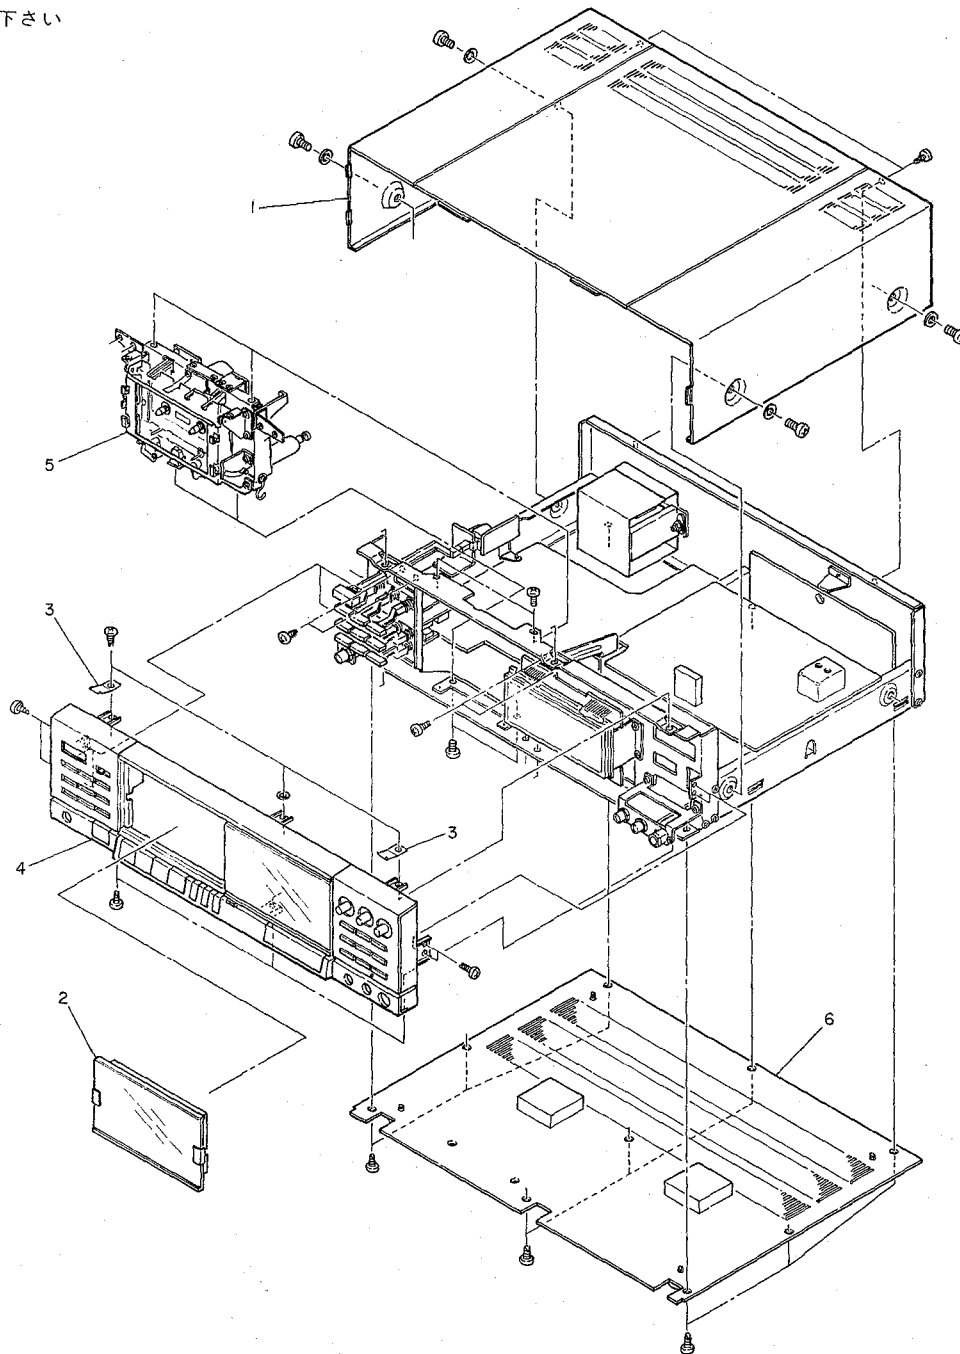


Fig. 2-1

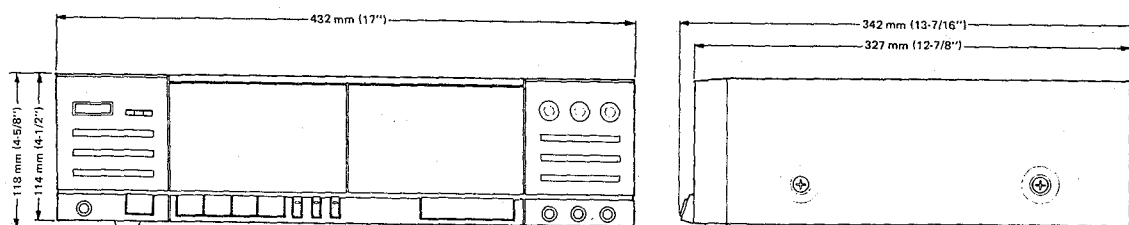


Fig. 1-1

3 PARTS LOCATION

部品配置図

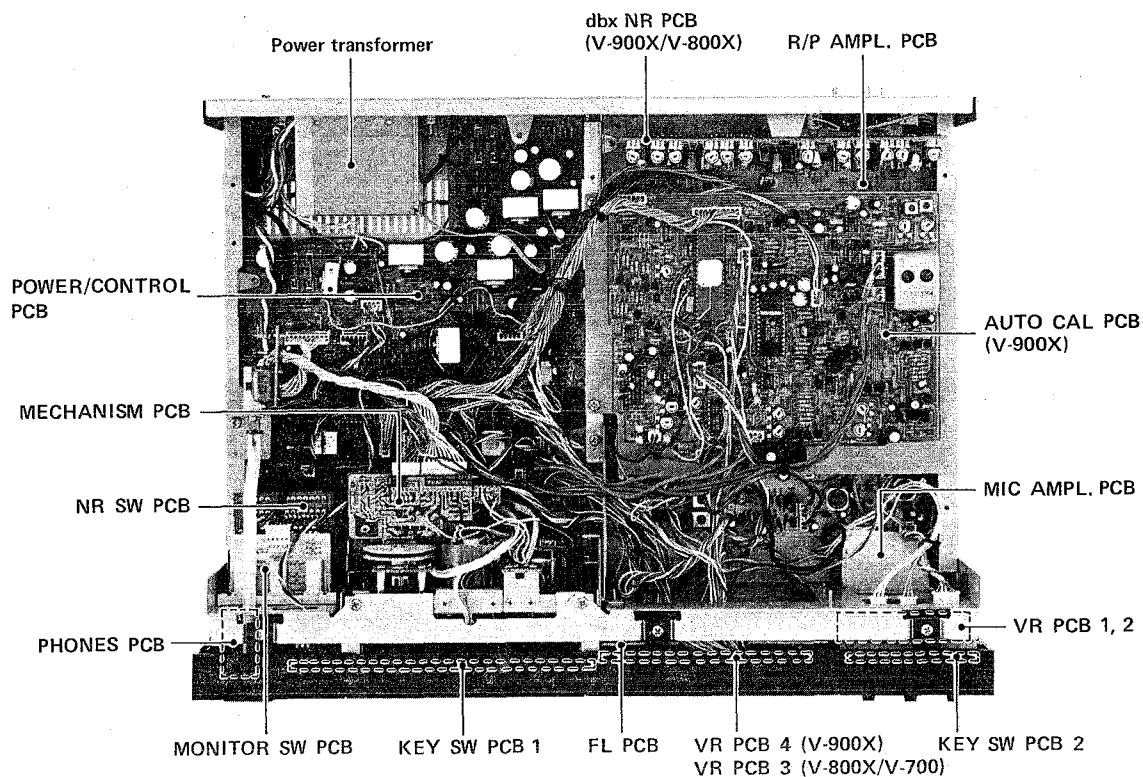


Fig. 3-1 Top view 上面図

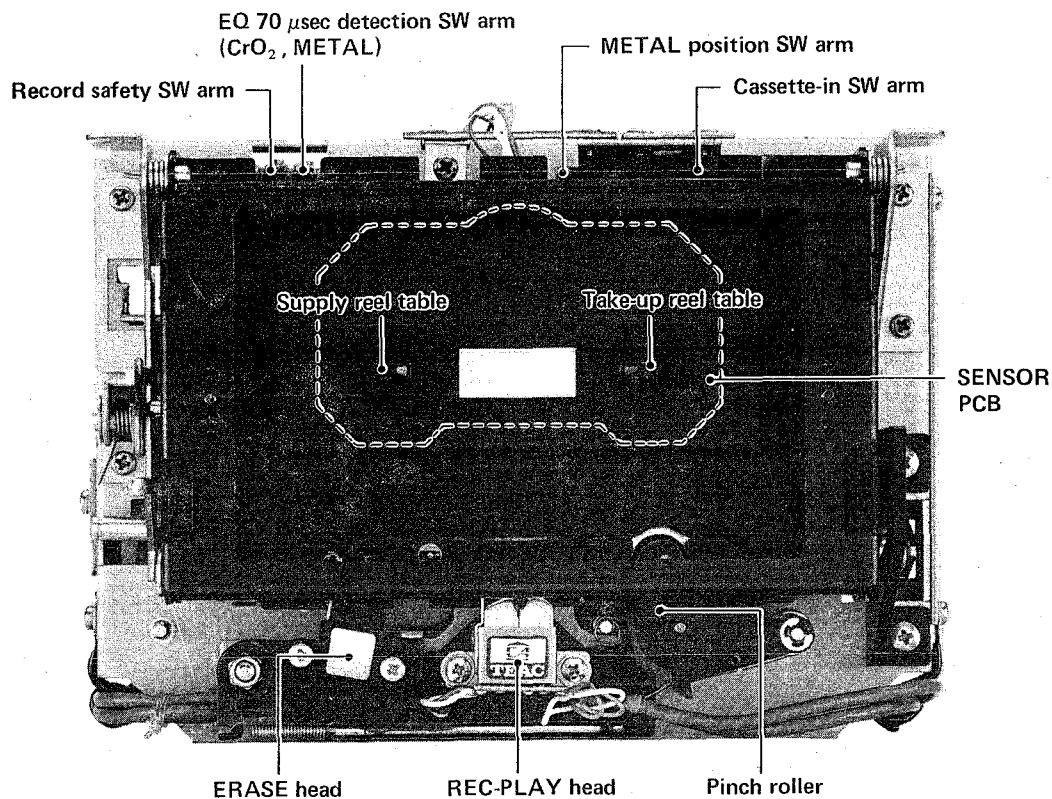


Fig. 3-2 Transport front view トランスポート前面図

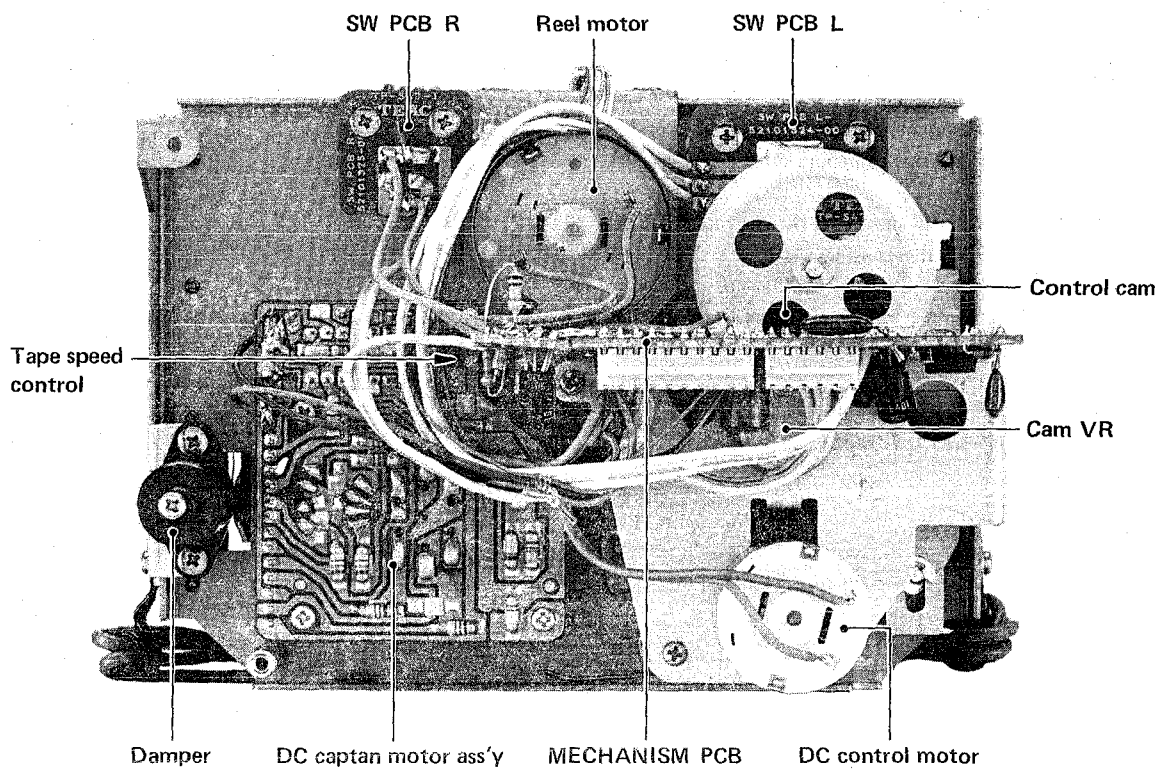


Fig. 3-3 Transport rear view トランスポート後面図 (V-900X)

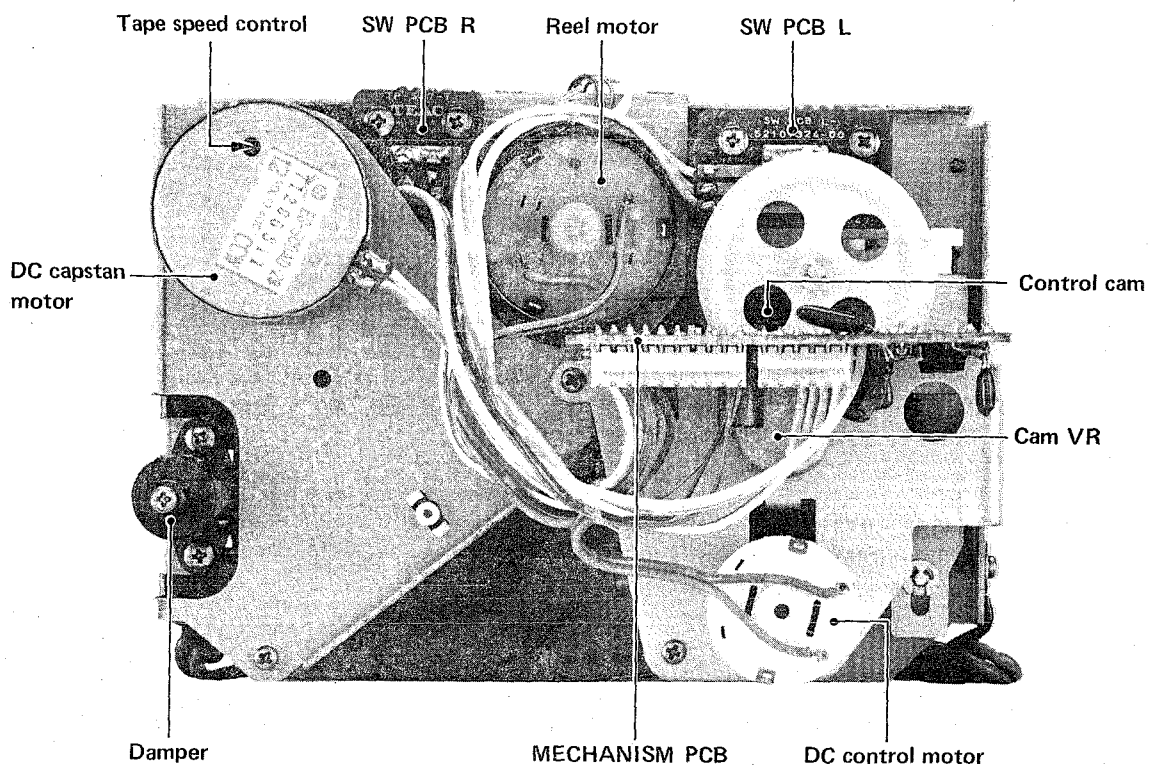


Fig. 3-4 Transport rear view トランスポート後面図 (V-800X/V-700)

4 MECHANICAL ADJUSTMENTS AND CHECKS

機構部の調整と確認

4-1 PINCH ROLLER PRESSURE

1. While pushing up the cassette-in sensor arm with the cassette holder shut (Fig. 3-2), activate the play mode. Keep the sensor arm pushed up during measurement.
2. Hook a spring scale to the small opening on the pinch roller arm.
3. Pull the scale downwards until there is sufficient force to separate the pinch roller from the capstan shaft, and then allow the pinch roller to just touch the capstan shaft again.
4. Read the scale when the pinch roller just starts to rotate. The readings should be as specified below.

Specifications:

V-900X: 330 g ~ 470 g (11.6 oz ~ 16.6 oz)

V-800X/V-700: 380 g ~ 520 g (13.4 oz ~ 18.3 oz)

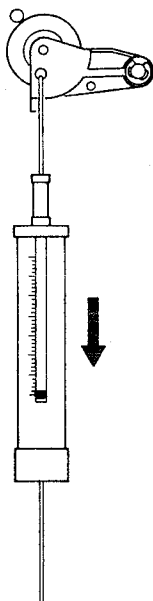


Fig. 4-1

4-2 REEL TORQUE

1. Load the cassette torque meter on the deck and read the pointer indication on the dial scale for each tape transport operation. The measured torque should be within the following specified values:

Specifications:

Take-up: 30 ~ 60 g·cm (0.42 ~ 0.83 oz·inch)

Supply: 2 ~ 6 g·cm (0.028 ~ 0.083 oz·inch)

F.F./REW: 110 ~ 170 g·cm (1.5 ~ 2.4 oz·inch)

4-3 CASSETTE HOLDER

1. Adjust the position of holder guide plate so that it is parallel with the cassette holder as shown in Fig. 4-2 when a cassette tape (MTT-551, etc.) is loaded.

4-1 ピンチ・ローラ圧着力

1. カセット・ホルダを閉じた状態で、カセットイン・センサ・アーム (図3-2) を上方に押して、プレイ・モードにする。測定中、センサ・アームは上方に押し続けること。
2. ピンチ・ローラ・アームの小さい穴にバネ秤を掛ける。
3. ピンチ・ローラを回転が止まるまで秤を真下に引張った後、ピンチ・ローラが再びキャプスタン・シャフトに接触するように徐々に戻す。
4. ピンチ・ローラが回り始める時の値を読む。

規格値: 330 g ~ 470 g (V-900X)

380 g ~ 520 g (V-800X/V-700)

4-2 リール・トルク

1. カセット型トルク・メータによる測定値が下表の範囲内であることを確認する。

テイクアップ・トルク: 30 ~ 60 g·cm

バックテンション・トルク: 2 ~ 6 g·cm

早送りトルク: 110 ~ 170 g·cm

4-3 カセット・ホルダ位置

1. テープ (MTT-551等) がセットされた状態で、カセット・ホルダとホルダ・ガイド板とが平行になるように、ホルダ・ガイド板取付位置を調整する。

Viewed from right side
右側

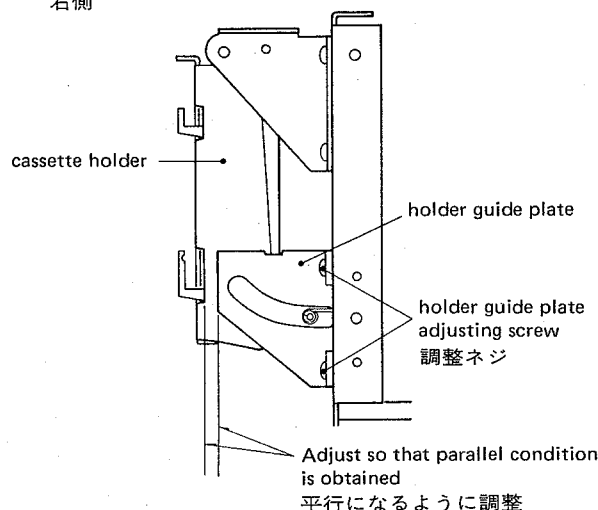


Fig. 4-2

4-4 DAMPER ADJUSTMENT

1. Load a C-60 tape (MTT-5061, etc.) and close the cassette holder.
2. Turn the air adj. screw so that after pushing the EJECT button, the cassette holder opens smoothly and completely.

Note: Be careful not to turn the screw beyond the permissible adjustment limit.

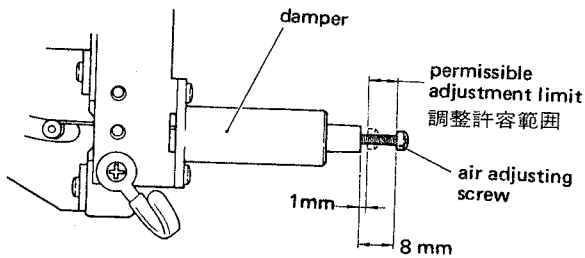


Fig. 4-3

4-4 ダンパ調整

1. C-60テープ(MTT-5061等)を装てん後、カセット・ホルダを閉じる。
2. EJECTボタンを押してカセット・ホルダがスムーズに又十分に開くように図示のネジを調整する。

注意：図に示す許容調整範囲を越えてネジを回さないこと。

4-5 リーフ・スイッチ位置

1. SW PCB L ass'y* 又はSW PCB R ass'y* を再取付の場合は、できるだけ上方(図の矢印方向)に取付ける。取付後、リーフ・スイッチに変形がないこと(図4-4のA)を確認してから次項以降のチェックをする。

* SW PCB L ass'y: 録音防止スイッチ, EQ70 μ sec検出スイッチ(CrO₂, METAL)付

SW PCB R ass'y: METALポジション・スイッチ, カセット・イン・スイッチ付

2. 誤消去防止用つめ付のNORMALテープ及びMETALテープを装てんして、テープ・タイプ・ディスプレイの **NORMAL**、**METAL** が各々表示されるか確認する。
3. 誤消去防止用つめ無しのMETALテープを装てんして、EJECTボタンを押した時、カセット・ホルダが確実に開くか確認する。
4. 誤消去防止用つめ付のCrO₂テープを装てんして **CrO₂** が表示されるか確認する。


4-5 LEAF SWITCH POSITION

1. When remounting SW PCB L ass'y* or SW PCB R ass'y* is required, push it (them) as far upward (as shown by the arrows) as possible. Afterwards, check that each of PCB-mounted leaf switch shape is normal (Fig. 4-4's A), then proceed to the next steps.

* SW PCB L ass'y: Record safety switch, EQ 70 μ sec detection switch (CrO₂, METAL) mounted

SW PCB R ass'y: METAL position switch, cassette-in switch mounted

2. Load a NORMAL tape, then a METAL tape, with their record protection tabs in place, and check that the **NORMAL** indicator and then the **METAL** indicators on the front panel light respectively.
3. Load a METAL tape without its record protection tab, then check that when the EJECT button is depressed, the cassette holder properly opens.
4. Load a CrO₂ tape with its record protection tab in place, and check that the **CrO₂** indicator lights.

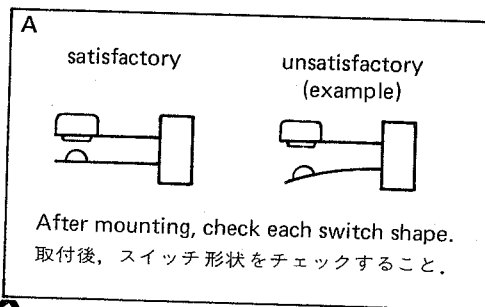

Viewed from rear of tape transport chassis
メカ・シャーシ裏側

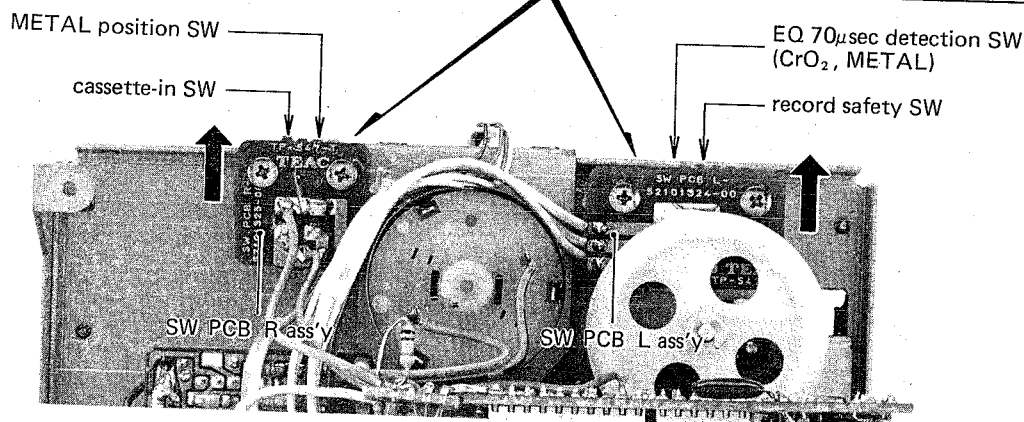


Fig. 4-4

4-6 CONTROL CAM POSITIONING

1. Temporarily set resistance values of R10 and R11 on MECHA PCB at approx. the mid point of their respective variable ranges.
2. Load an empty cassette (without tape) or activate the cassette-in switch to the on position with your finger.
3. Push the PAUSE button, the adjust R11 so that the hole of marker PA coincides with the reference line of the reel motor mounting plate (See Fig. 4-6).
4. Rotate in both directions the control cam by hand several times to check the points where the reel motor starts to vibrate. If necessary, readjust R11 so that the distances from CW to the hole and CCW to the hole on the PA marker are nearly equal when the reel motor starts to vibrate.
5. Place the deck in STOP mode and adjust R10 as explained above for R11, this time referring to the center ST hole.
6. Repeat steps 3 – 5 until PA and ST position adjustments are satisfied.

4-6 コントロール・カムの位置調整

1. MECHA PCB上のR10,R11の抵抗値を各々、可変範囲のほぼ中間に仮設定する。
2. テープのない空カセットを装てん（カセット・イン・スイッチを手でオンしても可）する。
3. PAUSE状態でコントロール・カム(図4-6)のPA範囲の中心穴が、リール・モータ取付板の基準線に一致するようR11を調整する。
4. 次に手でカムを正転・逆転させ、カム・モータの振動が始まる点がいずれもカムのPA範囲の中心穴から等間隔になるようR11を微調整する。
5. 同様にSTOP状態にし、カムのST範囲の中心穴から等間隔になるようR10を調整する。
6. PA位置及びSA位置の調整が満足されるまで3項～5項を繰り返す。


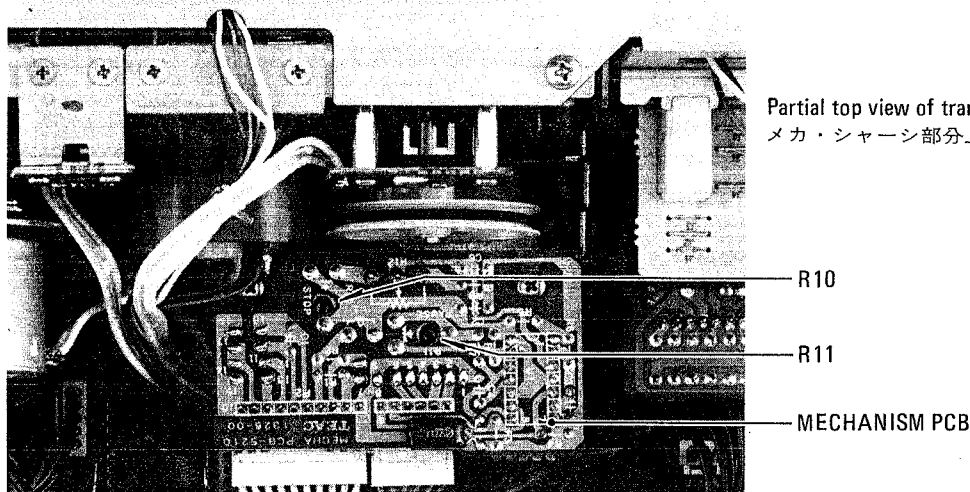


Fig. 4-5

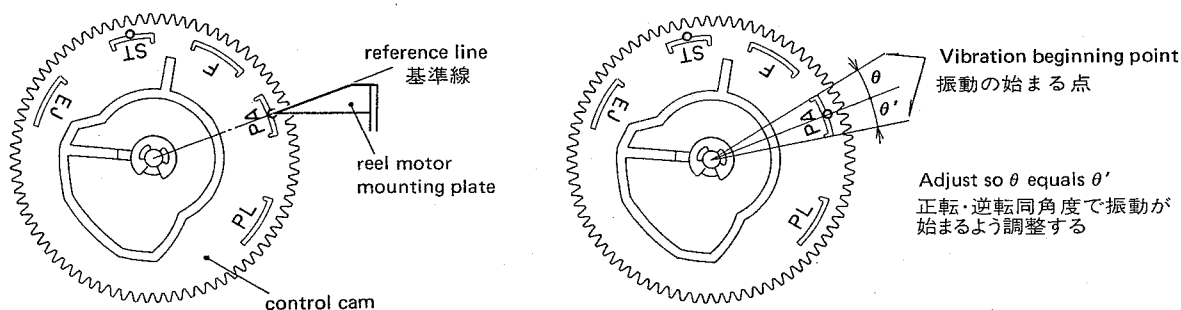

Refer to Fig. 3-3, Fig. 3-4 for control cam location
コントロール・カムの取付個所は図3-3、図3-4参照

Fig. 4-6 Control cam adj. コントロール・カム調整

4-7 TAPE SPEED

1. Connect a frequency counter to the deck as shown in Fig. 4-7.
2. On the V-800X/V-700, depress POWER switch to "on" in order to warm up the capstan motor for at least one minute.
3. Playing the mid portion of an MTT-111 test tape, adjust the trimmers below so that tape speed becomes 3,000 Hz \pm 5 Hz (on V-800X/V-700: 3015 ~ 3025 Hz if more than 5 minutes after its motor rotation starts). An insulated and non-metallic flat-head screwdriver should be used for this adjustment.

Adjustor: V-900X: Semi-fixed resistor on DC capstan motor assembly's PCB (Fig. 3-3)

V-800X/V-700: Semi-fixed resistor on the capstan motor (Fig. 3-4)

4. Make sure the following values are obtained at the beginning and at the end of the tape.

Deviation: 3,000 Hz \pm 45 Hz (V-900X)
3,000 Hz \pm 60 Hz (V-800X/V-700)

Width of deviation: Within 45 Hz (V-900X)
Within 60 Hz (V-800X/V-700)

4-7 テープ速度

1. 図4-7のように周波数カウンタをデッキに接続する。
2. V-800X/V-700の場合、電源スイッチをオンしてキャプスタン・モータを約1分間ウォーミング・アップさせる。
3. MTT-111テスト・テープの中間部を再生して、テープ速度が3,000Hz \pm 5Hz (V-800X/V-700の場合、キャプスタン・モータの回転が5分以上経過した時、3,015~3,025Hz) になるように調整する。調整には充分絶縁された非金属製マイナス・ドライバを使用すること。

調整箇所: V-900X: DCキャプスタン・モータ ass'yの基板内の半固定ポリウム (図3-3)

V-800X/V-700: キャプスタン・モータ内の半固定ポリウム (図3-4)

4. テープの巻始めと巻終りにて下記の値が得られることを確認する。

偏差: 3,000Hz \pm 45Hz (V-900X)
3,000Hz \pm 60Hz (V-800X/V700)

変動巾: 45Hz以内 (V-900X)
60Hz以内 (V-800X/V-700)

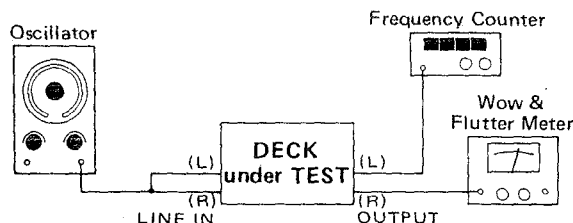


Fig. 4-7

4-8 WOW AND FLUTTER

Note: These measurements should be made at the beginning, middle and the end of the tape.

4-8-1 PLAYBACK METHOD

1. Connect a wow and flutter meter to the deck as shown in Fig. 4-7.
2. Load and play a TEAC MTT-111 test tape or equivalent.
3. Measure the wow and flutter value.

Specification: 0.06% WRMS

4-8-2 RECORD/PLAYBACK METHOD

Note: When measuring with this method, the recorded section should be played back repeatedly to obtain an average value. Be careful not to read the meter for those parts of the tape in which wow and flutter components in recording and playback cancel each other.

4. Load a blank TEAC MTT-552 test tape or equivalent and record a 3,000 Hz signal.
5. Rewind the tape to the beginning of the recorded section, and play it.
6. The wow and flutter should not be more than specified.

Specifications: 0.20% RMS (V-900X)
0.25% RMS (V-800X/V-700)

4-8 ワウ・フラッタ

注意: テープの巻始め、中間、巻終りでそれぞれ測定する。

4-8-1 再生法

1. 図4-7のようにワウ・フラッタ・メータをデッキに接続する。
2. TEAC MTT-111テスト・テープ又は相当品を装てんして再生する。
3. ワウ・フラッタ値を測定する。

規格: 0.06% WRMS (聴感補正)

4-8-2 録再法

注意: 本測定法の場合、録音した部分を幾度かストップ、再生を繰り返し、大きく振れる平均的な値を読む。録音した時と再生した時のワウ・フラッタの成分の位相がキャンセルしたところを読まないようにする。

4. ブランク・テスト・テープTEAC MTT-552又は相当品を装てんして、3,000Hz信号を録音する。
5. テープの録音した部分を巻戻して再生する。
6. ワウ・フラッタ値は下記の規格から外れないこと。

規格: 0.20% RMS (非聴感補正) (V-900X)
0.25% RMS (非聴感補正) (V-800X/V-700)

4-9 TAPE PATH ADJUSTMENT

1. Turn the azimuth adj. screw so that observing by eye the REC. PLAY head becomes parallel with the mechanism chassis as far as possible.

2. Press the EJECT button to open the cassette holder. Insert the head check jig A into the cassette holder. Close the holder then push the jig in firmly.

Notes: • Head check jig A should be inserted with its edge set on the stoppers at the bottom of the cassette holder (Fig. 4-9).

- Be careful for the head check jig A not move off the stoppers of the cassette holder when closing the cassette holder.

3. Making sure that in play mode the head check jig B touches the surface of the REC.PLAY head, adjust head position so that the slanted edge of the head check jig B comes to rest approximately in the middle between the two line markers on the head check jig. A. For adjusting, loosen the head position adj. screw, then adjust head position, and complete by tightening the screw.

4. Set the head check jig B as shown in Fig. 4-11 so that the head check jig B can just pass through smoothly between the tape guides. If head height is too low, add the head spacer*. If it is too high, remove the head spacer. Height adjustment should be satisfied together with parallel adjustment mentioned in step 1.

* Head spacer: TEAC P/N 5800468900, thickness 0.15 mm

5. In the same way as above, check the erase head height using the head check jig B. If needed, adjust it by turning the adj. nut.

6. Play a C-90 type mirror tape (MTT-902T, etc.) and check the following contents.

- The head core (silver) of the REC.PLAY head should not be visible from the tape edge.
- Any noticeable tape curling should not occur on the sides of the REC.PLAY head guide.
- Moving tape should touch the erase head's upper guide.

7. In play mode, check the following contents.

- The clearance between erase head plate/head stopper: more than 0.3 mm (Adjust by bending the stopper)
- There should be a gap between head cover (B)/head stopper.

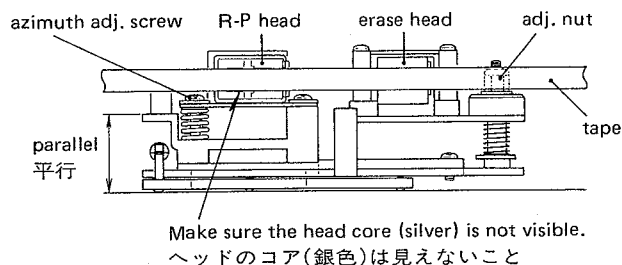


Fig. 4-8

4-9 テープ走行調整

1. 録・再ヘッドとメカ・シャーシーが目測にてできるだけ平行になるようにアジマス調整ネジを回す。

2. EJECTボタンを押してカセット・ホルダを開く。ヘッド治具Aを入れてカセット・ホルダを閉じる。閉じた後はヘッド治具Aを確実に内側へ押す。

注意:

• ヘッド治具Aはその底端部がカセット・ホルダのストッパにて支持されるように入れること (図4-9)

• カセット・ホルダを閉じる際、ヘッド治具Aがストッパから外れないこと。

3. ブレイ状態にしてヘッド治具Bを録・再ヘッドの先端に当てた時、その治具Bがヘッド治具Aのマーカ基準範囲内のほぼ中央になるようヘッドの位置を調整する。調整はヘッドの位置調整ネジをゆるめて行ない、再締めして完了する。

4. ヘッド治具Bを図4-11のようにセットした時、録・再ヘッドのテープ・ガイドをスムーズに通り返けることを確認する。若し、ヘッドの高さが低い時はヘッド・スペーサ*を追加し、低い場合はヘッド・スペーサを外す。高さ調整は1項の平行度も満足させて行なうこと。

*ヘッド・スペーサ: TEAC品番 5800468900, 板厚 0.15mm

5. 上記と同様の方法でヘッド治具Bを用いて消去ヘッドの高さをチェックする。調整は調整ナットによって行なう。

6. C-90型ミラー・テープ(MTT-902T)を走行させ、次のことを確認する。

• 録・再ヘッドのコア(銀色)がテープよりはみだして見えないこと。

• 録・再ヘッドのガイドでテープがカールしないこと。

• 消去ヘッドの上側ガイドにテープが接すること。

7. ブレイ状態にて次のことを確認する。

• 消去ヘッド取付板とヘッド・ストッパとのスキ間: 0.3mm以上(調整はヘッド・ストッパを曲げて行なう)

• ヘッド・カバーBにヘッド・ストッパが当らぬこと。

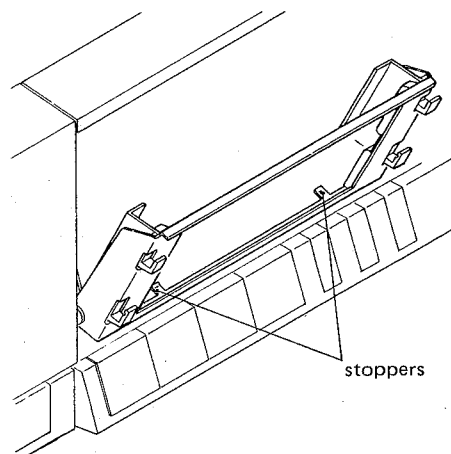


Fig. 4-9

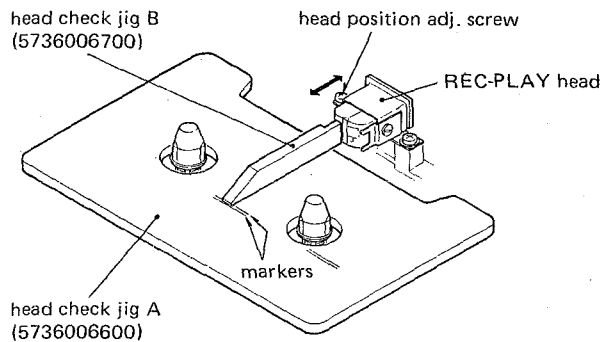


Fig. 4-10

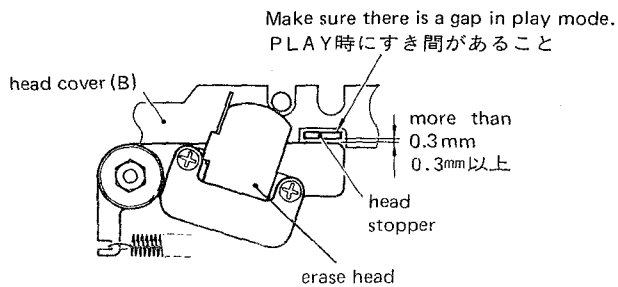


Fig. 4-12

4-10 LUBRICATION (V-800X/V-700)

Lubrication is only required when parts are replaced. For this purpose, use the oil and grease specified below.

Oil: TEAC TZ-255A motor oil (from TEAC TZ-255 oil kit), Mobil D.T.E. Oil Light, or equivalent

Grease: ORE-LUBE G1/3 or equivalent

1. Apply a drop of oil with an oil applicator to a point about 1/3 the way down the shaft (from the free end) of the flywheel, then insert the shaft into the capstan housing.
2. Apply a suitable amount of light grease to the well of the flywheel bearing.

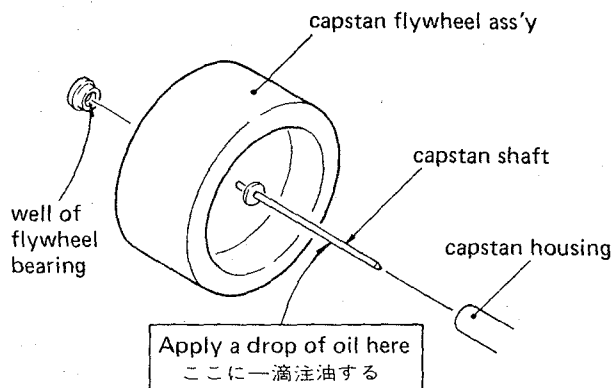


Fig. 4-13

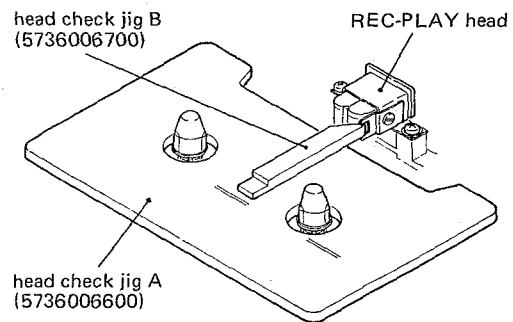



Fig. 4-11

4-10 注油(V-800X/V-700)

注油は部品が交換される時のみ必要です。注油には下記に明示するオイルとグリースを使用します。

オイル: TEAC TZ-255Aモータ・オイル(TEAC TZ-255オイル・キットから)

モービルD・T・Eオイル・ライト, または相当品

グリース: オア・ループG1/3, または相当品

1. フライホイール軸の先端から約1/3下った軸面へ、注油器にてオイル1滴を注油後、フライホイール軸をキャプスタン・ハウジングへそう入する。
2. 適量のグリースをフライホイール・ベアリング受けへつける。

4-11 REMOTE CONTROL REFERENCE VOLTAGE (V-900X/V-800X)

If the RC-203 remote control unit (optional) is used to operate the deck, the following adjustment procedure is needed.

1. Connect the remote control unit to the REMOTE socket.
2. Connect the digital-type DC voltmeter to TP. 1 on the POWER/CONTROL PCB (See Fig. 4-14).
3. Temporarily adjust RV902 so that voltage at TP. 1 becomes +1.32 V.
4. Even though the number on the CPS display is increased by one each time the CPS button on the remote control unit is pressed, adjust RV902 until its number is not increased.
5. Adjust RV902 while pressing the CPS button on the remote control unit so as to find the beginning point at which the CPS display's number is increased when the CPS button is pressed.
6. Adjust RV902 so that voltage at TP. 1 goes into +0.04 V than the value at the above beginning point.

4-11 リモート・コントロール基準電圧調整 (V-900X/V-800X)

リモート・コントロール・ユニットRC-203 (別売)を使用する場合は、次の調整が必要です。

1. リモコン・ユニットをリモート・コントロール・ジャックに接続する。
2. デジタル式直流電圧計をPOWER/CONTROL PCB上のTP.1に接続する (Fig. 4-14参照)
3. TP.1の電圧が+1.32 VとなるようRV-902を仮調整する。
4. リモコン・ユニット上のCPSスイッチを一度ずつ押すと [CPS]ディスプレイの数字が1ずつふえるが、RV-902を調整してふえないようにする。
5. [CPS]ディスプレイの数字がふえる開始点をリモコンのCPSスイッチを押しながらRV-902を調整して求める。
6. TP.1の電圧が上記の開始点に於ける値より+0.04 VになるようにRV-902を調整する。

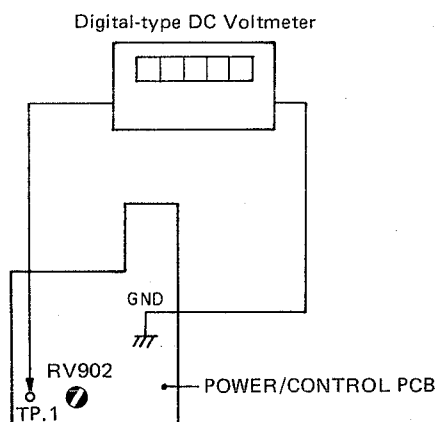


Fig. 4-14

4-12 VOLTAGE CONVERSION (FOR GENERAL EXPORT MODELS)

ALWAYS DISCONNECT THE POWER LINE CORD BEFORE MAKING THESE CHANGES.

1. Locate the voltage selector on the rear panel as shown in the illustration.
2. Using a regular (slot blade) screwdriver, turn the selector so that the desired voltage indication aligns with the arrow mark.

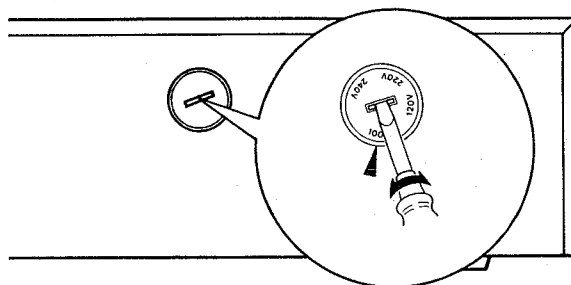


Fig. 4-15

5 ELECTRICAL CHECKS AND ADJUSTMENTS

アンプ部の確認と調整

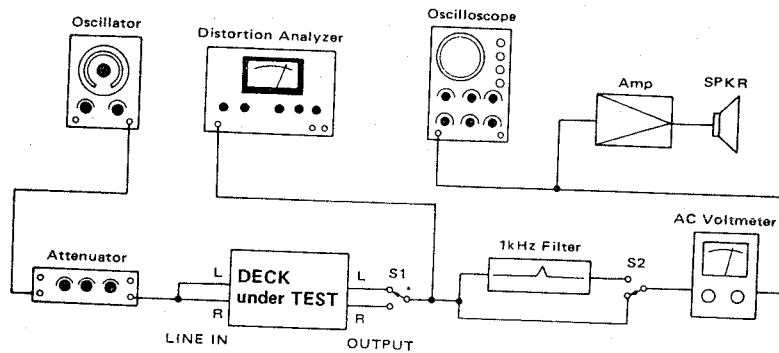


Fig. 5-1 Basic test setup 基本測定接続図

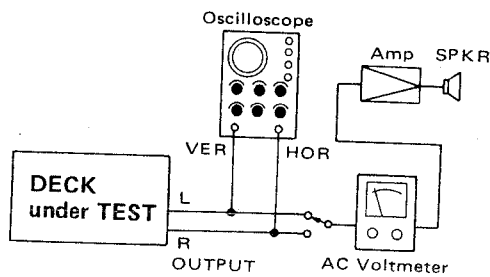


Fig. 5-2 Test setup for azimuth check
位相測定接続図

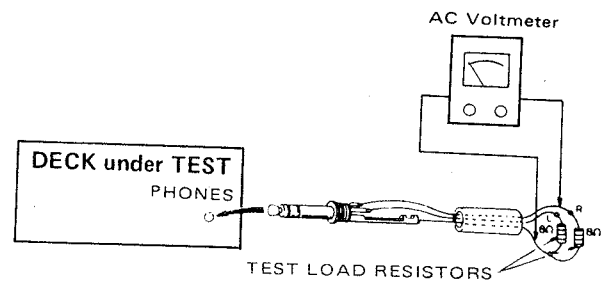


Fig. 5-6 Test setup for PHONES check
ホーン出力測定接続図

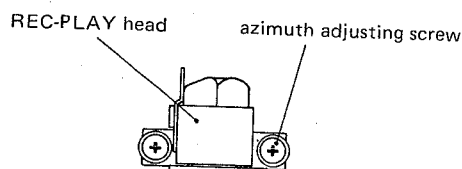


Fig. 5-3 Azimuth screw location
位相調整ネジ

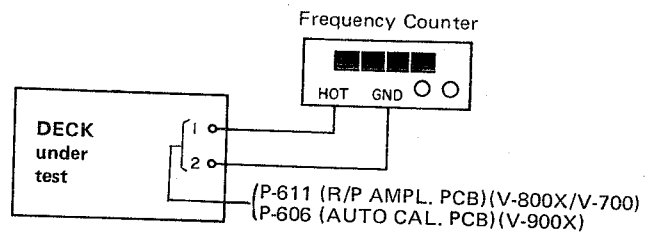


Fig. 5-7 Bias osc. frequency check
バイアス発振周波数チェック

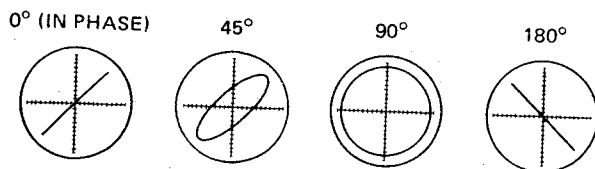


Fig. 5-4 Confirming phase relationship
位相

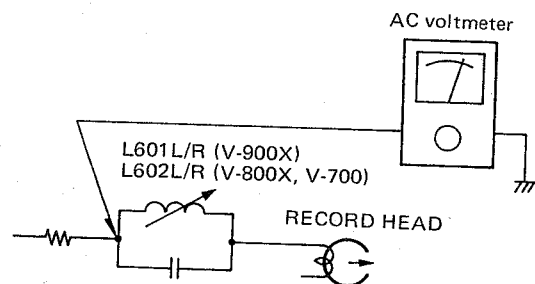


Fig. 5-8 Bias trap (recording) check
録音系バイアス・トラップ・チェック

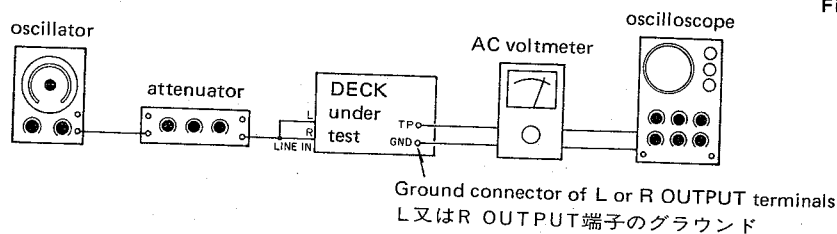


Fig. 5-5 Test setup for items 2, 8 and 12
2, 8及び12項の場合の接続

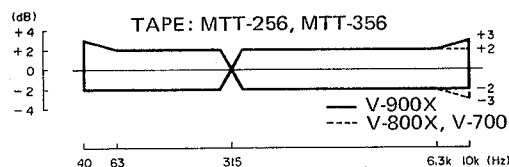


Fig. 5-9 Playback frequency response
再生周波数特性

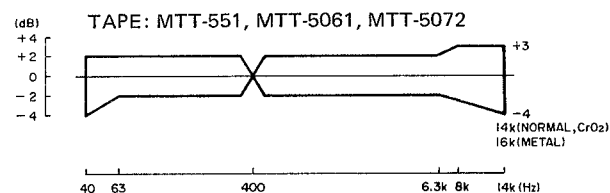


Fig. 5-10 Overall frequency response (NR OUT)
録再周波数特性

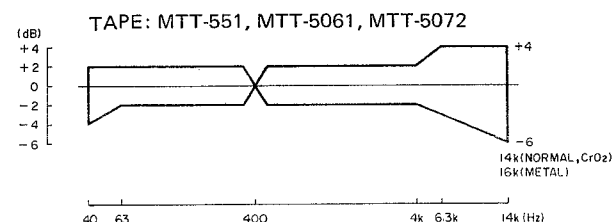


Fig. 5-11 Overall frequency response (DOLBY B)
録再周波数特性

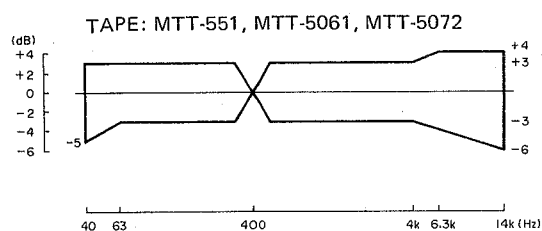


Fig. 5-12 Overall frequency response (DOLBY C, DBX)
録再周波数特性

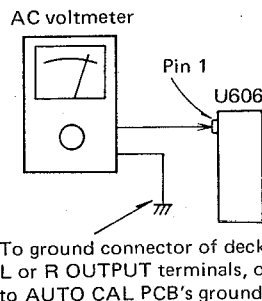


Fig. 5-14 Auto cal. test signal adjustment (2)
オート・キャリブレーション・テスト信号調整(2)

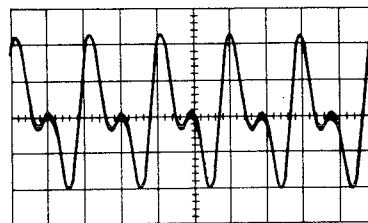


Fig. 5-15 RMS symmetry adjustment (incorrect)
RMSシンメトリ調整・不良

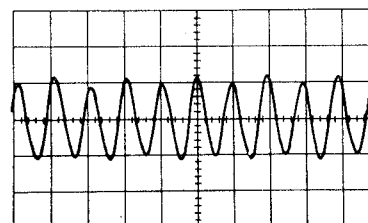


Fig. 5-16 RMS symmetry adjustment (correct)
RMSシンメトリ調整・良

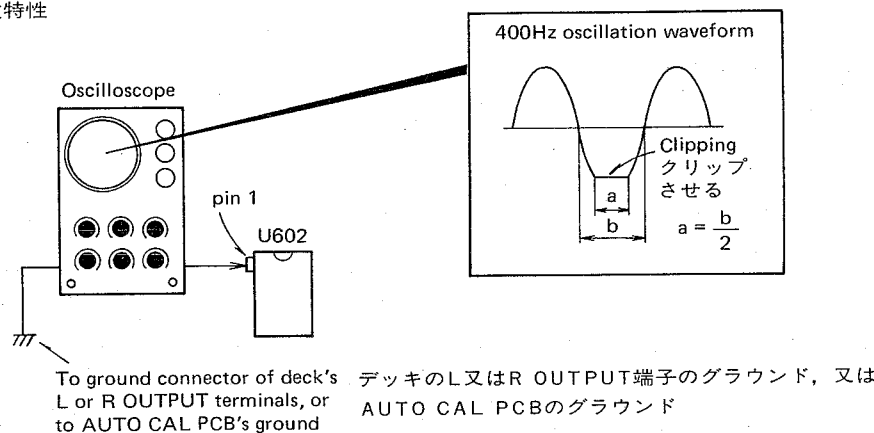


Fig. 5-13 Auto cal. test signal adjustment (1)
オート・キャリブレーション・テスト信号調整(1)

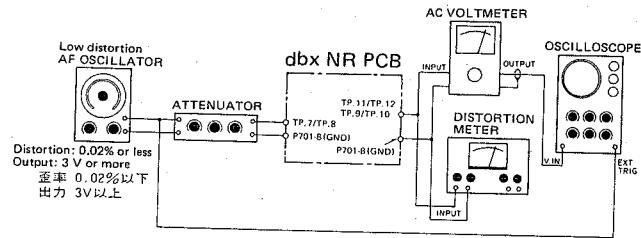


Fig. 5-17 Encoder adjustment setup エンコーダ調整時の接続

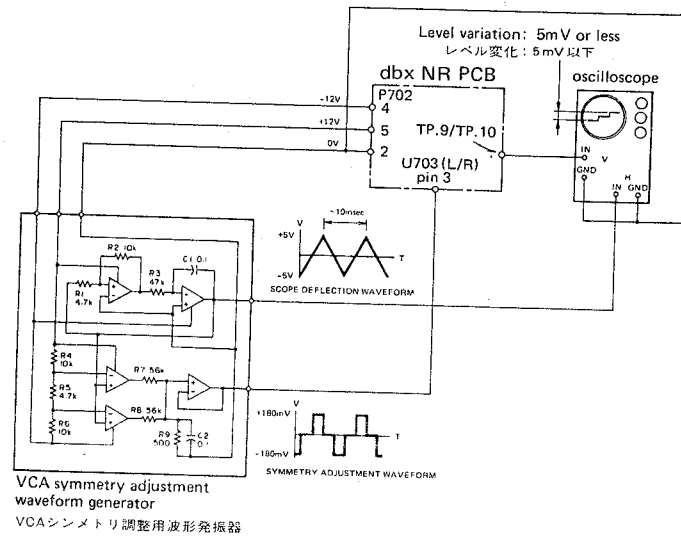


Fig. 5-18 VCA symmetry adjustment setup (encoder) VCA シンメトリ調整時の接続 (エンコーダ)

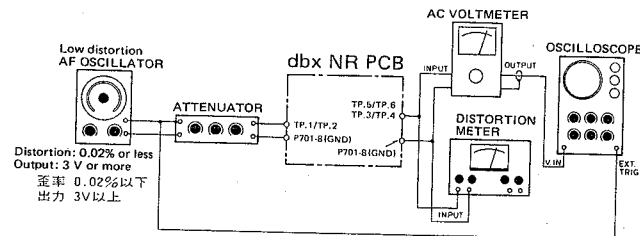


Fig. 5-19 Decoder adjustment setup デコーダ調整時の接続

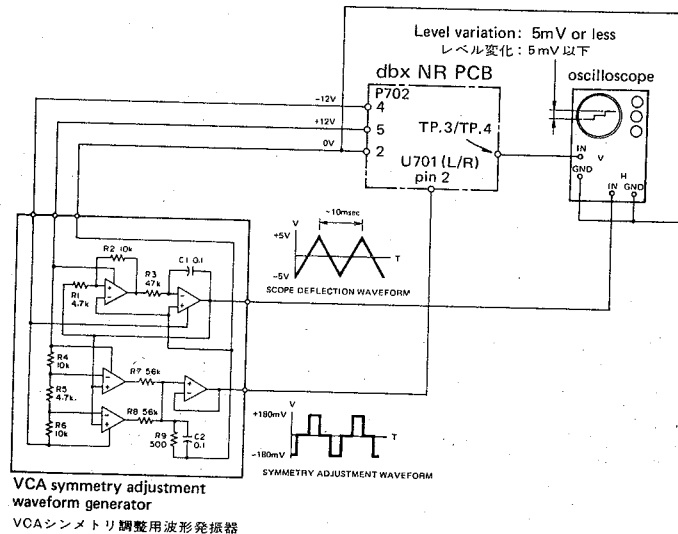


Fig. 5-20 VCA symmetry adjustment setup (decoder) VCA シンメトリ調整時の接続 (デコーダ)

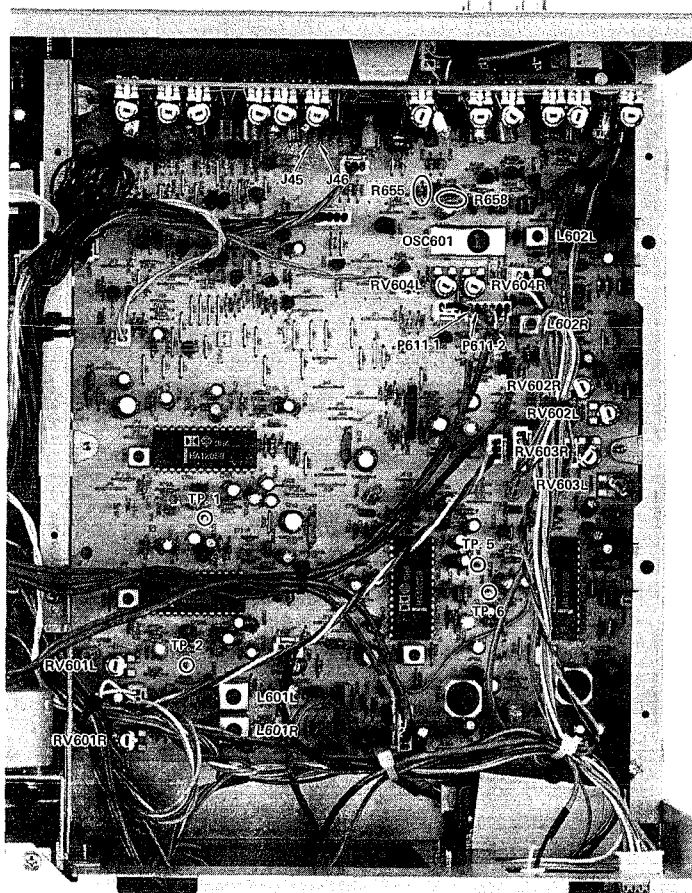


Fig. 5-21 R/P AMPL. PCB

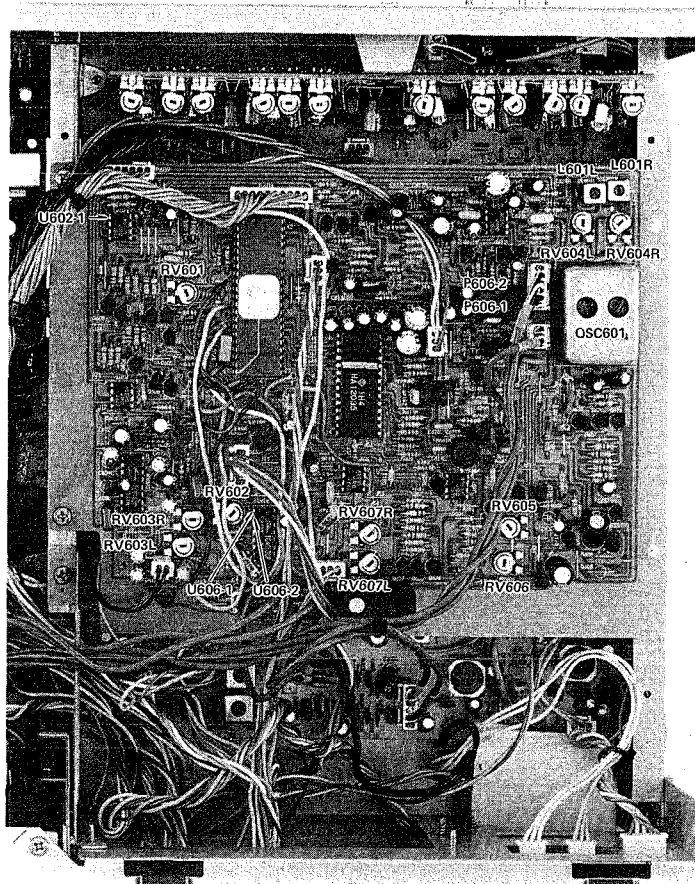


Fig. 5-22 AUTO CAL. PCB (V-900X)

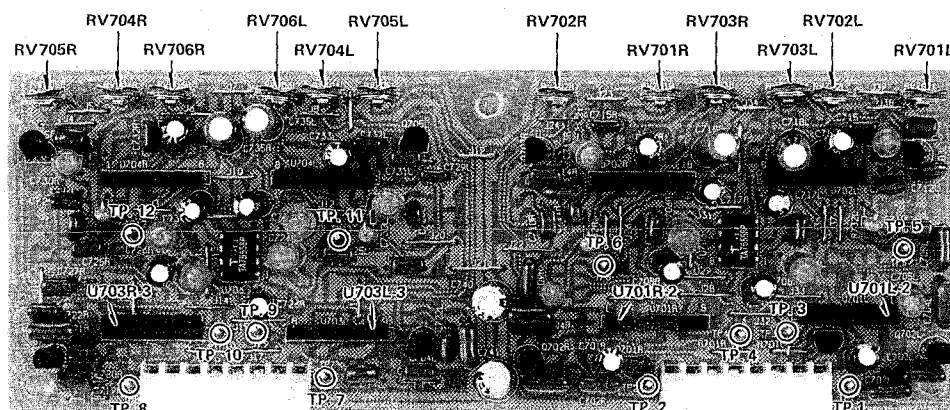


Fig. 5-23 dbx NR PCB (V-900X/V-800X)

R/P AMPL. PCB

			MODEL		
RV601L/RV601R	Playback level	再生レベル	V-900X	V-800X	V-700
RV602L/RV602R	Record level	録音レベル		V-800X	V-700
RV603L/RV603R	Meter level	メータ・レベル	V-900X	V-800X	V-700
RV604L/RV604R	Overall freq. response (METAL)	録再周波数特性(METAL)		V-800X	V-700
R655 (RV605)	Overall freq. response (CrO ₂)	録再周波数特性(CrO ₂)		V-800X	V-700
R658 (RV606)	Overall freq. response (NORMAL)	録再周波数特性(NORMAL)		V-800X	V-700
L601L/L601R	Bias trap (playback)	再生系バイアス・トラップ	V-900X	V-800X	V-700
L602L/L602R	Bias trap (recording)	録音系バイアス・トラップ		V-800X	V-700
OSC601	Bias osc. frequency	バイアス発振周波数		V-800X	V-700

AUTO CAL. PCB (V-900X)

RV601	Auto calibration test signal (1)	オート・キャリブレーション・テスト信号(1)
RV602	Auto calibration test signal (2)	オート・キャリブレーション・テスト信号(2)
RV603L/RV603R	Record level	録音レベル
RV604L/RV604R	Overall freq. response (NORMAL)	録再周波数特性(NORMAL)
RV605	Overall freq. response (CrO ₂)	録再周波数特性(CrO ₂)
RV606	Overall freq. response (METAL)	録再周波数特性(METAL)
RV607L/RV607R	Auto calibration	オート・キャリブレーション
L601L/L601R	Bias trap (recording)	録音系バイアス・トラップ
OSC601	Bias osc. frequency	バイアス発振周波数

dbx NR PCB (V-900X, V-800X)

DECODER (デコーダ)	RV701L/RV701R	VCA SYM	VCAシンメトリー
	RV702L/RV702R	Nominal level	基準レベル
	RV703L/RV703R	RMS SYM	RMSシンメトリー
ENCODER (エンコーダ)	RV704L/RV704R	VCA SYM	VCAシンメトリー
	RV705L/RV705R	Nominal level	基準レベル
	RV706L/RV706R	RMS SYM	RMSシンメトリー

PRECAUTIONS

1. Since this deck has an automatic tape selector, be sure to use test tapes that have tape position detecting holes.
2. Before performing adjustments and checks, clean and demagnetize the entire tape path.
3. Make sure the deck is properly set for the voltage in your locality.
4. In general, adjustments and checks are made in the order of L-ch then R-ch.

A note for alphanumeric codes with "L/R" suffixed in parenthesis; RV901(L/R), for example, means RV901L and RV901R, where L indicates left channel and R, right channel.

For the double test point designations with a slash between, such as TP.1/TP.2, they also indicate the test points of left and right channels respectively.

5. 0 dB is referenced to 0.775 V. If an AC voltmeter that references 0 dB to 1 V is used, appropriate compensation should be made.
6. The AC voltmeter used in the procedures must have an input impedance of 1M Ω or more.

MONITOR switch	SYNC (V-900X), or TAPE (V-800X/V-700)
NR SYSTEM switch	OUT
MPX FIL (ter) switch	off
RECORD control	Min.
OUTPUT control	Max.
BIAS FINE control (V-800X/V-700)	Center detent position
AUTO CALIBRATION switch (V-900X)	REFERENCE

Table 1

5-1 PLAYBACK PERFORMANCE

TEAC test tapes:

- MTT-150: For Dolby level calibration
 MTT-256: For playback frequency response check for NORMAL
 MTT-356: For playback frequency response check for CrO₂, METAL
 MTT-551: For S/N check with NORMAL

ITEM	SETTING	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
1. REC-PLAY head azimuth	Connection: Fig. 5-2 Settings: Table 1	MTT-150	Check	OUTPUT: Phase: within 45°	Refer to Fig. 5-4
		MTT-356 (12.5 kHz)	Azimuth screw of R.P head (Fig. 5-3)	OUTPUT: Max. output at L-& R-ch's (on VTVM)	
2. Playback output level	Same as above Connection: Fig. 5-5, but do not connect LINE IN (L/R).	MTT-150	RV601 (L/R)	TP.1/TP.2 (R/P AMPL. PCB): 580mV (-2.5 dB)	
	Connection: Fig. 5-1		Check	OUTPUT: 490 mV (-4 dB) \pm 1 dB (436 mV to 548 mV)	
3. PHONES output level	Same as above Connection: Fig. 5-6	MTT-150	Check	PHONES: 250 mV (-9.8 dB) \pm 3 dB (177 mV to 353 mV)	8 Ω load
4. Playback frequency response	Same as above Connection: Fig. 5-1	MTT-256	Check	OUTPUT: Standard: Fig. 5-9	
		MTT-356	Check	OUTPUT: Standard: Fig. 5-9	
5. Playback S/N ratio	Same as above	MTT-551	Check	OUTPUT: S/N: 47 dB min.	

5-2 MONITOR PERFORMANCE

- Mode: STOP
- MONITOR switch: SYNC (V-900X), or SOURCE (V-800X/V-700)
- OUTPUT control: Max.

ITEM	SETTING	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
6. Min. LINE input level	Connection: Fig. 5-5 RECORD cont.: Max.	LINE IN: 400Hz/86.9mV(-19dB)	Check	TP.5/TP.6: 580mV(-2.5dB)±3dB (411 mV to 0.820 V)	
	Connection: Fig. 5-1		Check	OUTPUT: 490mV(-4dB)±3dB (346mV to 690mV)	
7. Min. MIC input level	Same as above Connection: Fig. 5-5	MIC: 400Hz/346μV(-67dB)	Check	TP.5/TP.6: 580mV(-2.5dB)±3dB (411 mV to 0.820 V)	
	Connection: Fig. 5-1		Check	OUTPUT: 490mV(-4dB)±3dB (346mV to 690mV)	
8. Specified LINE input level	Same as above Connection: Fig. 5-5	LINE IN: 400 Hz/-9dB (275 mV)	RECORD cont.*	TP.5/TP.6 (R/P AMPL. PCB): 580mV (-2.5dB)	*After adjusting, do not disturb (Specified position)
	Connection: Fig. 5-1		Check	OUTPUT: 490mV(-4dB)±3dB (346mV to 690 mV)	
9. PEAK PROGRAM LEVEL METER	Same as above RECORD cont.: Specified position	LINE IN: 400Hz/-9dB (275 mV)	RV603 (L/R)	PEAK PROGRAM LEVEL METER: 0 dB lit	

5-3 RECORDING PERFORMANCE


- Mode: REC/PLAY (Unless otherwise specified)
- MONITOR switch: SYNC (V-900X), or TAPE (V-800X/V-700)
- RECORD control: Specified position (position set at item 8)
- OUTPUT control: Max.

TEAC test tapes:

MTT-5072: For METAL record test
MTT-5061: For CrO₂ record test
MTT-551: For NORMAL record test

ITEM	SETTING	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
10. Bias osc. frequency	Connection: Fig. 5-7 Mode: REC/PAUSE	—	OSC601	Refer to Fig. 5-7: Bias osc. freq.: 100kHz ± 3 kHz	
11. Bias trap (recording)	Same as above Connection: Fig. 5-8 Mode: REC/PAUSE	—	L601 (L/R)*1 L602 (L/R)*2	Refer to Fig. 5-8: Min. bias leakage	*1 V-900X *2 V-800X/V-700
12. Bias trap (playback)	Same as above Connection: Fig. 5-5 Mode: REC/PLAY (with empty cassette loaded)	—	L601 (L/R)	TP.1/TP.2 (R/P AMPL. PCB): Min. bias leakage	
13. Record level (V-900X)	After adjusting overall frequency response (item 14), re-do this item's checks and adjustments.				
	Same as above Connection: Fig. 5-1 Mode: STOP	LINE IN: 400 Hz/-34 dB (15.5 mV)	Check	OUTPUT: -29dB (27.5 mV)*	* Give actually-measured level as ref. level (1)
	Mode: REC/PLAY Tape: MTT-551		RV603 (L/R)	OUTPUT: Difference against ref. level (1): 0 dB	
	Tape: MTT-5072		Check	OUTPUT: Difference against ref. level (1): ± 1 dB	
	Tape: MTT-5061		Check		

ITEM	SETTING	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
14. Overall frequency response (V-900X)	Adjust in the order of (1) (2) (3) Since record level varies after making this item instruction adjustments, re-do checks and adjustments shown in items 13 and 14				
	(1) Same as above Tape: MTT-551	LINE IN: 400 Hz & 16 kHz alternately/-34 dB (15.5 mV)	RV604 (L/R)	OUTPUT: 16kHz output against that of 400Hz: ± 1 dB	Standard: Fig. 5-10
	(2) Tape: MTT-5072		RV606 (com- mon to L,R)	OUTPUT: 16kHz output against that of 400 Hz: ± 2 dB	
	(3) Tape: MTT-5061		RV605 (com- mon to L,R)		
15. Record level (V-800X/V-700)	After adjusting overall frequency response (item 16), re-do this item's checks and adjustments.				
	Same as above Connection: Fig. 5-1 MONITOR sw: SOURCE	LINE IN: 400Hz/-34 dB (15.5 mV)	Check	OUTPUT: -29 dB (27.5 mV) *	* Give actually- measured level as ref. level (2)
	MONITOR sw: TAPE Mode: REC/PLAY Tape: MTT-5072		RV602 (L/R)	OUTPUT: Difference against ref. level (2): 0 dB	
	Tape: MTT-5061		Check	OUTPUT: Difference against ref. level (2): ± 1 dB	
	Tape: MTT-551		Check		
16. Overall frequency response (V-800X/V-700)	Adjust in the order of (1) (2) (3) Since record level varies after making this item instruction adjustment, re-do checks and adjustments shown in items 15 and 16.				
	(1) Same as above Tape: MTT-5072	LINE IN: 400Hz & 16 kHz alternately/-34 dB (15.5 mV)	RV604 (L/R)	OUTPUT: 16 kHz output against that of 400Hz: ± 1 dB	Standard: Fig. 5-10
	(2) Tape: MTT-5061		R655 (RV605) (common to L, R)	OUTPUT: 16 kHz output against that of 400Hz: ± 2 dB	
	(3) Tape: MTT-551		R658 (RV606) (common to L, R)		
17. Total harmonic distortion	MTT-551 MTT-5061 MTT-5072	LINE IN: 400 Hz/-9 dB (275 mV)	Check	OUTPUT: 2.5% or less for all tape positions	
18. Signal-to-noise ratio	"	LINE IN: 400 Hz/-9 dB (275 mV) ↓ no signal	Check	OUTPUT: NORMAL 45 dB min. CrO ₂ 46 dB min. METAL 46 dB min. When NR SYSTEM is set to dbx, 65 dB min. for all tape positions	
19. Erase efficiency	● Connection is same as in Fig. 5-1, but engage 1-kHz filter. ● Record a 1-kHz signal. Rewind tape to midpoint of recorded portion. Record a "no signal" portion. Find the difference between the 1-kHz portion and the "no signal" portion.				
	MTT-551 MTT-5061 MTT-5072	LINE IN: 1 kHz/+1 dB (0.869 V) ↓ no signal	Check	OUTPUT: 65 dB min. ratio	
20. Channel separation	● Connection: Fig. 5-1, but do not connect LINE IN (R), and engage 1-kHz filter. ● Set the deck to record mode. Find the difference between the 1-kHz recorded portion (L-ch) and the "no-signal" portion (R-ch). Then change the connection and check reverse operation.				
	MTT-551	LINE IN: L-ch 1 kHz/-9 dB (275 mV) R-ch No signal	Check	OUTPUT: 30 dB min. ratio	
21. Adjacent track crosstalk	● Connection: Fig. 5-1, but do not connect LINE IN (L) and OUTPUT (L). ● Record a 125-Hz signal on R-ch and note output level. Invert tape and play R-ch track. Check leakage level against the output reference of previously recorded portion.				
	MTT-551	LINE IN: L-ch No signal R-ch 125 Hz/-9 dB (275 mV)	Check	OUTPUT: 40 dB min. ratio	

ITEM	SETTING	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
22. REC MUTE function	<ul style="list-style-type: none"> • Connection: Fig. 5-1, but engage 1-kHz filter. • Record a 1-kHz signal. Push REC MUTE button for several seconds. (At this time, make sure LED on the button lights). Rewind and play the tape. Find the difference between the 1-kHz portion and the "no-signal" portion. 				
	MTT-551 MTT-5061 MTT-5072	LINE IN: 1 kHz/+1 dB (0.869 V) ↓ no signal	Check	OUTPUT: 65 dB min. ratio	
23. Dolby NR effect (B-type)	<ul style="list-style-type: none"> • Record a 1-kHz signal with NR SYSTEM switch OUT. Play this portion with NR SYSTEM switch set first to OUT, then to <input type="checkbox"/> B. Obtain the difference in output level between OUT and <input type="checkbox"/> B positions. Repeat the above process using a 10-kHz signal. 				
	MTT-5061	LINE IN: 1 kHz/-29 dB (27.5 mV)	Check	OUTPUT: Variation 3 dB ~ 8 dB	
		LINE IN: 10 kHz/-39 dB (8.69 mV)	Check	OUTPUT: Variation 8 dB ~ 10 dB	
24. Dolby NR effect (C-type)	<ul style="list-style-type: none"> • Repeat the same procedure as above, only see that the NR SYSTEM switch is set to <input type="checkbox"/> C. 				
	MTT-5061	LINE IN: 1 kHz/-39 dB (8.69 mV)	Check	OUTPUT: Variation 16 dB ~ 20 dB	
		LINE IN: 10 kHz/-49 dB (2.75 mV)	Check	OUTPUT: Variation 16 dB ~ 20 dB	
25. Auto calibration test signal adjustment (V-900X)	Same as above Connection: Fig. 5-13 Mode: STOP	—	RV601	U602-1 Adjust to get 400Hz oscillation waveform shown in Fig. 5-13	
	Connection: Fig. 5-14	—	RV602	U606-1 400Hz level: 5 mV	
26. Auto calibration adjustment (V-900X)	Connection: Fig. 5-1 Mode: STOP Tape: MTT-551 RV607(L/R): Set temporarily like right figure			<ul style="list-style-type: none"> • Temporarily setting of RV607 (L/R) 	
	Press AUTO CAL switch ↓ Deck does the auto calibration process ([AUTO] indicator blinks). ↓ After completing auto calibration ([AUTO] indicator remains lit), deck enters the REC/PAUSE mode.			NOTE: If temporary setting is not done, deck may invite error calibration. In this case, after completing auto calibration, deck enters the STOP mode and [REF] indicator lights.	
	Mode: REC/PAUSE (after auto calibration) ↓ REC/PLAY	—	RV607 (L/R)	OUTPUT: Adjust for output in REC/PLAY mode ("off-the-tape" signal monitored) to become almost the same level* as one in REC/PAUSE mode (the source signal monitored). *-29 dB ± 0.5 dB (25.9 mV to 29.1 mV)	

5-4 dbx NR PCB ADJUSTMENT (V-900X/V-800X)

Note:

1. Since the dbx NR PCB assembly has been precisely adjusted at the factory, this adjustment is not usually needed unless any of the trimmers have been changed, or any components on the PCB have sustained damage.
2. As a necessary procedure for the ENCODING ADJUSTMENT only, disconnect either end of each jumper of J45 and J46 on

the R/P AMPL. PCB. (For their location see Fig. 5-21.)

3. Make the following initial settings.

- POWER switch: ON
- NR SYSTEM switch: OUT
- All other front panel switches and controls have no effect on this adjustment.

5-4-1 ENCODING ADJUSTMENT

ITEM	SETTING	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
1. RMS SYM	Fig. 5-17	TP.7/TP.8 100 Hz/-8.2 dB (300 mV)	RV706(L/R)	TP.11/TP.12 Clean 200 Hz sine-wave	Refer to Figs. 5-15 and 5-16.
2. Encoding level	Fig. 5-17	TP.7/TP.8 400 Hz/-8.2 dB*1 (300 mV)	RV705(L/R)	TP.9/TP.10 -8.2 dB*2 (300 mV)	*1 Reference 1 *2 Reference 2
3. VCA SYM	Fig. 5-18	U703L-3/U703R-3 staircase wave	RV704(L/R)	TP.9/TP.10 A relatively straight horizontal line on the 'scope face'. (Level variation: 5 mV or less)	
4. Encoding single frequency response	Fig. 5-17	TP.7/TP.8 100 Hz/-8.2 dB (300 mV)	Check	TP.9/TP.10 +0.2 dB \pm 0.5 dB against Ref. 2 (290 mV ~ 325 mV)	
		TP.7/TP.8 10 kHz/-8.2 dB (300 mV)	Check	TP.9/TP.10 -3.3 dB \pm 0.5 dB against Ref. 2 (194 mV ~ 217 mV)	
5. Encoding operation level	Fig. 5-17	TP.7/TP.8 400 Hz/-68.2 dB*3 (300 μ V)	Check	TP.9/TP.10 -30 dB \pm 0.5 dB against Ref. 2 (8.96 mV ~ 10.1 mV)	*3 -60 dB against Ref. 1
		TP.7/TP.8 400 Hz/+11.8 dB*4 (3.00 V)	Check	TP.9/TP.10 +10 dB \pm 0.5 dB against Ref. 2 (0.896 V ~ 1.01 V) Distortion: 0.3% or less	*4 +20 dB against Ref. 1

5-4-2 DECODING ADJUSTMENT

ITEM	SETTING	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
6. RMS SYM	Fig. 5-19	TP.1/TP.2 100 Hz/-8.2 dB (300 mV)	RV703 (L/R)	TP.5/TP.6 Clean 200 Hz sine-wave	Refer to Figs. 5-15 and 5-16.
7. Decoding level	Fig. 5-19	TP.1/TP.2 400 Hz/-8.2 dB*1 (300 mV)	RV702 (L/R)	TP.3/TP.4 -8.2 dB*2 (300 mV)	*1 Reference 1 *2 Reference 2
8. VCA SYM	Fig. 5-20	U701L-2/U701R-2 staircase wave	RV701 (L/R)	TP.3/TP.4 A relatively straight horizontal line on the 'scope face'. (Level variation: 5 mV or less)	
9. Decoding single frequency response	Fig. 5-19	TP.1/TP.2 100 Hz/-8.2 dB (300 mV)	Check	TP.3/TP.4 -0.2 dB \pm 1 dB against Ref. 2 (261 mV ~ 329 mV)	
		TP.1/TP.2 10 kHz/-8.2 dB (300 mV)	Check	TP.3/TP.4 +5.5 dB \pm 1 dB against Ref. 2 (504 mV ~ 634 mV)	
10. Decoding operation level	Fig. 5-19	TP.1/TP.2 400 Hz/-38.2 dB*3 (9.49 mV)	Check	TP.3/TP.4 -60 dB \pm 1 dB against Ref. 2 (267 μ V ~ 337 μ V)	*3 -30 dB against Ref. 1
		TP.1/TP.2 400 Hz/+1.8 dB*4 (0.949 V)	Check	TP.3/TP.4 +20 dB \pm 1 dB against Ref. 2 (2.67 V ~ 3.37 V)	*4 +10 dB against Ref. 2

準備

1. 本機はテープ・セレクト自動検出機構になっていますので、テスト・テープは必ずテープ・ポジション検出孔のあるものを使用して下さい。
2. アンプ部の調整の前に、消去ヘッド、録・再ヘッド、テープ走行部分それぞれを充分消磁し、クリーナー液で清掃して下さい。
3. 特に指示の有る場合を除き、Lch, Rch の順に調整を行なって下さい。
4. レベル計は入力インピーダンス $1M\Omega$ 以上のものを使用して下さい。
5. $0dB=0.775V$
6. 調整に際して各スイッチを次のように設定して下さい。

MONITORスイッチ	SYNC(V-900X), 又は TAPE(V-800X/V-700)
NR SYSTEMスイッチ	OUT
MPX FILスイッチ	OFF
RECORDつまみ	最小
OUTPUTつまみ	最大
BIAS FINEつまみ (V-800X/V-700)	中央(クリック位置)
AUTO CALIBRATION スイッチ(V-900X)	REFERENCE

表 1

5-1 再生系

調整項目	準備・設定	入力信号	調整箇所	測定箇所・調整値	備考
1. 録・再ヘッド・アジマス調整	接続: Fig.5-2 設定: 表1	MTT-150	チェック	OUTPUT: 位相: 45° 以内	Fig.5-4参照
		MTT-356 (12.5kHz区分)	録・再ヘッドの アジマス調整ネジ (Fig.5-3)	OUTPUT: L, R 共最大出力	
2. 再生出力レベル	同 上 接続: Fig.5-5 (但し, LINE INへは接続不要)	MTT-150	RV601(L/R)	TP.1/TP.2(R/P AMPL. PCB): 580mV($-2.5dB$)	
	接続: Fig.5-1		チェック	OUTPUT: 490mV($-4dB$) $\pm 1dB$	
3. PHONES出力レベル・チェック	同 上 接続: Fig.5-6	MTT-150	チェック	PHONES: 250mV($-9.8dB$) $\pm 3dB$	8 Ω 負荷
4. 再生周波数特性	同 上 接続: Fig.5-1	MTT-256	チェック	OUTPUT: 規格: Fig.5-9	
		MTT-356	チェック	OUTPUT: 規格: Fig.5-9	
5. 再生S/N	同 上	MTT-551	チェック	OUTPUT: S/N: 47dB以上	

5-2 モニタ系

- ・モード: STOP
- ・MONITORスイッチ: SYNC(V-900X), 又はSOURCE(V-800X/V-700)
- ・OUTPUTつまみ: 最大

調整項目	準備・設定	入力信号	調整箇所	測定箇所・調整値	備考
6. LINE最小入力レベル	接続: Fig.5-5 RECORDつまみ: 最大	LINE IN: 400Hz/86.9mV($-19dB$)	チェック	TP.5/TP.6: 580mV($-2.5dB$) $\pm 3dB$	
	接続: Fig.5-1		チェック	OUTPUT: 490mV($-4dB$) $\pm 3dB$	
7. MIC最小入力レベル	同 上 接続: Fig.5-5	MIC: 400Hz/346 μ V($-67dB$)	チェック	TP.5/TP.6: 580mV($-2.5dB$) $\pm 3dB$	
	接続: Fig.5-1		チェック	OUTPUT: 490mV($-4dB$) $\pm 3dB$	
8. LINE規定入力レベル	同 上 接続: Fig.5-5	LINE IN: 400Hz/ $-9dB$	RECORDつまみ*	TP.5/TP.6(R/P AMPL. PCB): 580mV($-2.5dB$)	*調整後、動かさないこと。 (規定位置)
	接続: Fig.5-1		チェック	OUTPUT: 490mV($-4dB$) $\pm 3dB$	
9. メータ・レベル・セット	同 上 RECORDつまみ: 規定位置	LINE IN: 400Hz/ $-9dB$	RV603(L/R)	ピーク・プログラム・レベル・メータ: 0dB点灯	

5-3 録音系

- ・モード：REC/PLAY(特に指示してある場合を除く)
- ・MONITORスイッチ：SYNC(V-900X), 又はTAPE(V-800X/V-700)
- ・RECORDつまみ：規定位置(8項での設定位置)
- ・OUTPUTつまみ：最大
- ・信号入力個所：LINE IN(特に指示してある場合を除く)
- ・測定個所：OUTPUT(特に指示してある場合を除く)

調整項目	準備・設定	入力信号	調整個所	測定箇所・調整値	備考
10. バイアス発振周波数調整	接続： Fig.5-7 モード： REC/PAUSE	—	OSC601	Fig.5-7参照： バイアス発振周波数： 100kHz±3kHz	
11. 録音系バイアス・トラップ調整	同上 接続： Fig.5-8 モード： REC/PAUSE	—	L601(L/R)*1 L602(L/R)*2	Fig.5-8参照 バイアス漏れ最小	*1 V-900X *2 V-800X/ V-700
12. 再生系バイアス・トラップ調整	同上 接続： Fig.5-5 モード： REC/PLAY (空テープ装てん)	—	L601(L/R)	TP.1/TP.2: (R/P AMPL. PCB) バイアス漏れ最小	
13. 録音レベル・セット (V-900X)	本確認・調整は録再周波数特性調整(14項)後、再度行うこと。				
	同上 接続： Fig.5-1 モード： STOP	LINE IN 400Hz/−34dB	チェック	OUTPUT： −29dB*	*実測値を基準 レベル(1)とする。
	モード： REC/PLAY テープ： MTT-551		RV603(L/R)	OUTPUT： 基準レベル(1)との差： 0dB	
	テープ： MTT-5072		チェック	OUTPUT： 基準レベル(1)との差： ±1dB	
	テープ： MTT-5061		チェック		
14. 録再周波数特性 (V-900X)	下記の調整順序(1)〜(3)を守ること。 本調整後、録音レベルが変わるので、再度13項及び14項の確認・調整を行うこと。				
	(1) 同上 テープ： MTT-551	LINE IN： 400Hz/−34dB 16kHz/−34dB 繰返し	RV604(L/R)	OUTPUT： 16kHz出力が400Hz出力 に対して： ±1dB	規格： Fig. 5-10
	(2) テープ： MTT-5072		RV606(L, R共通)	OUTPUT： 16kHz出力が400Hz出力 に対して ±2dB	規格： Fig. 5-10
	(3) テープ： MTT-5061		RV605(L, R共通)		規格： Fig. 5-10
15. 録音レベル・セット (V-800X/V-700)	本確認・調整は録再周波数特性調整(16項)後、再度行うこと。				
	同上 接続： Fig.5-1 MONITORスイッチ： SOURCE	LINE IN： 400Hz/−34dB	チェック	OUTPUT： −29dB*	*実測値を基準 レベル(2)とする。
	MONITORスイッチ： TAPE モード： REC/PLAY テープ： MTT-5072		RV602(L/R)	OUTPUT： 基準レベル(2)との差： 0dB	
	テープ： MTT-5061		チェック	OUTPUT： 基準レベル(2)との差： ±1dB	
	テープ： MTT-551		チェック		
16. 録再周波数特性 (V-800X/V-700)	下記の調整順序(1)〜(3)を守ること。 本調整後、録音レベルが変わるので、再度15項及び16項の確認・調整を行うこと。				
	(1) 同上 テープ： MTT-5072	LINE IN： 400Hz/−34dB 16kHz/−34dB 繰返し	RV604(L/R)	OUTPUT： 16kHz出力が400Hz出力 に対して： ±1dB	規格： Fig. 5-10
	(2) テープ： MTT-5061		R655(RV605) (L, R共通)	OUTPUT： 16kHz出力が400Hz出力 に対して	規格： Fig. 5-10
	(3) テープ： MTT-551		R658(RV606) (L, R共通)	±2dB	規格： Fig. 5-10

調整項目	準備・設定	入力信号	調整箇所	測定箇所・調整値	備考
17. 総合歪率	MTT-551	400Hz/−9dB	チェック	NORMAL 2.5%以下	
	CrO ₂ 2.5%以下				
	METAL 2.5%以下				
18. 総合S/N	MTT-551	400Hz/−9dB	チェック	NORMAL 45dB以上	NR SYSTEM : dbxの時, 全テープ・ポジションで65dB以上.
	CrO ₂ 46dB以上				
	METAL 46dB以上				
19. 消去率チェック	MTT-551	1kHz/+1dB	チェック	録音部分を再生した時のレベルを基準レベルとし, 録音部分を消去した時の出力レベルとの差 65dB以上	1kHz B.P.F.使用
	MTT-5061				
	MTT-5072				
チャンネル間 20. セパレーション・チェック	MTT-551	Lch 1kHz/−9dB Rch 無信号	チェック	Lch再生レベルを基準とし, Rchとの出力レベルの差 30dB以上	1kHz B.P.F.使用
			LchとRchの信号を入れかえた場合についてもチェックすること		
トラック間 21. クロストーク・チェック	同上	Lch 無信号 Rch 125Hz/−9dB	チェック	録音されたトラックを再生したときの出力レベルを基準レベルとし, テープを反転して再生したときのRch出力レベルとの差 40dB以上.	
22. REC MUTE効果 チェック	MTT-551	1kHz/+1dB	チェック	1kHzを録音し, 途中でREC MUTEを押して無信号録音部分を作る. このテープを再生したときの信号部分と無信号部分との出力レベル差 65dB以上.(1kHz B.P.F.使用)	
	MTT-5061				
	MTT-5072				
ドルビーNR効果 23. チェック (B-TYPE)	MTT-5061	1kHz/−29dB	チェック	NR SYSTEMスイッチをOUT位置にして信号を録音する. 次にこれを再生し, スwitchをOUT↔□Bと切替えた時の出力レベル変化 3dB~8dB	8dB~10dB
		10kHz/−39dB	チェック	測定法: 上と同じ	
ドルビーNR効果 24. チェック (C-TYPE)	MTT-5061	1kHz/−39dB	チェック	NR SYSTEMスイッチをOUT位置にして信号を録音する. 次にこれを再生し, スwitchをOUT↔□Cと切替えた時の出力レベル変化 16dB~20dB	16dB~20dB
		10kHz/−49dB	チェック	測定法: 上と同じ	
オート・キャリブレーション・テスト信号調整 (V-900X)	接続: Fig.5-13 モード: STOP	—	RV601	U602-1 : 400Hz発振波形をFig.5-13に示す形になるように調整.	
	接続: Fig.5-14	—	RV602	U606-1 : 400Hzレベル: 5mV	
26. オート・キャリブレーション調整 (V-900X)	接続: Fig.5-1 モード: STOP テープ: MTT-551 RV607(L/R): 仮セット(右図)			・RV607(L/R)の仮セット 	
	AUTO CALスイッチを押す ↓ デッキはオート・キャリブレーション動作を行なう ([AUTO] インジケータ点滅) ↓ 動作完了後 ([AUTO] インジケータ点灯), デッキは REC/PAUSEモードになる.			注意: 仮セットされていないとエラー処理になる場合がある. その場合はオート・キャリブレーション動作終了後, デッキはストップ・モードになり [REF] インジケータが点灯する.	
	モード: REC/PAUSE(オート・キャリブレーション後の) ↓ REC/PLAY	—	RV607(L/R)	OUTPUT : REC/PAUSE時(ソース・モニター状態)の出力に対してREC/PLAY時(テープ・モニター状態)の出力が同レベル* になるように調整する. * −29dB ± 0.5dB	

5-4 DBX基板単体調整 (V-900X/V-800X)

注1. DBXユニットは通常調整の必要はありません。もし調整する場合は以下の要領で行なって下さい。

注2. R/P AMPL. PCBのジャンパ線J45, J46(Fig. 5-21参照)を外す(エンコーダのみ)。

注3. NR SYSTEMスイッチをOUTにセットして下さい。

注4. 調整箇所はFig. 5-23を参照して下さい。

5-4-1 エンコーダ調整

調 整 項 目	準 備 ・ 設 定	入 力 信 号	調 整 個 所	測 定 個 所 ・ 調 整 値	備 考
1. RMS SYM調整	接 続 Fig. 5-17	TP.7/TP.8 100Hz/300mV	RV706(L/R)	TP.11/TP.12 出力波形が 200Hzの正弦波になるよう調 整	Figs. 5-15, 5-16 参照
2. 基準レベル調整	同 上	TP.7/TP.8 400Hz/300mV	RV705(L/R)	TP.9/TP.10 300mV	
3. VCA SYM調整	接 続 Fig. 5-18	U703L-3/U703R-3 階段波	RV704(L/R)	TP.9/TP.10 モニタ波形がほぼ一直線(5mV 以下)になるよう調整	
4. 周波数特性チェック	接 続 Fig. 5.17	TP.7/TP.8 100Hz/300mV	チェック	TP.9/TP.10 290mV~325mV	
		同 上 10kHz/300mV	チェック	同 上 194mV~217mV	
5. エンコード効果 チェック	同 上	同 上 400Hz/300μV	チェック	同 上 8.96mV~10.1mV	
		同 上 400Hz/3.0V	チェック	同 上 0.896mV~1.01V	歪率0.3%以下


5-4-2 デコーダ調整

調 整 項 目	準 備 ・ 設 定	入 力 信 号	調 整 個 所	測 定 個 所 ・ 調 整 値	備 考
6. RMS SYM調整	接 続 Fig. 5-19	TP.1/TP.2 100Hz/300mV	RV703(L/R)	TP.5/TP.6 出力波形が 200Hzの正弦波になるよう調 整	Figs.5-15, 5-16 参照
7. 基準レベル調整	同 上	TP.1/TP.2 400Hz/300mV	RV702(L/R)	TP.3/TP.4 300mV	
8. VCA SYM調整	接 続 Fig. 5-20	U701L-2/U701R-2 階段波	RV701(L/R)	TP.3/TP.4 モニタ波形がほぼ一直線(5mV 以下)になるよう調整	
9. 周波数特性チェック	接 続 Fig. 5-19	TP.1/TP.2 100Hz/300mV	チェック	TP.3/TP.4 261mV~329mV	
		同 上 10kHz/300mV	チェック	同 上 504mV~634mV	
10. デコード効果チェック	同 上	同 上 400Hz/9.49mV	チェック	同 上 267μV~ 337μV	
		同 上 400Hz/0.949V	チェック	同 上 2.67V~3.37V	

6 EXPLODED VIEWS AND PARTS LIST

分解図とパーツ・リスト

EXPLODED VIEW-1

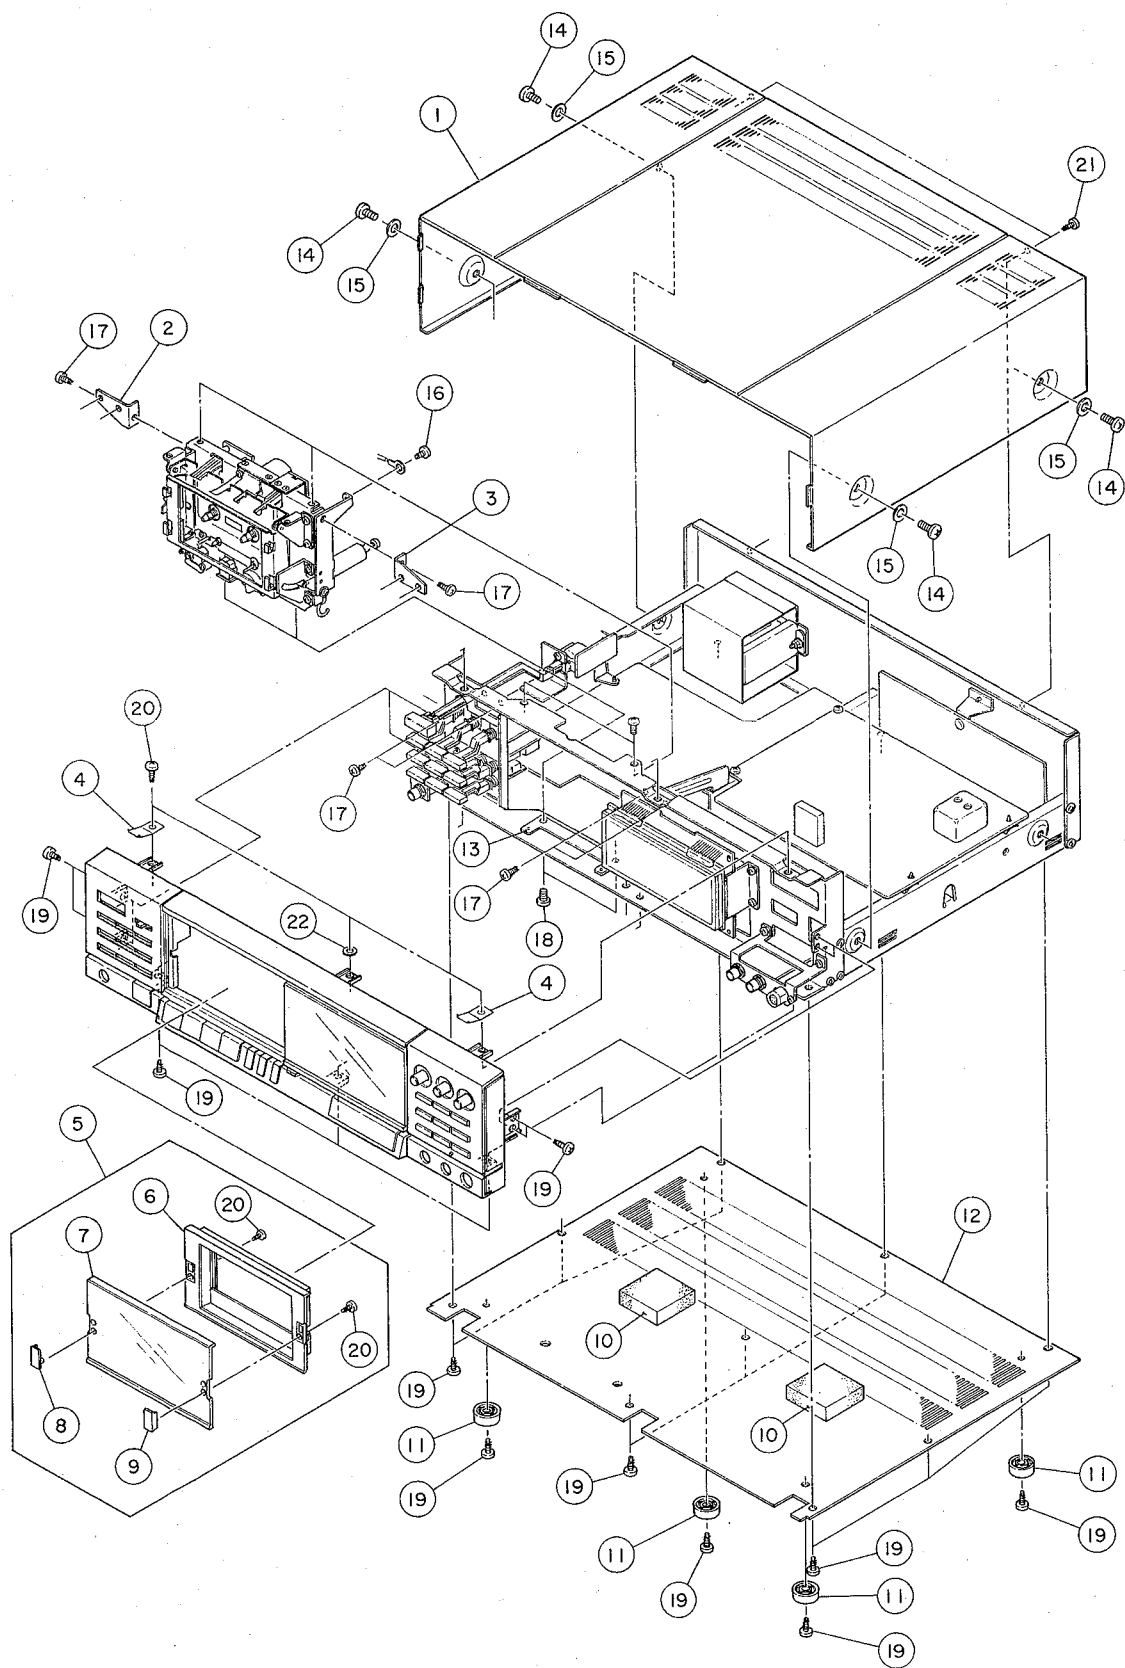

V-900X/V-800X/V-700

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
1 - 1	*5760549700	Cover, Top (V-900X, V-800X)	
	5760549600	Cover, Top (V-700)	
1 - 2	*5760551000	Bracket, Mechanism; L	
1 - 3	*5760551100	Bracket, Mechanism; R	
1 - 4	*5760552300	Plate, Contact	
1 - 5	5760573500	Cover Assy, Cassette (V-900X)	
	5760566900	Cover Assy, Cassette (V-800X)	
	5760575200	Cover Assy, Cassette (V-700)	
1 - 6	5760546800	Frame, Cassette	
1 - 7	5760546700	Window, Cassette; B (V-900X, V-800X)	
	5760546600	Window, Cassette; A (V-700)	
1 - 8	5760546200	Crip, Window; L	
1 - 9	5760546300	Crip, Window; R	
1 -10	*5760556600	Cushion, PCB	
1 -11	*5760551300	Foot	
1 -12	*5760550600	Cover, Bottom	
1 -13	5760576100	Spacer, Mechanism Chassis	
1 -14	5780025010	Screw, Binding Head; M5 x 10 (BLK) (V-900X, V-800X)	
	5780015010	Screw, Binding Head; M5 x 10 (Ni) (V-700)	
1 -15	5760577800	Washer, Flat (V-900X, V-800X)	
	5785015000	Washer, Flat; $\phi 5.5 \times \phi 12 \times 0.8t$ (V-700)	
1 -16	5780102606	Screw, Pan Head; M2.6 x 6	
1 -17	5783003006	Screw, Pan Head Taptite; M3 x 6	
1 -18	5783003008	Screw, Pan Head Taptite; M3 x 8	
1 -19	5781123008	Screw, Binding Head Tapping; M3 x 8	
1 -20	5781062006	Screw, Pan Head Tapping; M2 x 6 (BLK)	
1 -21	5781163008	Screw, Binding Head Taping; M3 x 8 (BLK) (V-900X, V-800X)	
	5781173008	Screw, Binding Head Tapping; M3 x 8 (Ni) (V-700)	
1 -22	5785003000	Washer, Flat; $\phi 3.3 \times \phi 6 \times 0.5t$	


Parts marked with * require longer delivery time.

INCLUDED ACCESSORIES

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
	5700053600	V-900X Owner's Manual [J]	
	5700053700	V-900X Owner's Manual [All except J]	
	5700053800	V-800X Owner's Manual [J]	
	5700053900	V-800X/V-700 Owner's Manual [All except J]	
	5700054000	V-700 Owner's Manual [J]	
	5760570500	Cord Assy, In-output	

[US]: U.S.A. [C]: CANADA [GE]: GENERAL EXPORT [E]: EUROPE [UK]: U.K.
[A]: AUSTRALIA [J]: JAPAN

EXPLODED VIEW-2

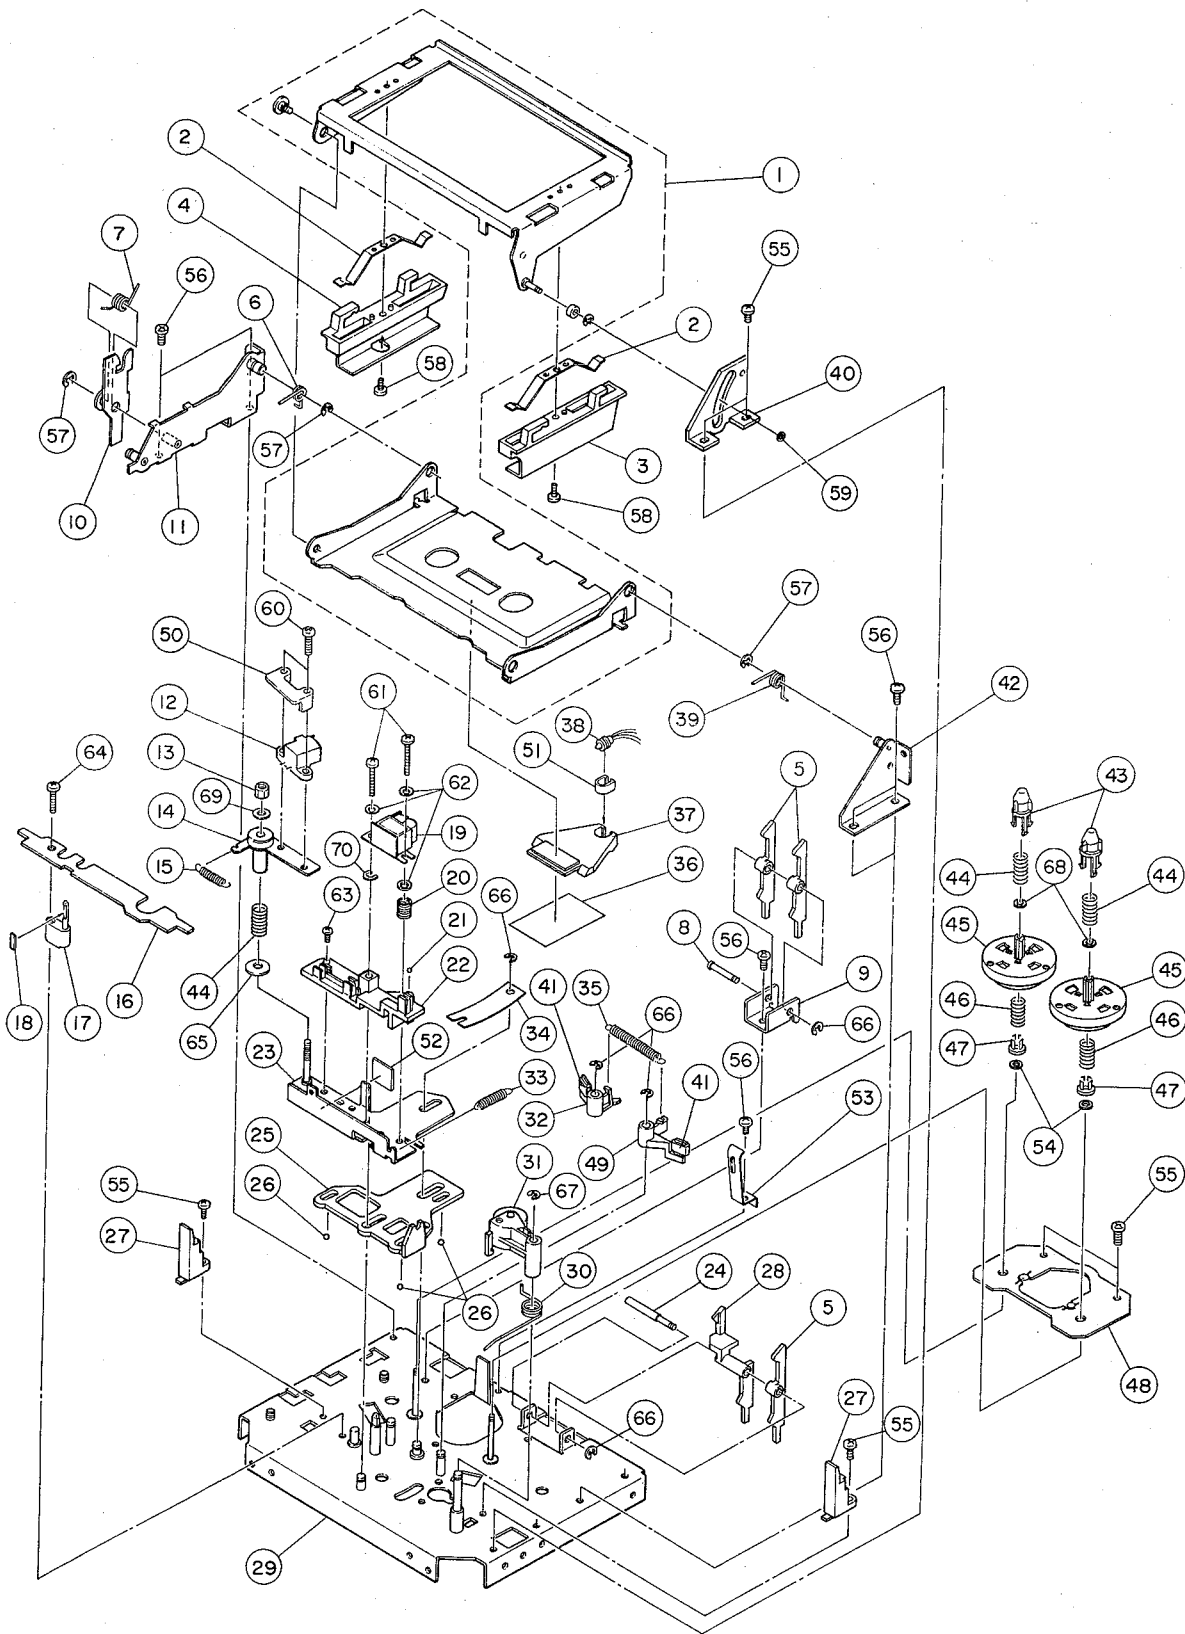


V-900X/V-800X/V-700

REF. NO.	PARTS NO.	DESCRIPTION	COMMON MODELS	REMARKS
2 - 1	*5800531100	Holder Assy, Cassette	Z-5000 V-9 V-9	
2 - 2	5800455200	Spring, Cassette Pressure		
2 - 3	5800122100	Holder, R		
2 - 4	5800109600	Holder, L		
2 - 5	*5800530800	Arm, Sensor; A		
2 - 6	5800115500	Spring, Holder; L	V-9 Z-5000	
2 - 7	5800448200	Spring, Lock		
2 - 8	*5800529600	Shaft, Arm; L		
2 - 9	*5800530700	Bracket, Sensor Arm		
2 - 10	*5800530500	Arm, Lock; B		
2 - 11	*5800441400	Bracket Assy, Holder; L	Z-5000 C-3	
2 - 12	5569613000	Head, Erase		
2 - 13	*5781953000	Nut, M3		
2 - 14	*5800234601	Bracket Assy, Erase Head		
2 - 15	5800519001	Spring, Erase Head		
2 - 16	*5800237801	Cover, Head; B	V-1RX Z-5000	
2 - 17	5800235100	Holder, Pad		
2 - 18	5800235201	Pad, Head		
2 - 19	5378902700	Head, R/P (V-900X)		
	5378901300	Head, R/P (V-800X, V-700)		
2 - 20	5800114700	Spring, Head	V-9 A-450 V-80 V-80	
2 - 21	5540055000	Ball, Steel; $\phi 2$		
2 - 22	*5800238302	Holder, Head; B		
2 - 23	*5800442400	Plate Sub-assy, Head Base		
2 - 24	*5800529700	Shaft, Sensor Arm; R		
2 - 25	*5800122802	Plate, Slider	V-9 A-450 V-9	
2 - 26	5540056000	Ball, Steel; $\phi 3$		
2 - 27	*5800117400	Guide, Cassette		
2 - 28	*5800530900	Arm, Sensor; B		
2 - 29	*5800531000	Chassis Assy, Mechanism		
2 - 30	5800461802	Spring, Pinch Roller Arm (V-900X)	Z-5000	
	5800556501	Spring, Pinch Roller Arm; B (V-800X, V-700)		
2 - 31	5800239002	Arm Assy, Pinch Roller; B		
2 - 32	*5800439601	Arm, Brake; L		
2 - 33	5800455100	Spring, Base Arm		
2 - 34	*5800235700	Spring, Head Base Pressure; B	V-1RX Z-5000 Z-5000 Z-5000	
2 - 35	5800445800	Spring, Brake		
2 - 36	*5800452700	Paper, Reflector		
2 - 37	*5800441801	Lens, Cassette		
2 - 38	5310006500	Lamp, DC12V		
2 - 39	5800115600	Spring, Holder; R	V-9 Z-5000 Z-5000 Z-5000 V-70C	
2 - 40	*5800442201	Bracket, Holder Guide; B		
2 - 41	*5800439800	Shoe, Brake		
2 - 42	*5800441300	Bracket Assy, Holder; R		
2 - 43	5800236501	Ring, Drive		
2 - 44	5800231300	Spring, Reel	V-70C	
2 - 45	5800530200	Table Assy, Reel		
2 - 46	5800481901	Spring, Back Tension		
2 - 47	5800231500	Holder, Spring		
2 - 48	*5200107700	PCB Assy, SENSOR		
	5228008300	Photo Transistor, PH-102K	Z-5000 V-70C Z-5000	
2 - 49	*5800439701	Arm, Brake; R	Z-5000 Z-5000 Z-6000 Z-5000 V-9	
2 - 50	*5800468400	Cover, Erase Head		
2 - 51	*5800423302	Filter		
2 - 52	*5800520000	Stopper, Erase Head; B		
2 - 53	*5800115002	Spring, Cassette Pressure		
2 - 54	5800539800	Washer, Teflon; $\phi 1.7 \times \phi 4 \times t0.3$		
2 - 55	5783032605	Screw, Binding Head Taptite; M2.6 x 5		
2 - 56	5783002605	Screw, Pan Head Taptite; M2.6 x 5		
2 - 57	5786003000	E-Ring, E-3		
2 - 58	5780022004	Screw, Binding Head; M2 x 4 (BLK Ni)		
2 - 59	5785331500	Washer, Poly.; $\phi 1.5 \times \phi 4 \times 0.5t$ (Cut)		
2 - 60	5780002014	Screw, Binding Head; M2 x 14		
2 - 61	5780002016	Screw, Binding Head; M2 x 16		
2 - 62	5785012000	Washer, Flat; $\phi 2$		
2 - 63	5780002005	Screw, Binding Head; M2 x 5		
2 - 64	5780122614	Screw, Pan Head Taptite; M2.6 x 14 (BLK Ni)		

(Continued on page 33)

Parts marked with * require longer delivery time.

EXPLODED VIEW-3 (V-900X)

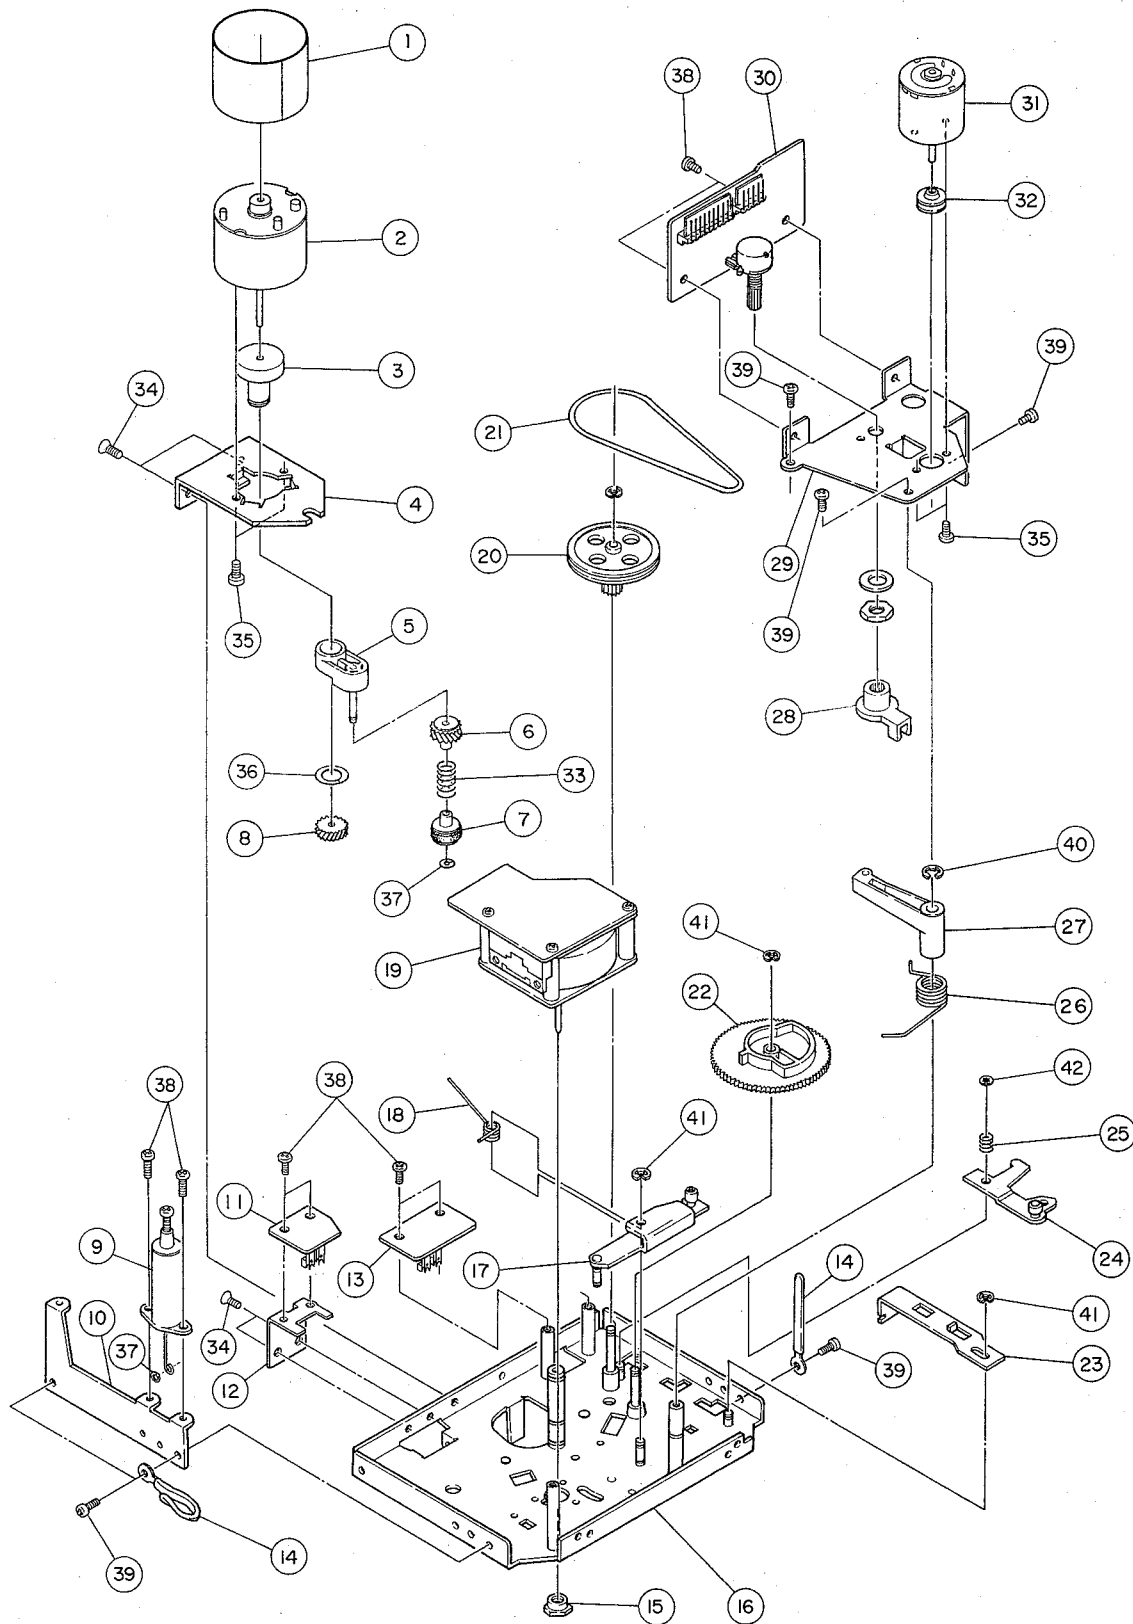

V-900X/V-800X/V-700

REF. NO.	PARTS NO.	DESCRIPTION	COMMON MODELS	REMARKS
3 - 1	*5800235900	Plate, Shield	V-1RX	
3 - 2	5370002502	Motor, Reel; DC	V-70C	
3 - 3	5800461700	Shaft, Pulley Arm	Z-5000	
3 - 4	*5800430001	Plate, Reel Motor	V-66C	
3 - 5	5800461500	Arm Assy, Pulley	V-70C	
3 - 6	5800461600	Pulley Assy, Gear; B	V-70C	
3 - 7	5800430302	Pulley Assy	V-70C	
3 - 8	5800232500	Pulley, Gear; A	V-70C	
3 - 9	5800131802	Damper Assy	V-9	
3 -10	*5800441001	Bracket, Damper	Z-5000	
3 -11	*5200132500	PCB Assy, SWITCH; R		
3 -12	*5800530600	Bracket, PCB		
3 -13	*5200132400	PCB Assy, SWITCH; L		
3 -14	*5581038000	Clamper, Cord; A		
3 -15	*5800239200	Nut, Motor	V-1RX	
3 -16	*5800531000	Chassis Assy, Mechanism		
3 -17	*5800532800	Arm Assy, Head Base		
3 -18	*5800530101	Spring, Base Return; B		
3 -19	5370002303	Motor Assy, Capstan; DC	V-1RX	
3 -20	5800117200	Pulley, Speed Reduction	V-9	
3 -21	5800419200	Belt, Pulley	Z-6000	
3 -22	5800428901	Cam, Control	Z-6000	
3 -23	*5800440901	Lever, Eject	Z-5000	
3 -24	*5800439901	Arm Assy, Eject	Z-5000	
3 -25	5800446000	Spring, Eject Arm	Z-5000	
3 -26	5800453700	Spring, Balance Arm	Z-5000	
3 -27	*5800418900	Arm Assy, Balance	Z-6000	
3 -28	*5800418800	Joint	Z-6000	
3 -29	*5800531400	Bracket, Motor; B		
3 -30	*5200132600	PCB Assy, MECHANISM		
3 -31	5370001400	Motor, Control; DC	V-9	
3 -32	5800123300	Pulley, V	V-9	
3 -33	5800430200	Spring, Pulley	V-70C	
3 -34	5783042605	Screw, Flat Countersunk Head Taptite; M2.6 x 5		
3 -35	5780002603	Screw, Binding Head; M2.6 x 3		
3 -36	5785336000	Washer, Poly.; $\phi 6 \times \phi 10 \times 0.5t$ (Cut)		
3 -37	5785331500	Washer, Poly.; $\phi 1.5 \times \phi 4 \times 0.5t$ (Cut)		
3 -38	5783032605	Screw, Binding Head Taptite; M2.6 x 5		
3 -39	5783002605	Screw, Pan Head Taptite; M2.6 x 5		
3 -40	5786004000	E-Ring, E-4		
3 -41	5786002000	E-Ring, E-2		
3 -42	5781882400	Nut, Push; M2.4		


Parts marked with * require longer delivery time.

(Continued from page 31)

REF. NO.	PARTS NO.	DESCRIPTION	COMMON MODELS	REMARKS
2 -65	5785003000	Washer, Flat; $\phi 3 \times \phi 8 \times 0.5t$		
2 -66	5786002000	E-Ring, E-2		
2 -67	5786002500	E-Ring, E-2.5		
2 -68	5785331100	Washer, Poly.; $\phi 1.2 \times \phi 3.6 \times 0.5t$ (Cut)		
2 -69	5785313000	Washer, Poly.; $\phi 3 \times \phi 6 \times 0.5t$		
2 -70	*5800468900	Spacer, Head		

Parts marked with * require longer delivery time.

EXPLODED VIEW-4 (V-800X/V-700)

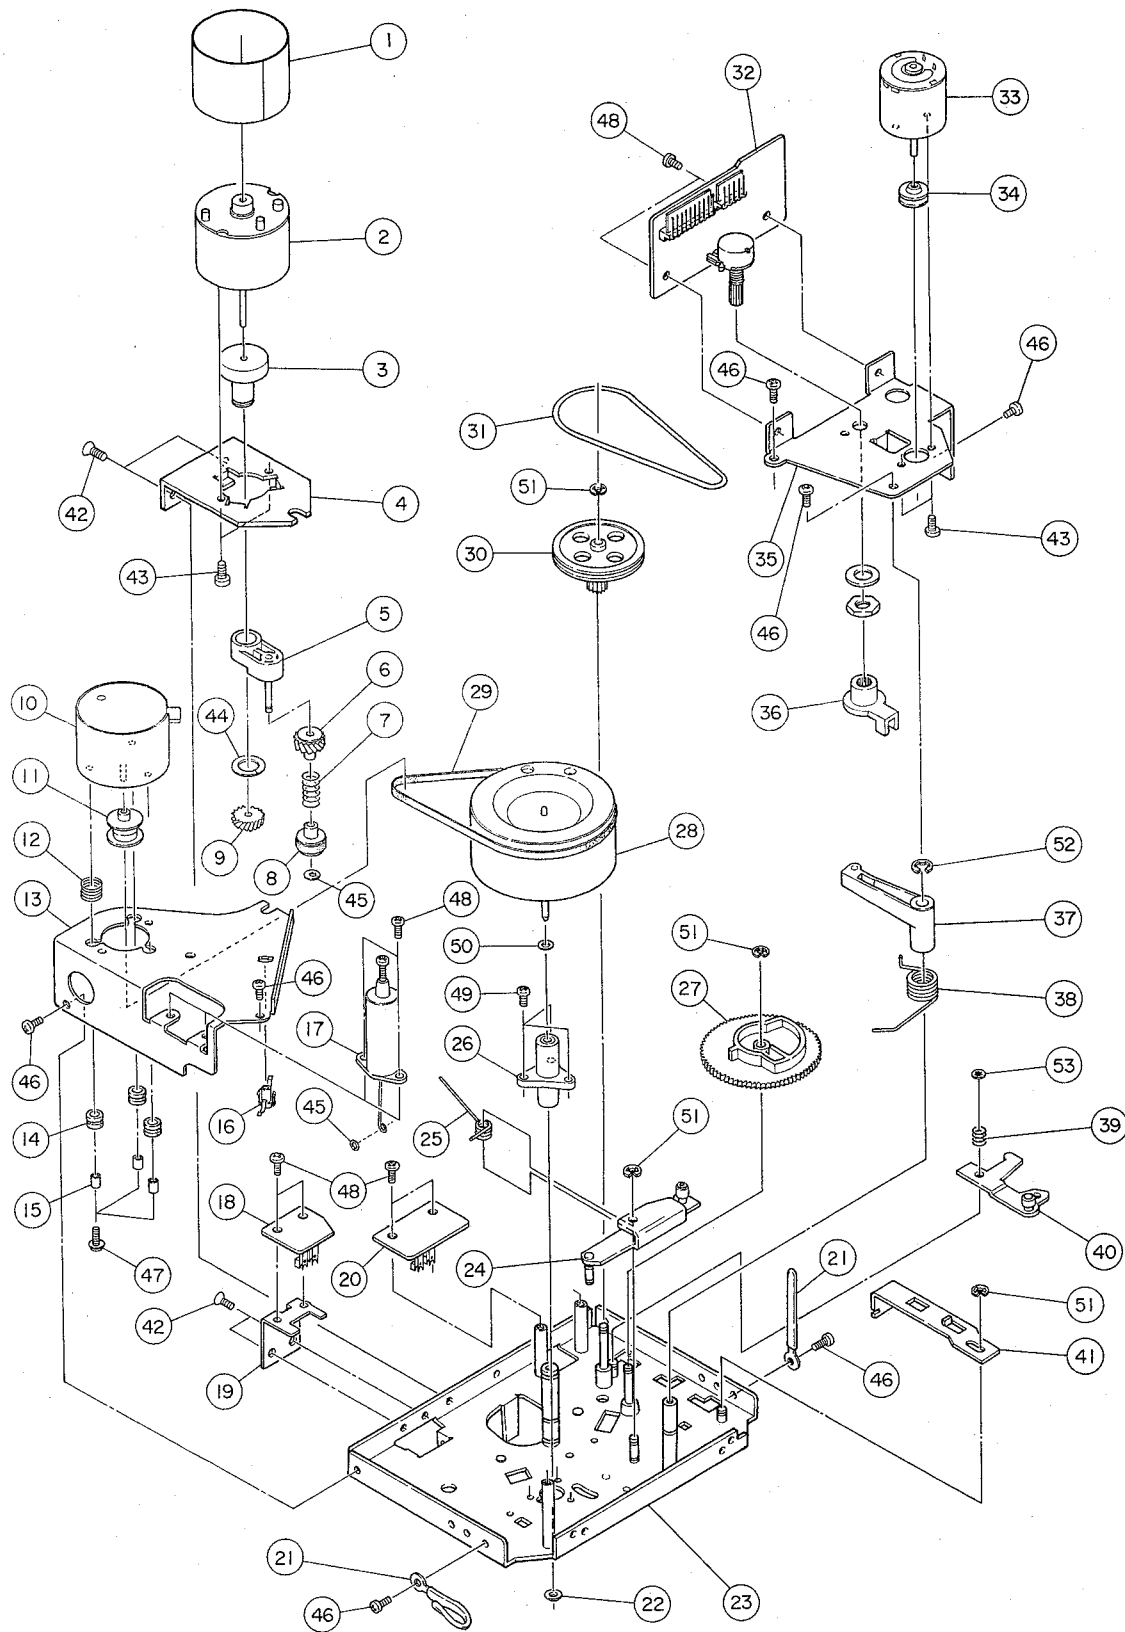


V-900X/V-800X/V-700

REF. NO.	PARTS NO.	DESCRIPTION	COMMON MODELS	REMARKS
4 - 1	*5800235900	Plate, Shield	V-1RX	
4 - 2	5370002502	Motor, Reel; DC	V-70C	
4 - 3	5800461700	Shaft, Pulley Arm	Z-5000	
4 - 4	*5800430001	Plate, Reel Motor	V-66C	
4 - 5	5800461500	Arm Assy, Pulley	V-70C	
4 - 6	5800461600	Pulley Assy, Gear; B	V-70C	
4 - 7	5800430200	Spring, Pulley	V-70C	
4 - 8	5800430302	Pulley Assy	V-70C	
4 - 9	5800232500	Pulley, Gear; A	V-70C	
4 -10	5370004200	Motor, Capstan; DC		
4 -11	5800232200	Pulley, Motor	V-70C	
4 -12	5800469800	Spring, Motor Earth	V-909RX	
4 -13	*5800531500	Bracket, Capstan Flywheel		
4 -14	*5534537000	Cushion, Rubber	A-206	
4 -15	*5785602650	Spacer, Cushion; $\phi 2.6 \times t5$		
4 -16	*5800236900	Bearing, Thrust	V-70C	
4 -17	5800131802	Damper Assy	V-9	
4 -18	*5200132500	PCB Assy, SWITCH; R		
4 -19	*5800530600	Bracket, PCB		
4 -20	*5200132400	PCB Assy, SWITCH; L		
4 -21	*5581038000	Clamper, Cord; A		
4 -22	5534130000	Cap, Oil Retainer	A-400	
4 -23	*5800531000	Chassis Assy, Mechanism		
4 -24	*5800532800	Arm Assy, Head Base		
4 -25	5800530101	Spring, Base Return; B		
4 -26	5800238800	Housing Assy, Capstan Flywheel	V-70C	
4 -27	5800428901	Cam, Control		
4 -28	5800556600	Flywheel Assy, Capstan		
4 -29	5800106900	Belt, Capstan Drive	V-9	
4 -30	5800117200	Pulley, Speed Reduction	V-9	
4 -31	5800419200	Belt, Pulley	Z-6000	
4 -32	*5200132600	PCB Assy, Mechanism		
4 -33	5370001400	Motor, Control	V-9	
4 -34	5800123300	Pulley, Motor	V-9	
4 -35	*5800531400	Bracket, Motor; B		
4 -36	*5800418800	Joint	Z-6000	
4 -37	*5800418900	Arm Assy, Balance	Z-6000	
4 -38	5800453700	Spring, Balance Arm	Z-5000	
4 -39	5800446000	Spring, Eject Arm	Z-5000	
4 -40	*5800439901	Arm Assy, Eject	Z-5000	
4 -41	*5800440901	Lever, Eject	Z-5000	
4 -42	5783042605	Screw, Flat Countersunk Heat Taptite; M2.6 x 5		
4 -43	5780002603	Screw, Binding Head; M2.6 x 3		
4 -44	5785336000	Washer, Poly.; $\phi 6 \times \phi 10 \times 0.5t$ (Cut)		
4 -45	5785331500	Washer, Poly.; $\phi 1.5 \times \phi 4 \times 0.5t$ (Cut)		
4 -46	5783002605	Screw, Pan Head Taptite; M2.6 x 5		
4 -47	5780142608	Screw, Pan Head SEMS; M2.6 x 8 (B-type)		
4 -48	5783032605	Screw, Binding Head Taptite; M2.6 x 5		
4 -49	5783002606	Screw, Pan Head Taptite; M2.6 x 6		
4 -50	5785302200	Washer, Poly.; $\phi 2.6 \times \phi 5 \times 0.25t$		
4 -51	5786002000	E-Ring, E-2		
4 -52	5786004000	E-Ring, E-4		
4 -53	5781882400	Nut, Push; M2.4		

Parts marked with * require longer delivery time.

EXPLODED VIEW-5

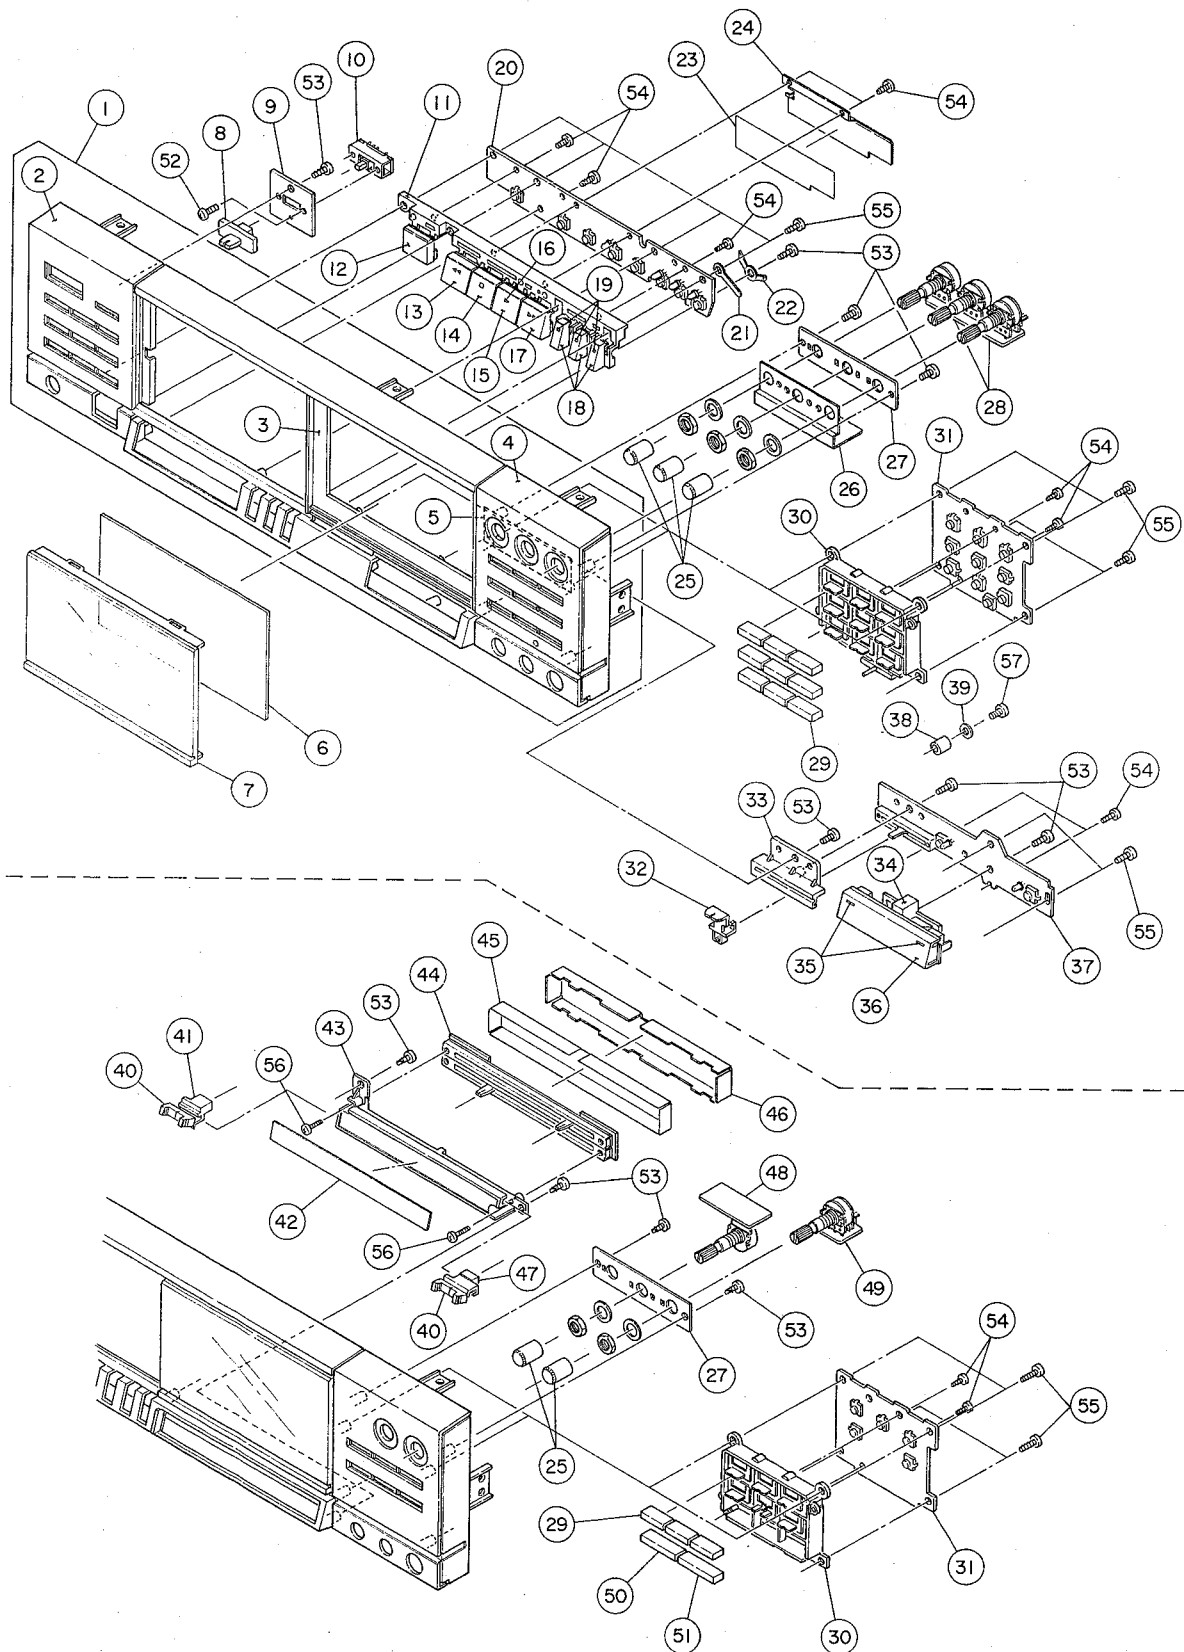


V-900X/V-800X/V-700

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
5 - 1	*5760577500	Panel Assy, Front (V-900X)	
	*5760577600	Panel Assy, Front (V-800X)	
	*5760577700	Panel Assy, Front (V-700)	
5 - 2	*5760548000	Escutcheon, CL (V-900X)	
	*5760549900	Escutcheon, BL (V-800X)	
	*5760549800	Escutcheon, AL (V-700)	
5 - 3	*5760550000	Flame, Front; C (V-900X)	
	*5760549900	Flame, Front; B (V-800X)	
	*5760549800	Flame, Front; A (V-700)	
5 - 4	*5760548300	Escutcheon, CR (V-900X)	
	*5760548200	Escutcheon, BR (V-800X)	
	*5760548100	Escutcheon, AR (V-700)	
5 - 5	*5760550300	Scale, VR C (V-900X)	
	*5760550200	Scale, VR B (V-800X)	
	*5760550100	Scale, VR A (V-700)	
5 - 6	*5760547700	Filter, FL B (V-900X)	
	*5760547600	Filter, FL A (V-800X, V-700)	
5 - 7	5760547500	Window, FL C (V-900X)	
	5760547400	Window, FL B (V-800X)	
	5760547300	Window, FL A (V-700)	
5 - 8	5760543100	Knob, Timer (V-900X, V-800X)	
5 - 9	*5760543200	Bracket, Timer (V-900X, V-800X)	
5 -10	5760567100	Switch, Slide (V-900X, V-800X)	
5 -11	*5760549300	Frame, Button AB (V-900X, V-800X)	
	*5760549200	Frame, Button AA (V-700)	
5 -12	5760543600	Button, EJECT B (V-900X, V-800X)	
	5760543500	Button, EJECT C (V-700)	
5 -13	5760543800	Button, REWIND B (V-900X, V-800X)	
	5760543700	Button, REWIND A (V-700)	
5 -14	5760544000	Button, STOP B (V-900X, V-800X)	
	5760543900	Button, STOP A (V-700)	
5 -15	5760544200	Button, PLAY B (V-900X, V-800X)	
	5760544100	Button, PLAY A (V-700)	
5 -16	5760544300	Lens, Insert A	
5 -17	5760544500	Button, FF B (V-900X, V-800X)	
	5760544400	Button, FF A (V-700)	
5 -18	5760544700	Button, REC B (V-900X, V-800X)	
	5760544600	Button, REC A (V-700)	
5 -19	5760544800	Lens, Insert B	
5 -20	*5760567500	PCB Assy, KEY SW 1	
5 -21	*5760578000	Clamper	
5 -22	*5760552200	Contact Plate, TR NSP	
5 -23	*5760569200	Barrier, TR SP SW	
5 -24	*5760569100	Shield, TR NSP SW	
5 -25	5760546100	Knob, VR B (V-900X, V-800X)	
	5760546000	Knob, VR A (V-700)	
5 -26	*5760573600	Shield, REC LEV. (V-900X)	
5 -27	*5760548400	Bracket, VR	
5 -28	*5760567200	PCB Assy, VR 1 (V-900X)	
	*5760567310	PCB Assy, VR 2 (V-900X)	
5 -29	5760545200	Button, MB (V-900X, V-800X)	
	5760545100	Button, MA (V-700)	
5 -30	*5760549500	Frame, Button C	
5 -31	*5760567410	PCB Assy, KEY SW 2 (V-900X)	
	*5760567400	PCB Assy, KEY SW 2 (V-800X, V-700)	
5 -32	5760545700	Knob, Fade Time (V-900X)	
5 -33	*5760548500	Guide, VR S (V-900X)	
5 -34	*5760549400	Frame, Button B (V-900X)	
5 -35	5760545000	Lens, Insert C (V-900X)	
5 -36	5760544900	Button, FADE (V-900X)	
5 -37	*5760573700	PCB Assy, VR 4 (V-900X)	
5 -38	*5760573800	Spacer (V-900X)	
5 -39	*5760566800	Washer (V-900X)	

(Continued on page 40)

Parts marked with * require longer delivery time.

EXPLODED VIEW-6

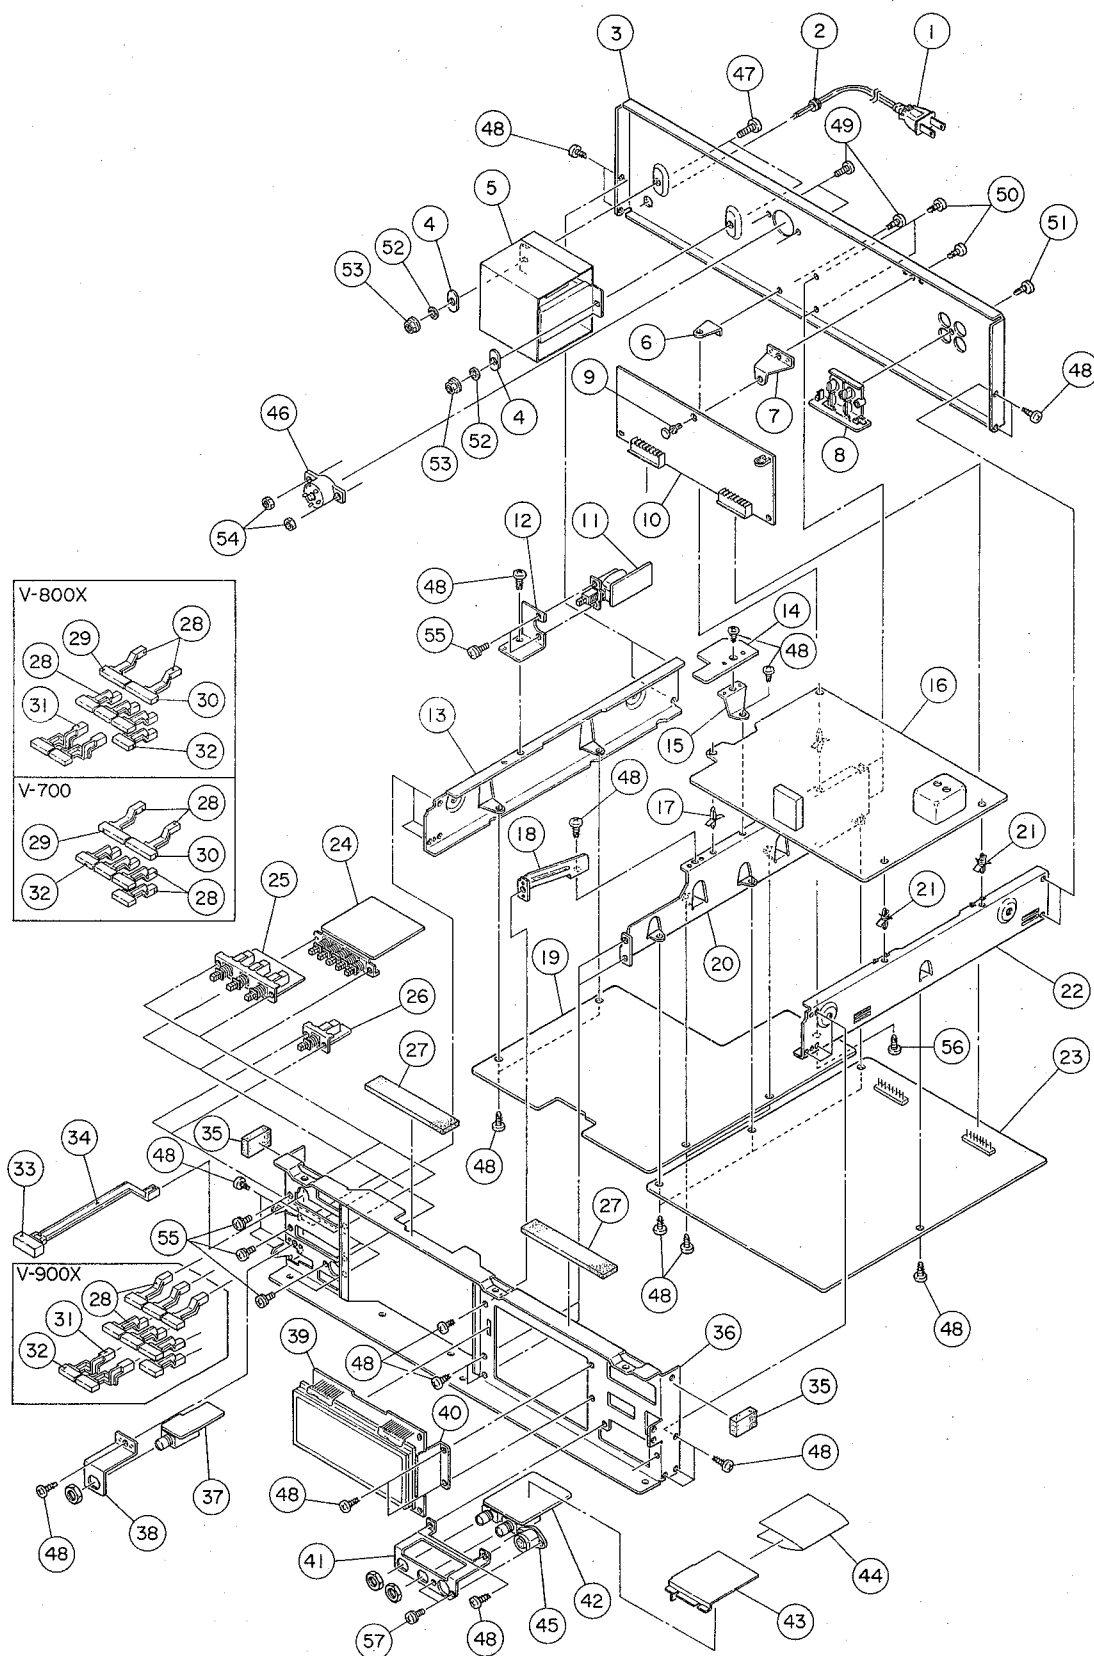

V-900X/V-800X/V-700

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
6 - 1	△*5760555600	Cord Assy, AC Power [J]	
	△*5760555700	Cord Assy, AC Power [US, C, GE]	
	△*5760555800	Cord Assy, AC Power [E]	
	△*5760555900	Cord Assy, AC Power [UK]	
	△*5760556000	Cord Assy, AC Power [A]	
6 - 2	△*57605556100	Bushing, Cord [J, US, C, GE]	
	△*57605556200	Bushing, Cord [E, UK, A]	
6 - 3	*5760550700	Panel, Rear [J, US, C]	
	*5760550800	Panel, Rear [GE]	
	*5760555400	Panel, Rear [E, UK, A]	
6 - 4	*5760552100	Plate	
6 - 5	△ 5760555500	Transformer, Power [J]	
	△ 5760555510	Transformer, Power [US, C]	
	△ 5760555520	Transformer, Power [GE]	
	△ 5760555530	Transformer, Power [E, UK, A]	
6 - 6	*5760551200	Bracket, PCB	
6 - 7	*5760551400	Bracket, DBX PCB (V-900X, V-800X)	
6 - 8	*5760556400	PCB Assy, IN/OUTPUT	
6 - 9	*5786610200	Rivet, Push	
6 -10	*5760554400	PCB Assy, DBX (V-900X, V-800X)	
6 -11	*5760556500	PCB Assy, POWER SW [J, US, C]	
	*5760556510	PCB Assy, POWER SW [GE, E, UK, A]	
6 -12	*5760553100	Bracket, Power SW	
6 -13	*5760550400	Bracket, Side; L	
6 -14		PCB Assy, TR 3 (V-900X)	
		PCB Assy, TR 3 (V-800X)	
		PCB Assy, TR 3 (V-700)	
6 -15	*5760551400	Bracket, DBX PCB	
6 -16	*5760571600	PCB Assy, AUTO CAL (V-900X)	
	*5760576500	PCB Assy, TR 4 (V-900X)	
6 -17	*5760571700	Support, PCB (V-900X)	
6 -18	*5760551900	Bracket, MECH	
6 -19	*5760554320	PCB Assy, POWER/CONTROL (V-900X) [J, US, C, GE, A]	
	*5760554330	PCB Assy, POWER/CONTROL (V-900X) [E, UK]	
	*5760554300	PCB Assy, POWER/CONTROL (V-800X) [J, US, C, GE, A]	
	*5760554310	PCB Assy, POWER/CONTROL (V-800X) [E, UK]	
	*5760554340	PCB Assy, POWER/CONTROL (V-700) [J, US, C, GE, A]	
	*5760554350	PCB Assy, POWER/CONTROL (V-700) [E, UK]	
6 -20	*5760551800	Bracket, Center	
6 -21	*5760571800	Support, PCB (V-900X)	
6 -22	*5760550500	Bracket, Side; R	
6 -23	*5760554210	PCB Assy, R/P (V-900X)	
	*5760554200	PCB Assy, R/P (V-800X)	
	*5760554220	PCB Assy, R/P (V-700)	
6 -24	*5760554600	PCB Assy, NR SW (V-900X, V-800X)	
	*5760554610	PCB Assy, NR SW (V-700)	
6 -25	*5760554510	PCB Assy, MONITOR SW (V-900X)	
	*5760554500	PCB Assy, MONITOR SW (V-800X, V-700)	
6 -26	*5760554700	PCB Assy, MPX SW	
6 -27	*5760552500	Spacer, Top Cover	
6 -28	*5760549000	Joint, A	
6 -29	5760545400	Button, NB L (V-800X)	
	5760545300	Button, NA L (V-700)	
6 -30	5760545600	Button, NB R (V-800X)	
	5760545500	Button, NA R (V-700)	
6 -31	5760549100	Joint, B (V-900X, V-800X)	
6 -32	5760545200	Button, MB (V-900X, V-800X)	
	5760545100	Button, MA (V-700)	
6 -33	5760543400	Button, Power B (V-900X, V-800X)	
	5760543300	Button, Power A (V-700)	

(Continued on page 40)

Parts marked with * require longer delivery time.

[US]: U.S.A.

[C]: CANADA

[GE]: GENERAL EXPORT

[E]: EUROPE

[UD]: U.K.

[A]: AUSTRALIA

[J]: JAPAN

V-900X/V-800X/V-700

(Continued from page 37)

EXPLODED VIEW-5

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
5 -40	5760545900	Knob, REC VR B (V-800X)	
	5760545800	Knob, REC VR A (V-700)	
5 -41	5760548900	Joint, VR RB (V-800X)	
	5760548800	Joint, VR RA (V-700)	
5 -42	*5760547000	Plate, REC VR B (V-800X)	
	*5760546900	Plate, REC VR A (V-700)	
5 -43	*5760547200	Guide, VR MB (V-800X)	
	*5760547100	Guide, VR MA (V-700)	
5 -44	*5760567600	PCB Assy, VR 3 (V-800X, V-700)	
5 -45	*5760569700	Barrier (V-800X, V-700)	
5 -46	*5760569600	Shield, Slide VR (V-800X, V-700)	
5 -47	5760548700	Joint, VR LB (V-800X)	
	5760548600	Joint, VR LA (V-700)	
5 -48	*5760567300	PCB Assy, VR 2 (V-800X, V-700)	
5 -49	*5760567200	PCB Assy, VR 1 (V-800X, V-700)	
5 -50	5760545400	Button, NB L (V-800X)	
	5760545300	Button, NA L (V-700)	
5 -51	5760545600	Button, NB R (V-800X)	
	5760545500	Button, NA R (V-700)	
5 -52	5780002003	Screw, Binding Head; M2 x 3	
5 -53	5783603008	Screw, Pan Head Tap; M3 x 8	
5 -54	5781002006	Screw, Binding Head; M2 x 6 (Ni)	
5 -55	5783602610	Screw, Pan Head Tap; M2.6 x 10	
5 -56	5780002608	Screw, Pan Head; M2.6 x 8	
5 -57	5783603012	Screw, Pan Head Tap; M3 x 12	

Parts marked with * require longer delivery time.

(Continued from page 39)

EXPLODED VIEW-6

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
6 -34	*5760552100	Shaft, L (V-900X)	
	*5760552000	Shaft, L (V-800X, V-700)	
6 -35	*5760567000	Spacer, Front	
6 -36	*5760550900	Panel, Front	
6 -37	*5760554900	PCB Assy, PHONES	
6 -38	*5760551500	Bracket, PHONES Jack	
6 -39	*5760554810	PCB Assy, FL (V-900X)	
	*5760554800	PCB Assy, FL (V-800X)	
	*5760554820	PCB Assy, FL (V-700)	
6 -40	*5760551600	Bracket, FL	
6 -41	*5760551700	Bracket, MIC Jack	
6 -42	*5760555000	PCB Assy, MIC AMPL.	
6 -43	*5760552600	Shield, MIC J	Part of 6-42
6 -44	*5760552700	Barrier, MIC J	Part of 6-42
6 -45	5760555100	Jack, Remote (V-900X, V-800X)	
6 -46	△ 5760556300	Switch, Voltag Selector [GE]	
6 -47	5780014015	Screw, Binding Head; M4 x 15 (Ni)	
6 -48	5781123008	Screw, Binding Head Tapping; M3 x 8	
6 -49	5780013008	Screw, Binding Head; M3 x 8 (Ni)	
6 -50	5781173008	Screw, Binding Head Tapping; M3 x 8 (Ni)	
6 -51	5781003008	Screw, Binding Head Tapping; M3 x 8	
6 -52	5785104000	Washer, Lock; φ4	
6 -53	5781904000	Nut, Hex w/Flange; M4	
6 -54	5781823000	Nut, Hex; M3	
6 -55	5780133005	Screw, Pan Head SEMS; M3 x 5	
6 -56	5760577900	Screw, I.T. BT	
6 -57	5780132605	Screw, Pan Head SEMS; M2.6 x 5	

Parts marked with * require longer delivery time.

[US]: U.S.A.
[A]: AUSTRALIA

[C]: CANADA
[J]: JAPAN

[GE]: GENERAL EXPORT


[E]: EUROPE

[UK]: U.K.

7 PC BOARDS AND PARTS LIST

基板図とパーツ・リスト

R/P AMPL PCB ASSY (V-900X)

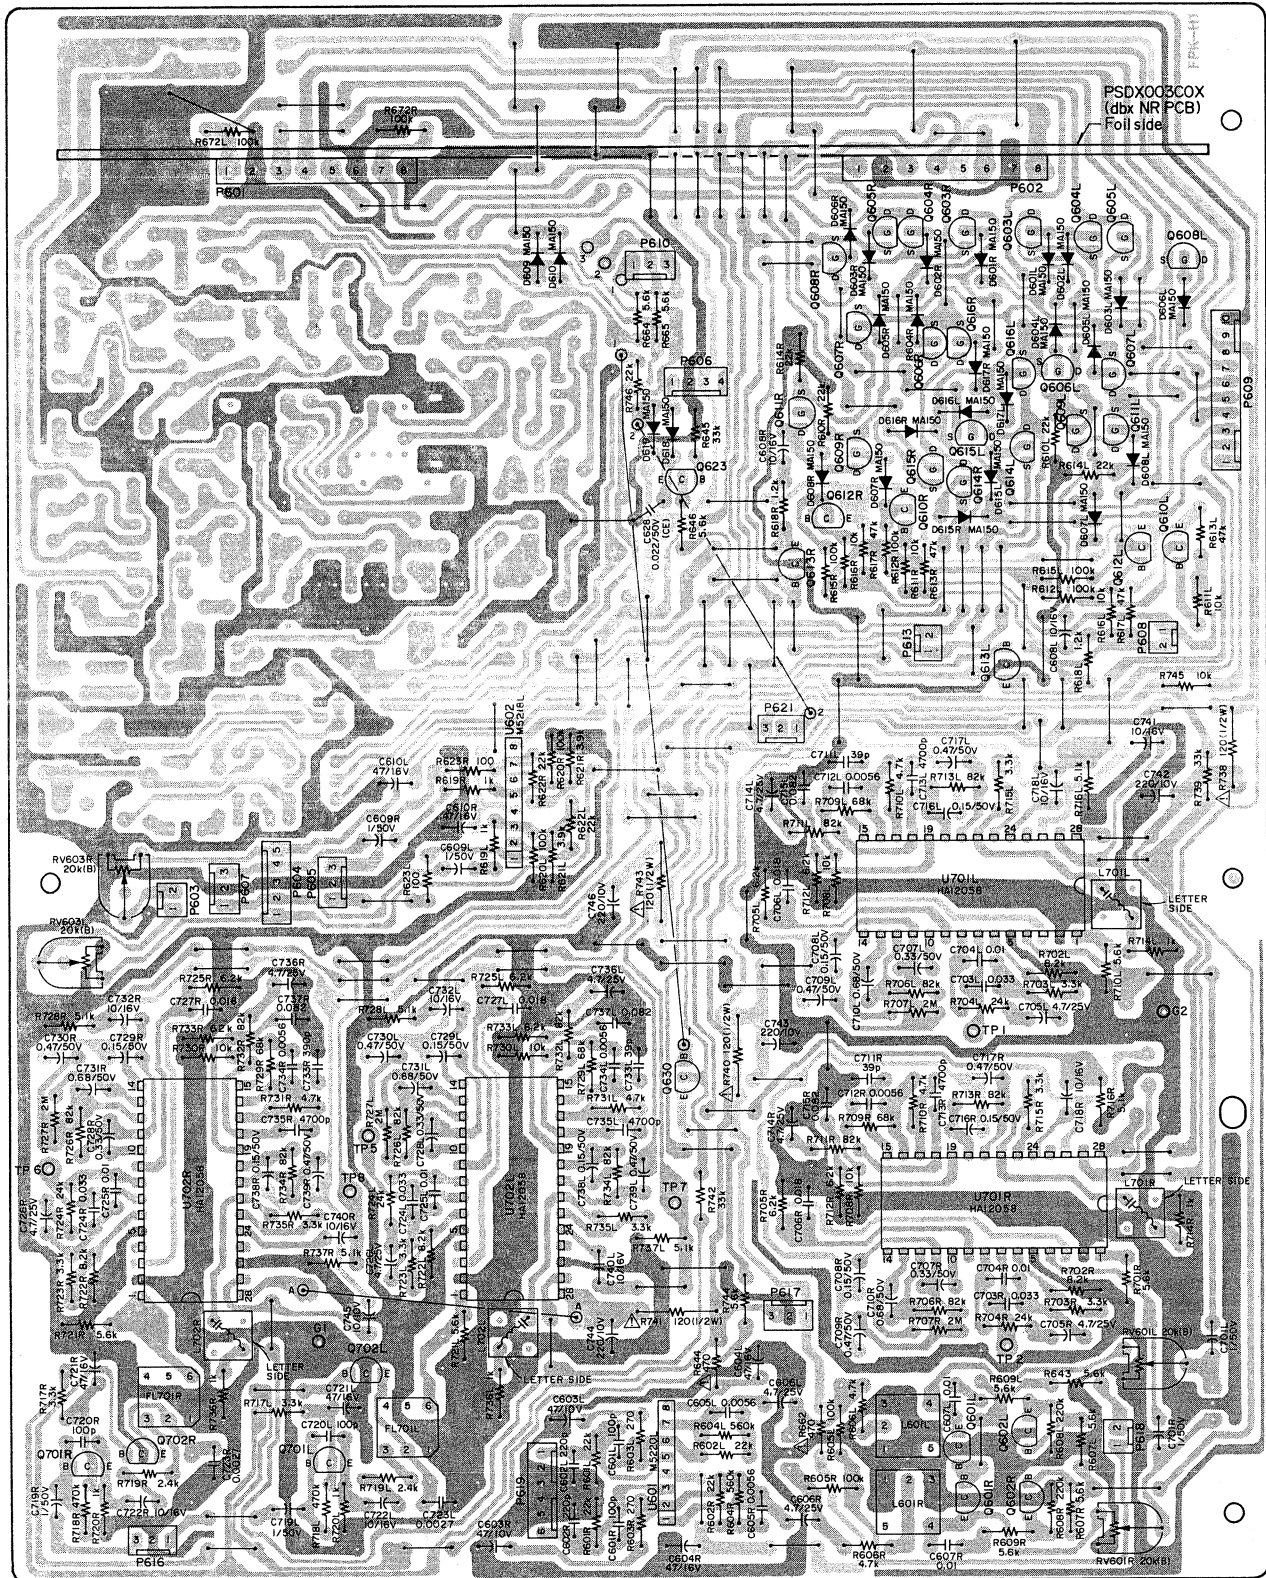

Q601L/R
Q602L/R
Q603L/R ~ Q609L/R
Q610L/R
Q611L/R

2SC2878 B
2SC945A P
2SK136 Q,R
2SC945A P
2SK136 Q,R

Q612L/R
Q613L/R
Q614L/R ~ Q616L/R
Q617L/R


2SC945A P,Q
2SC2878 B
2SK136 Q,R
2SC2878 B

Q630

Q701L/R, Q702L/R



2SC945A P,Q
2SC945A P,Q

R/P AMPL PCB ASSY (V-700)

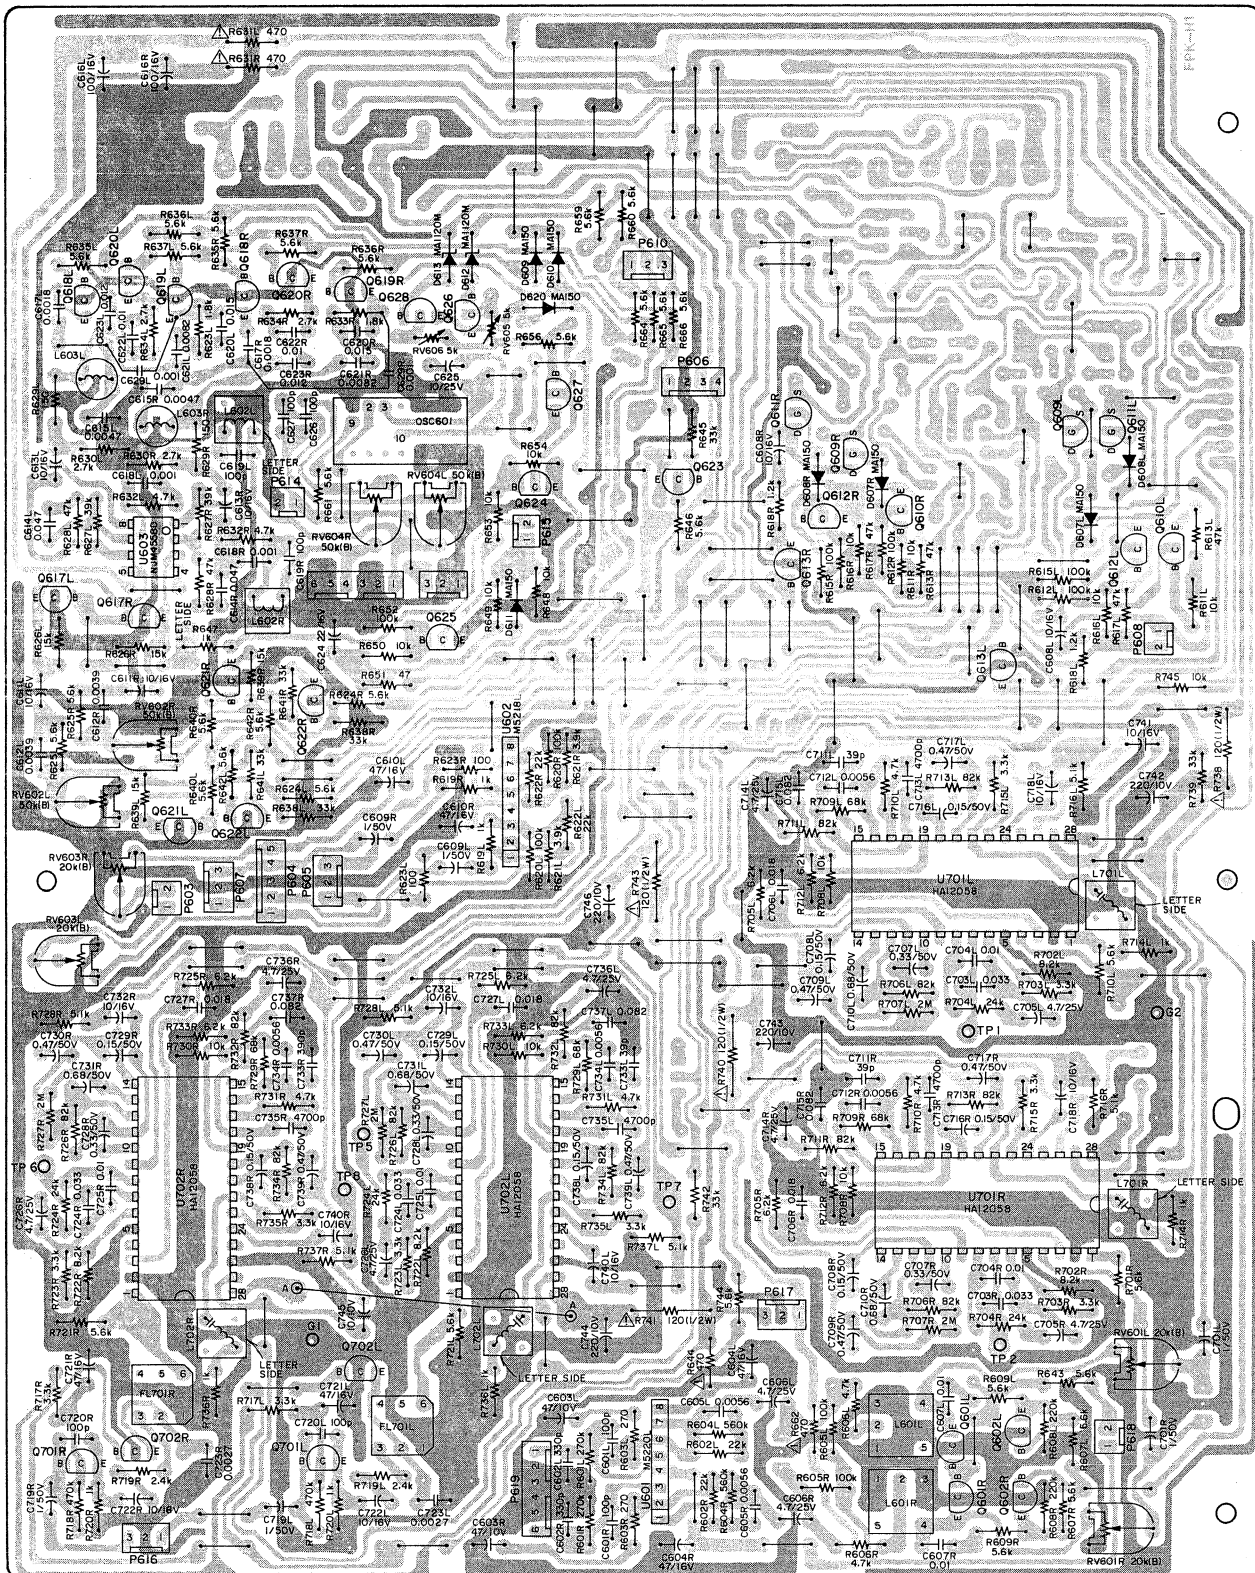


Q601L/R	2SC2878 B	Q612L/R	2SC945A RQ	Q623,Q624	2SA733 Q
Q602L/R	2SC945A P	Q613L/R	2SC2878 B	Q625,Q626	2SC945A P,Q
Q609L/R	2SK136 Q,R			Q627	2SC1383 Q
Q610L/R	2SC945A P	Q617L/R	2SC2878 B	Q628	2SC945A P,Q
Q611L/R	2SK136 Q,R	Q618L/R ~ Q622L/R	2SC945A P,Q	Q701L/R, Q702L/R	2SC945A P,Q


dbx NR PCB ASSY (V-900X, V-800X)

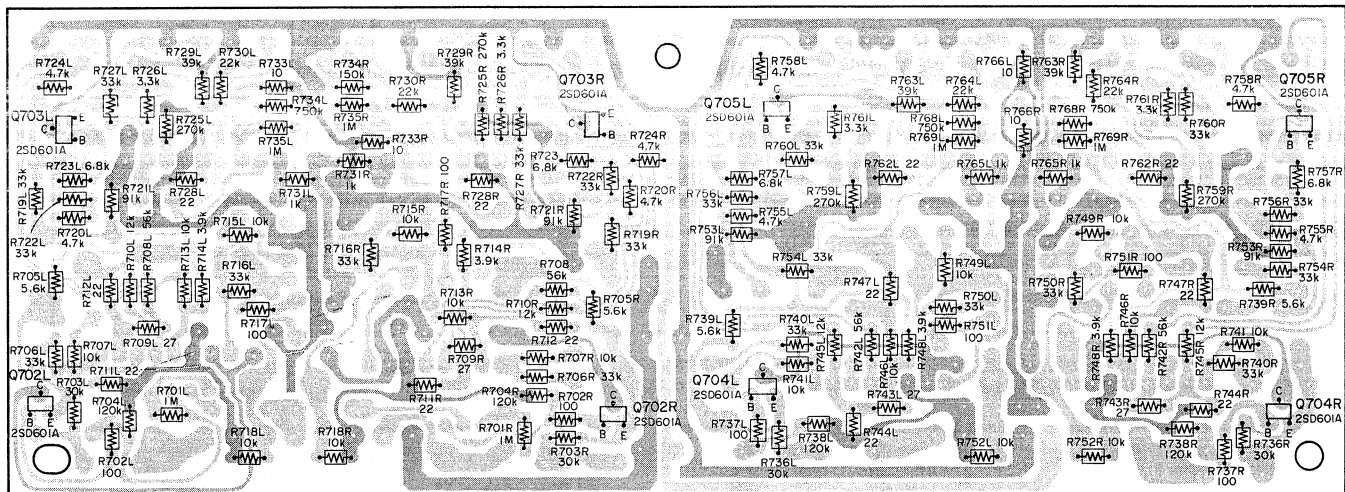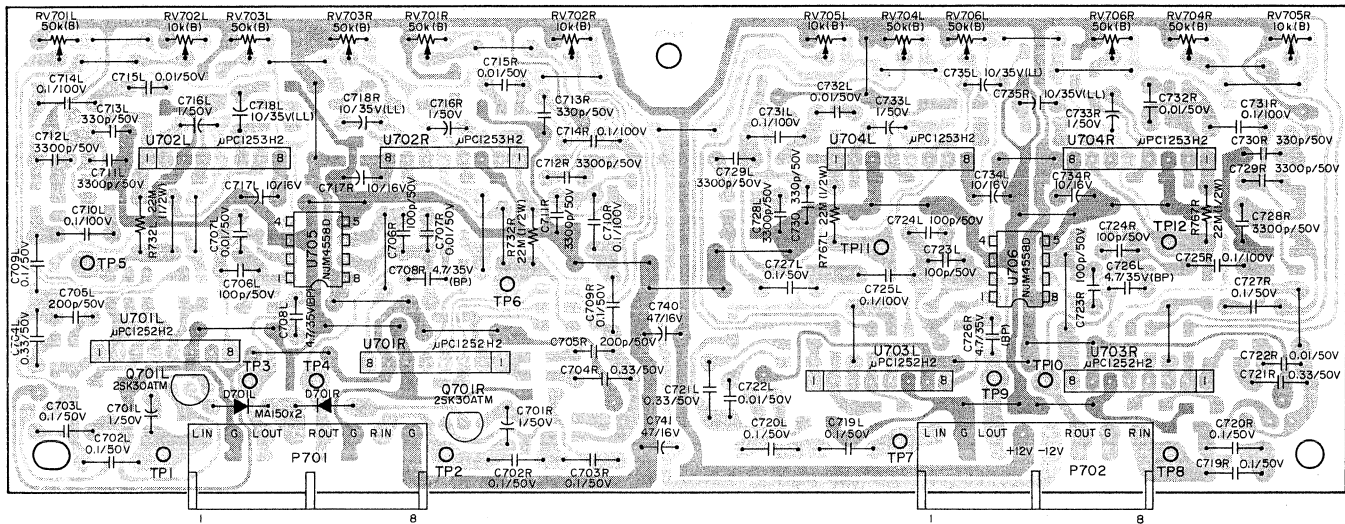



AUTO CAL PCB ASSY (V-900X)

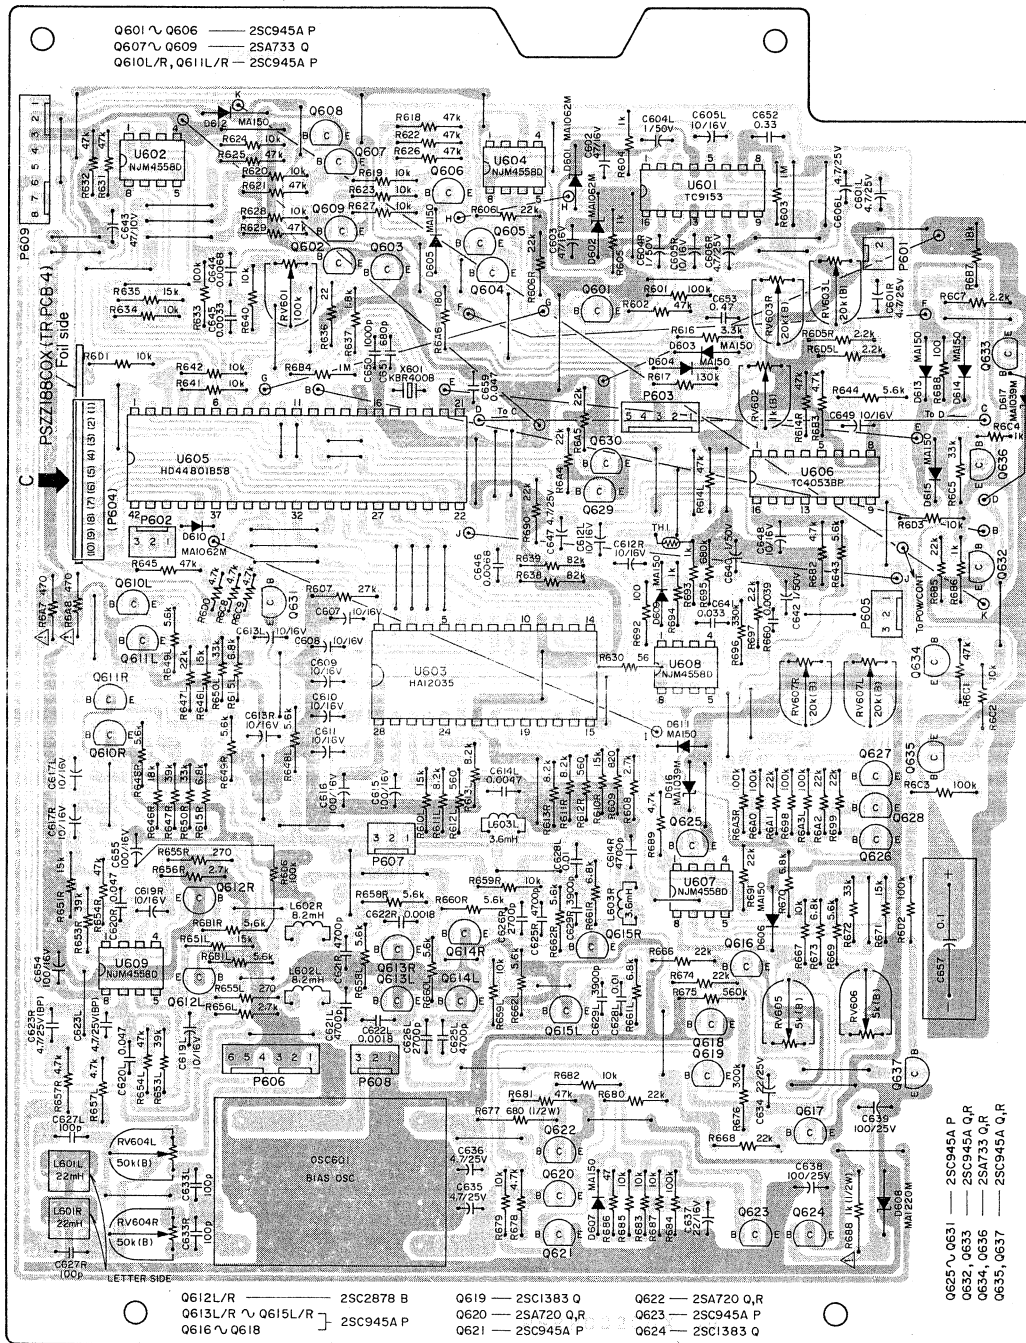


TR PCB 4 ASSY (V-900X)

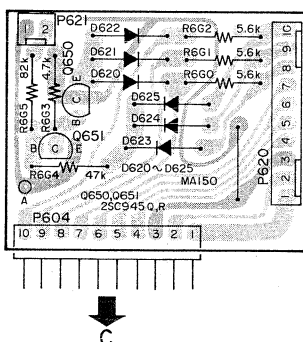


FL DISPLAY PCB ASSY

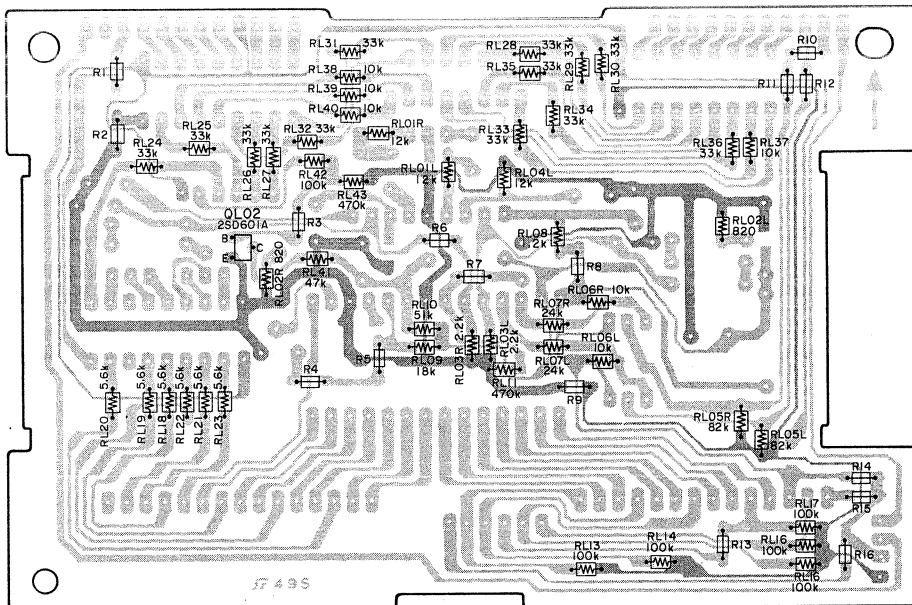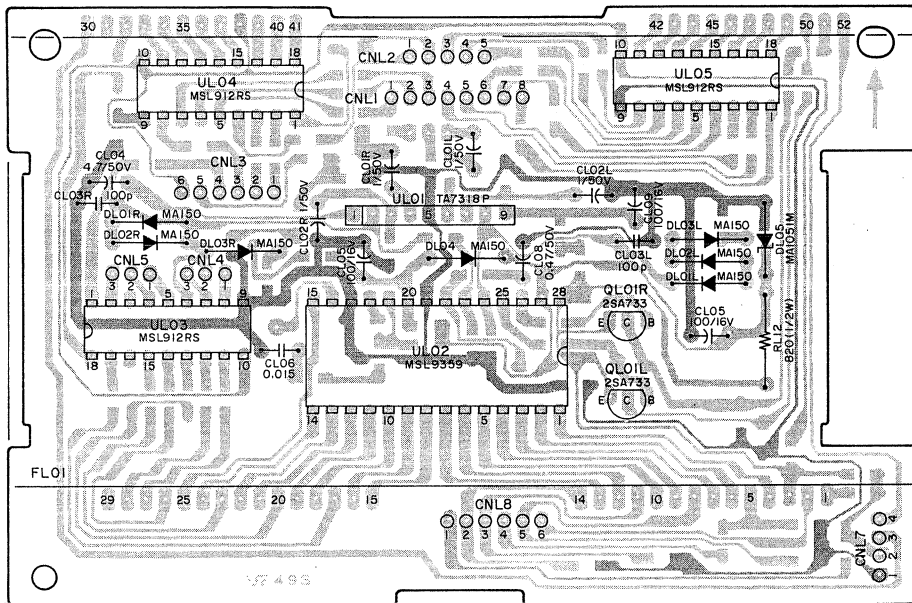


V-800X, V-700 : RL21, RL22, RL23, RL26 Not mounted
R1~R6 : 0 ohm (Jumper)

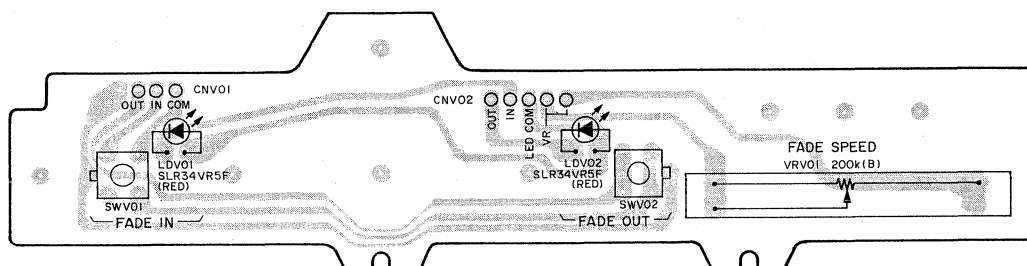VR PCB 4 ASSY (V-900X)



MECHANISM PCB ASSY

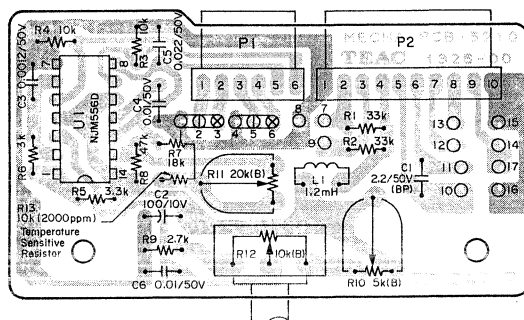

SW L PCB ASSY

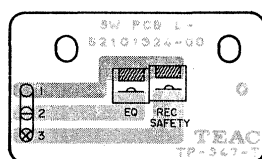

SW R PCB ASSY

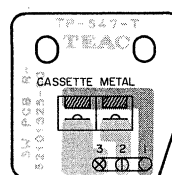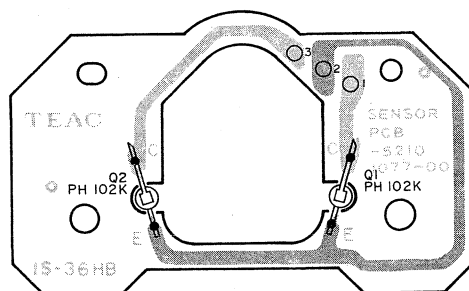**SENSOR PCB ASSY**

R/P AMPL. PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5760554210	PCB Assy (V-900X)
	*5760554200	PCB Assy (V-800X)
	*5760554220	PCB Assy (V-700)
	5760563600	PCB
	IC's	
U601	5760564300	M5220L
U602	5220416200	M5218L
U603	5042738000	NJM4558D (V-800X, V-700)
U701L/R	5760564500	HA12058
U702L/R	5760564500	HA12058
	TRANSISTORS	
Q601L/R	5230775000	2SC2878B
Q602L/R	5145091000	2SC945AK
Q603L/R	5232007200	FET 2SK364BL
Q604L/R	5232007200	FET 2SK364BL
Q605L/R	5232007200	FET 2SK364BL
		(V-900X)
Q606L/R	5232007200	FET 2SK364BL
Q607L/R	5232007200	FET 2SK364BL
Q608L/R	5232007200	FET 2SK364BL
Q609L/R	5232007200	FET 2SK364BL
Q610L/R	5145091000	2SC945AK
		(V-800X)
Q611L/R	5232007200	FET 2SK364BL
Q612L/R	5145091000	2SC945AK
Q613L/R	5230775000	2SC2878B
Q614L/R	5232007200	FET 2SK364BL
Q615L/R	5232007200	FET 2SK364BL
		(V-900X)
Q616L/R	5232007200	FET 2SK364BL
Q617L/R	5230775000	2SC2878B
Q618L/R	5145091000	2SC945AK
Q619L/R	5145091000	2SC945AK
Q620L/R	5145091000	2SC945AK
		(V-800X)
Q621L/R	5145091000	2SC945AK
Q622L/R	5145091000	2SC945AK
Q623	5042553000	2SA733P
Q624	5042553000	2SA733P (V-800X, V-700)
Q625, Q626	5145091000	2SC945AK (V-800X, V-700)
Q627	5042475000	2SC1384Q (V-800X, V-700)
Q628	5145091000	2SC945AK (V-800X, V-700)
Q630	5145091000	2SC945AK (V-800X)
Q701L/R	5145091000	2SC945AK
Q702L/R	5145091000	2SC945AK
	DIODES	
D601L/R	5224015000	1SS133T
D602L/R	5224015000	1SS133T
D603L/R	5224015000	1SS133T
D604L/R	5224015000	1SS133T
D605L/R	5224015000	1SS133T
		(V-900X, V-800X)
D606L/R	5224015000	1SS133T
D607L/R	5224015000	1SS133T
D608L/R	5224015000	1SS133T
D609, D610	5224015000	1SS133T
D611	5224015000	1SS133T (V-800X, V-700)
D612, D613	5224543101	Zener RD12EB2 (V-800X, V-700)
D615L/R	5224015000	1SS133T
D616L/R	5224015000	1SS133T
D617L/R	5224015000	1SS133T
		(V-900X, V-800X)
D618, D619	5224015000	1SS133T (V-900X)
D620	5224015000	1SS133T (V-800X, V-700)

REF. NO.	PARTS NO.	DESCRIPTION
CARBON RESISTORS		
All resistors are rated $\pm 5\%$ tolerance and 1/8 watt unless otherwise noted.		
R601L/R	5240034020	270k Ω
R602L/R	5240031420	22k Ω
R603L/R	5240026820	270 Ω
R604L/R	5240034820	560k Ω
R605L/R	5240033020	100k Ω
R606L/R	5240029820	4.7k Ω
R607L/R	5240030020	5.6k Ω
R608L/R	5240033820	220k Ω
R609L/R	5240030020	5.6k Ω
R610L/R	5240031420	22k Ω
R611L/R	5240030620	10k Ω
R612L/R	5240033020	100k Ω
R613L/R	5240032220	47k Ω
R614L/R	5240031420	22k Ω
R615L/R	5240033020	100k Ω
R616L/R	5240030620	10k Ω
R617L/R	5240032220	47k Ω
R618L/R	5240028420	1.2k Ω
R619L/R	5240028220	1k Ω
R620L/R	5240033020	100k Ω
R621L/R	5240029620	3.9k Ω
R622L/R	5240031420	22k Ω
R623L/R	5240025820	100 Ω
R624L/R	5240030020	5.6k Ω
R625L/R	5240030020	5.6k Ω
R626L/R	5240031020	15k Ω
R627L/R	5240032020	39k Ω
R628L/R	5240032220	47k Ω
R629L/R	5240026220	150 Ω
R630L/R	5240029220	2.7k Ω
R631L/R	5240027420	470 Ω
R632L/R	5240029820	4.7k Ω
R633L/R	5240028820	1.8k Ω
R634L/R	5240029220	2.7k Ω
R635L/R	5240030020	5.6k Ω
R636L/R	5240030020	5.6k Ω
R637L/R	5240030020	5.6k Ω
R638L/R	5240031820	33k Ω
R639L/R	5240031020	15k Ω
R640L/R	5240030020	5.6k Ω
R641L/R	5240031820	33k Ω
R642L/R	5240030020	5.6k Ω
R643	5240030020	5.6k Ω
R644	5240027420	470 Ω
R645	5240031820	33k Ω
R646	5240030020	5.6k Ω
R647	5240028220	1k Ω
R648, R649	5240030620	10k Ω
R650	5240030620	10k Ω
R651	5240025020	47 Ω
R652	5240033020	100k Ω
R653, R654	5240030620	10k Ω
R655, R659	5240030020	5.6k Ω
R660	5240030020	5.6k Ω
R661	5240029820	4.7k Ω

Parts marked with * require longer delivery time.

REF. NO.	PARTS NO.	DESCRIPTION
R662	Δ 5240027420	470Ω
R664, R665	5240030020	5.6kΩ
R666	5240030020	5.6kΩ (V-800X, V-700)
R672L/R	5240033020	100kΩ (V-900X, V-800X)
R701L/R	5240030020	5.6kΩ
R702L/R	5240030420	8.2kΩ
R703L/R	5240029420	3.3kΩ
R704L/R	5240031520	24kΩ
R705L/R	5240030120	6.2kΩ
R706L/R	5240032820	82kΩ
R707L/R	5240036120	2MΩ
R708L/R	5240030620	10kΩ
R709L/R	5240032620	68kΩ
R710L/R	5240029820	4.7kΩ
R711L/R	5240032820	82kΩ
R712L/R	5240030120	6.2kΩ
R713L/R	5240032820	82kΩ
R714L/R	5240028220	1kΩ
R715L/R	5240029420	3.3kΩ
R716L/R	5240029920	5.1kΩ
R717L/R	5240029420	3.3kΩ
R718L/R	5240034620	470kΩ
R719L/R	5240029120	2.4kΩ
R720L/R	5240028220	1kΩ
R721L/R	5240030020	5.6kΩ
R722L/R	5240030420	8.2kΩ
R723L/R	5240029420	3.3kΩ
R724L/R	5240031520	24kΩ
R725L/R	5240030120	6.2kΩ
R726L/R	5240032820	82kΩ
R727L/R	5240036120	2MΩ
R728L/R	5240029920	5.1kΩ
R729L/R	5240032620	68kΩ
R730L/R	5240030620	10kΩ
R731L/R	5240029820	4.7kΩ
R732L/R	5240032820	82kΩ
R733L/R	5240030120	6.2kΩ
R734L/R	5240032820	82kΩ
R735L/R	5240029420	3.3kΩ
R736L/R	5240028220	1kΩ
R737L/R	5240029920	5.1kΩ
R738	Δ 5180060000	120Ω 1/2W
R739	5240031820	33kΩ
R740, R741	Δ 5180060000	120Ω 1/2W
R742	5240031820	33kΩ
R743	Δ 5180060000	120Ω 1/2W
R744	5240030020	5.6kΩ
R745	5240030620	10kΩ
R746	5240031420	22kΩ (V-900X)
CAPACITORS		
C601L/R	5172212000	Ceramic 100pF 50V
C602L/R	5172218000	Ceramic 330pF 50V
C603L/R	5260165052	Elec. 47μF 10V
C604L/R	5260165252	Elec. 47μF 25V
C605L/R	5170370000	Mylar 0.0056μF 100V 5%
C606L/R	5260162050	Elec. 4.7μF 35V
C607L/R	5171856000	Mylar 0.01μF 100V 5%
C608L/R	5260162550	Elec. 10μF 16V
C609L/R	5260160750	Elec. 1μF 50V
C610L/R	5260165252	Elec. 47μF 25V

REF. NO.	PARTS NO.	DESCRIPTION
C611L/R	5260162550	Elec. 10μF 16V
C612L/R	5170366000	Mylar 0.0039μF 100V 5%
C613L/R	5260162550	Elec. 10μF 16V
C614L/R	5171872000	Mylar 0.047μF 100V 5%
C615L/R	5170368000	Mylar 0.0047μF 100V 5%
C616L/R	5260166052	Elec. 100μF 16V
C617L/R	5170358000	Mylar 0.0018μF 100V 5%
C618L/R	5170352000	Mylar 0.001μF 100V 5%
C619L/R	5172212000	Ceramic 100pF 50V
C620L/R	5171860000	Mylar 0.015μF 100V 5%
C621L/R	5170374000	Mylar 0.0082μF 100V 5%
C622L/R	5171856000	Mylar 0.01μF 100V 5%
C623L/R	5171858000	Mylar 0.012μF 100V 5%
C624	5260163252	Elec. 22μF 10V
C625	5260162650	Elec. 10μF 25V
C626, C627	5172212000	Ceramic 100pF 50V (V-800X, V-700)
C628	5054217000	Ceramic 0.022μF 50V (V-900X)
C629L/R	5170352000	Mylar 0.001μF 100V 5% (V-800X, V-700)
C701L/R	5260160750	Elec. 1μF 50V
C703L/R	5171868000	Mylar 0.033μF 100V 5%
C704L/R	5171857000	Mylar 0.01μF 100V 5%
C705L/R	5260162050	Elec. 4.7μF 35V
C706L/R	5171862000	Mylar 0.018μF 100V 5%
C707L/R	5260220850	Elec. 0.33μF 50V (LL)
C708L/R	5260220650	Elec. 0.15μF 50V (LL)
C709L/R	5260220950	Elec. 0.47μF 50V (LL)
C710L/R	5260221050	Elec. 0.68μF 50V (LL)
C711L/R	5172207000	Ceramic 39pF 50V
C712L/R	5170370000	Mylar 0.0056μF 100V 5%
C713L/R	5170368000	Mylar 0.0047μF 100V 5%
C714L/R	5260162050	Elec. 4.7μF 35V
C715L/R	5263167823	Meta. 0.082μF 50V 5%
C716L/R	5260220650	Elec. 0.15μF 50V (LL)
C717L/R	5260220950	Elec. 0.47μF 50V (LL)
C718L/R	5260162550	Elec. 10μF 16V
C719L/R	5260160750	Elec. 1μF 50V
C720L/R	5172212000	Ceramic 100pF 50V
C721L/R	5260165252	Elec. 47μF 25V
C722L/R	5260162550	Elec. 10μF 16V
C723L/R	5170362000	Mylar 0.0027μF 100V 5%
C724L/R	5171868000	Mylar 0.033μF 100V 5%
C725L/R	5171856000	Mylar 0.01μF 100V 5%
C726L/R	5260162050	Elec. 4.7μF 35V
C727L/R	5171862000	Mylar 0.018μF 100V 5%
C728L/R	5260220850	Elec. 0.33μF 50V (LL)
C729L/R	5260220650	Elec. 0.15μF 50V (LL)
C730L/R	5260220950	Elec. 0.47μF 50V (LL)
C731L/R	5260221050	Elec. 0.68μF 50V (LL)
C732L/R	5260162550	Elec. 10μF 16V
C733L/R	5172207000	Ceramic 39pF 50V
C734L/R	5170370000	Mylar 0.0056μF 100V 5%
C735L/R	5170368000	Mylar 0.0047μF 100V 5%
C736L/R	5260162050	Elec. 4.7μF 35V
C737L/R	5263167823	Meta. 0.082μF 50V 5%
C738L/R	5260220650	Elec. 0.15μF 50V (LL)
C739L/R	5260220950	Elec. 0.47μF 50V (LL)
C740L/R	5260162550	Elec. 10μF 16V
C741	5260162550	Elec. 10μF 16V

REF. NO.	PARTS NO.	DESCRIPTION
C742~C744	5260166852	Elec. 220μF 10V
C745	5260162550	Elec. 10μF 16V
C746	5260166852	Elec. 220μF 10V
VARIABLE RESISTORS		
All resistors are semi-fixed type.		
RV601L/R	5150233000	20kΩ(B)
RV602L/R	5150094000	50kΩ(B) (V-800X, V-700)
RV603L/R	5150233000	20kΩ(B)
RV604L/R	5150094000	50kΩ(B)
RV605	5150153000	5kΩ(B)
RV606	5150153000	5kΩ(B)
COILS		
L601L/R	5760563800	Bias Trap
L602L/R	5760563900	Peaking 22mH (V-800X, V-700)
L603L/R	5760564000	Choke 8.2mH (V-800X, V-700)
L701L/R	5760564100	Peaking
L702L/R	5760564100	Peaking
CONNECTORS		
P601, P602	5760564600	8P (V-900X, V-800X)
P603	5760564700	2P
P604	5760564800	5P
P605	5760563200	3P
P606	5760557500	4P
P607	5760563200	3P
P608	5760564700	2P
P609	5760557700	10P
P610	5760563200	3P
P611	5122130000	Plug, 6P (V-800X, V-700)
P612	5122127000	Plug, 3P (V-800X, V-700)
P613	5760564700	2P (V-900X)
P614, P615	5760564700	2P (V-800X, V-700)
P616, P617	5760563200	3P
P618	5760564700	2P
P619	5122130000	Plug, 6P
P620	5760563200	3P (V-900X)
MISCELLANEOUS		
FL701L/R	5760563700	L.P. Filter
OSC601	5760564200	Bias OSC Block (V-800X, V-700)

dbx NR PCB ASSY (V-900X, V-800X)

REF. NO.	PARTS NO.	DESCRIPTION
	*5760554400	PCB Assy
	5760566500	PCB
IC's		
U701L/R	5220414501	μPC1252H2
U702L/R	5220414601	μPC1253H2
U703L/R	5220414501	μPC1252H2
U704L/R	5220414601	μPC1253H2
U705, U706	5042738000	NJM4558D
TRANSISTORS		
Q701L/R	5232007200	FET 2SK364BL
Q702L/R	*5760558600	Chip 2SD601A
Q703L/R	*5760558600	Chip 2SD601A
Q704L/R	*5760558600	Chip 2SD601A
Q705L/R	*5760558600	Chip 2SD601A
DIODES		
D701L/R	5224015020	1SS133T
RESISTORS		
All resistors are rated ±5% tolerance, 1/8 watt and are chip type unless otherwise noted.		
R701L/R	*5760559000	1MΩ
R702L/R	*5760559900	100Ω
R703L/R	*5760560000	30kΩ
R704L/R	*5760560200	120kΩ
R705L/R	*5760560100	5.6kΩ
R706L/R	*5760560500	33kΩ
R707L/R	*5760559200	10kΩ
R708L/R	*5760560300	56kΩ
R709L/R	*5760560400	27Ω
R710L/R	*5760558700	12kΩ
R711L/R	*5760560600	22Ω
R712L/R	*5760560600	22Ω
R713L/R	*5760559200	10kΩ
R714L/R	*5760560700	3.9kΩ
R715L/R	*5760559200	10kΩ
R716L/R	*5760560500	33kΩ
R717L/R	*5760559900	100Ω
R718L/R	*5760559200	10kΩ
R719L/R	*5760560500	33kΩ
R720L/R	*5760560800	4.7kΩ
R721L/R	*5760560900	91kΩ
R722L/R	*5760560500	33kΩ
R723L/R	*5760561000	6.8kΩ
R724L/R	*5760560800	4.7kΩ
R725L/R	*5760561100	270kΩ
R726L/R	*5760561200	3.3kΩ
R727L/R	*5760560500	33kΩ
R728L/R	*5760560600	22Ω
R729L/R	*5760561300	39kΩ
R730L/R	*5760561500	22kΩ
R731L/R	*5760561600	1kΩ
R732L/R	*5240319000	22MΩ
R733L/R	*5760576300	10Ω
R734L/R	*5760576400	750kΩ
R735L/R	*5760559000	1MΩ

1/2W Carbon

Parts marked with * require longer delivery time.

REF. NO.	PARTS NO.	DESCRIPTION
R736L/R	*5760560000	30kΩ
R737L/R	*5760559900	100Ω
R738L/R	*5760560200	120kΩ
R739L/R	*5760560100	5.6kΩ
R740L/R	*5760560500	33kΩ
R741L/R	*5760559200	10kΩ
R742L/R	*5760560300	56kΩ
R743L/R	*5760560400	27Ω
R744L/R	*5760560600	22Ω
R745L/R	*5760558700	12kΩ
R746L/R	*5760559200	10kΩ
R747L/R	*5760560600	22Ω
R748L/R	*5760560700	3.9kΩ
R749L/R	*5760559200	10kΩ
R750L/R	*5060560500	33kΩ
R751L/R	*5760559900	100Ω
R752L/R	*5760559200	10kΩ
R753L/R	*5760560900	91kΩ
R754L/R	*5760560500	33kΩ
R755L/R	*5760560800	4.7kΩ
R756L/R	*5760560500	33kΩ
R757L/R	*5760561000	6.8kΩ
R758L/R	*5760560800	4.7kΩ
R759L/R	*5760561100	270kΩ
R760L/R	*5760560500	33kΩ
R761L/R	*5760561200	3.3kΩ
R762L/R	*5760560600	22Ω
R763L/R	*5760561300	39kΩ
R764L/R	*5760561500	22kΩ
R765L/R	*5760561600	1kΩ
R766L/R	*5760576300	10Ω
R767L/R	5240319000	22MΩ
R768L/R	*5760576400	750kΩ
R769L/R	*5760559000	1MΩ
CAPACITORS		
C701L/R	5260160750	Elec. 1μF 50V
C702L/R	5263167923	Meta. 0.1μF 50V 5%
C703L/R	5263167923	Meta. 0.1μF 50V 5%
C704L/R	5263169523	Meta. 0.3μF 50V 5%
C705L/R	5263106120	Poly. 200pF 100V 5%
C706L/R	5172212000	Ceramic 100pF 50V
C707L/R	5171856000	Mylar 0.01μF 100V 5%
C708L/R	5260066550	Elec. 4.7μF 35V (BP)
C709L/R	5263167923	Meta. 0.1μF 50V 5%
C710L/R	5263167923	Meta. 0.1μF 50V 5%
C711L/R	5170364000	Mylar 0.0033μF 100V 5%
C712L/R	5170364000	Mylar 0.0033μF 100V 5%
C713L/R	5172218000	Ceramic 330pF 50V
C714L/R	5263167923	Meta. 0.1μF 50V 5%
C715L/R	5171856000	Mylar 0.01μF 100V 5%
C716L/R	5260160750	Elec. 1μF 50V
C717L/R	5260162550	Elec. 10μF 16V
C718L/R	5260227010	Elec. 10μF 35V (LL)
C719L/R	5263167923	Meta. 0.1μF 50V 5%
C720L/R	5263167923	Meta. 0.1μF 50V 5%
C721L/R	5263169523	Meta. 0.3μF 50V 5%
C722L/R	5171856000	Mylar 0.01μF 100V 5%
C723L/R	5172212000	Ceramic 100pF 50V
C724L/R	5172212000	Ceramic 100pF 50V
C725L/R	5263167923	Meta. 0.1μF 50V 5%

REF. NO.	PARTS NO.	DESCRIPTION
C726L/R	5260066550	Elec. 4.7μF 35V (BP)
C727L/R	5263167923	Meta. 0.1μF 50V 5%
C728L/R	5170364000	Mylar 0.0033μF 100V 5%
C729L/R	5170364000	Mylar 0.0033μF 100V 5%
C730L/R	5172218000	Ceramic 330pF 50V
C731L/R	5263167923	Meta. 0.1μF 50V 5%
C732L/R	5171856000	Mylar 0.01μF 100V 5%
C733L/R	5260160750	Elec. 1μF 50V
C734L/R	5260162550	Elec. 10μF 16V
C735L/R	5260227010	Elec. 10μF 35V (LL)
C740, C741	5260165252	Elec. 47μF 25V
VARIABLE RESISTORS		
RV701L/R	5150156000	Semi-fixed, 50kΩ (B)
RV702L/R	5150154000	Semi-fixed, 10kΩ (B)
RV703L/R	5150156000	Semi-fixed, 50kΩ (B)
RV704L/R	5150156000	Semi-fixed, 50kΩ (B)
RV705L/R	5150154000	Semi-fixed, 10kΩ (B)
RV706L/R	5150156000	Semi-fixed, 50kΩ (B)
CONNECTORS		
P701, P702	5760566600	8P

Parts marked with * require longer delivery time.

AUTO CAL PCB ASSY (V-900X)

REF. NO.	PARTS NO.	DESCRIPTION
	*5760571600	PCB Assy
	5760572100	PCB
	IC's	
U601	5760572700	TC9153
U602	5042738000	NJM4558D
U603	5760572800	HA12035
U604	5042738000	NJM4558D
U605	5760572900	HD44801B58
U606	5760573000	TC4053BP
U607~U609	5042738000	NJM4558D
TRANSISTORS		
Q601 ~ Q606	5145091000	2SC945AK
Q607 ~ Q609	5042553000	2SA733P
Q610L/R	5145091000	2SC945AK
Q611L/R	5145091000	2SC945AK
Q612L/R	5230775000	2SC2878B
Q613L/R	5145091000	2SC945AK
Q614L/R	5145091000	2SC945AK
Q615L/R	5145091000	2SC945AK
Q616~Q618	5145091000	2SC945AK
Q619	5042475000	2SC1384Q
Q620	5145043000	2SA720Q
Q621	5145091000	2SC945AK
Q622	5145043000	2SA720Q
Q623	5145091000	2SC945AK
Q624	5042475000	2SC1384Q
Q625~Q633	5145091000	2SC945AK
Q634	5042553000	2SA733P
Q635	5145091000	2SC945AK
Q636	5042553000	2SA733P
Q637	5145091000	2SC945AK
DIODES		
D601, D602	5224540910	Zener RD6.2EB2
D603~D607	5224015020	1SS133T
D608	5224545001	Zener RD22EB2
D609~D615	5224015020	1SS133T
D616, D617	5224539501	Zener RD3.9EB2
CARBON RESISTORS		
All resistors are rated $\pm 5\%$ tolerance and 1/4 watt unless otherwise noted.		
R6A0	5181530000	100k Ω
R6A1, R6A2	5181514000	22k Ω
R6A3L/R	5181530000	100k Ω
R6A4, R6A5	5181514000	22k Ω
R6A6	5181464000	180 Ω
R6A7, R6A8	5181474000	470 Ω
R6B1L/R	5181478000	680 Ω
R6B2, R6B3	5181498000	4.7k Ω
R6B4	5181554000	1M Ω
R6B5	5181514000	22k Ω
R6B7	5181512000	18k Ω
R6B8	5181458000	100 Ω
R6C1	5181522000	47k Ω
R6C2	5181506000	10k Ω
R6C3	5181530000	100k Ω

REF. NO.	PARTS NO.	DESCRIPTION
R6C4	5181506000	10k Ω
R6C5	5181518000	33k Ω
R6C7	5181490000	2.2k Ω
R6C8, R6C9	5181498000	4.7k Ω
R6D0	5181498000	4.7k Ω
R6D1	5181506000	10k Ω
R6D2	5181530000	100k Ω
R6D3	5181506000	10k Ω
R6D5L/R	5181490000	2.2k Ω
R6D6	5181530000	100k Ω
R601	5181530000	100k Ω
R602	5181522000	47k Ω
R603	5181554000	1M Ω
R604, R605	5181482000	1k Ω
R606L/R	5181514000	22k Ω
R607	5181516000	27k Ω
R608	5181492000	2.7k Ω
R609	5181480000	820 Ω
R610L/R	5181510000	15k Ω
R611L/R	5181504000	8.2k Ω
R612L/R	5181476000	560 Ω
R613L/R	5181504000	8.2k Ω
R614L/R	5181522000	47k Ω
R615L/R	5181502000	6.8k Ω
R616	5181494000	3.3k Ω
R617	5181533000	130k Ω
R618	5181522000	47k Ω
R619, R620	5181506000	10k Ω
R621, R622	5181522000	47k Ω
R623, R624	5181506000	10k Ω
R625, R626	5181522000	47k Ω
R627, R628	5181506000	10k Ω
R629	5181522000	47k Ω
R630	5181452000	56 Ω
R631, R632	5181522000	47k Ω
R633	5181530000	100k Ω
R634	5181506000	10k Ω
R635	5181510000	15k Ω
R636	5181442000	22 Ω
R637	5181488000	1.8k Ω
R638, R639	5181528000	82k Ω
R640, R641	5181506000	10k Ω
R642	5181506000	10k Ω
R643, R644	5181500000	5.6k Ω
R645	5181522000	47k Ω
R646L/R	5181510000	15k Ω
R647L/R	5181514000	22k Ω
R648L/R	5181500000	5.6k Ω
R649L/R	5181500000	5.6k Ω
R650L/R	5181518000	33k Ω
R651L/R	5181510000	15k Ω
R653L/R	5181520000	39k Ω
R654L/R	5181520000	47k Ω
R655L/R	5181462000	150 Ω
R656L/R	5181492000	2.7k Ω
R657L/R	5181498000	4.7k Ω
R658L/R	5181500000	5.6k Ω
R659L/R	5181510000	15k Ω
R660L/R	5181500000	5.6k Ω
R661L/R	5181506000	10k Ω

Parts marked with * require longer delivery time.

REF. NO.	PARTS NO.	DESCRIPTION
R662L/R	5181500000	5.6 kΩ
R666	5181514000	22 kΩ
R667	5181506000	10 kΩ
R668	5181514000	22 kΩ
R669	5181498000	4.7 kΩ
R670	5181502000	6.8 kΩ
R671	5181510000	15 kΩ
R672	5181518000	33 kΩ
R673	5181502000	6.8 kΩ
R674	5181514000	22 kΩ
R675	5181548000	560 kΩ
R676	5181541000	300 kΩ
R677	5180078000	680 Ω 1/2W
R678	5181522000	47 kΩ
R679	5181506000	10 kΩ
R680	5181514000	22 kΩ
R681	5181522000	47 kΩ
R682, R683	5181506000	10 kΩ
R684	5181530000	100 kΩ
R685	5181506000	10 kΩ
R686	5181450000	47 Ω
R687	5181506000	10 kΩ
R688	5180082000	1 kΩ 1/2W
R689	5181498000	4.7 kΩ
R690, R691	5181514000	22 kΩ
R692	5181458000	100 Ω
R694	5181482000	1 kΩ
R695	5181550000	680 kΩ
R696	5181542000	330 kΩ
R697	5181490000	2.2 kΩ
R698	5181530000	100 kΩ
R699	5181514000	22 kΩ
CAPACITORS		
C601L/R	5260162050	Elec. 4.7 μF 35V
C602, C603	5260165252	Elec. 47 μF 25V
C604L/R	5260160750	Elec. 1 μF 50V
C605L/R	5260162550	Elec. 10 μF 16V
C606L/R	5260162050	Elec. 4.7 μF 35V
C607 ~ C611	5260162550	Elec. 10 μF 16V
C612L/R	5260162550	Elec. 10 μF 16V
C613L/R	5260162550	Elec. 10 μF 16V
C614L/R	5170368000	Mylar 0.0047 μF 100V
C615, C616	5260166052	Elec. 100 μF 16V
C617L/R	5260162550	Elec. 10 μF 16V
C619L/R	5260162550	Elec. 10 μF 16V
C620L/R	5171872000	Mylar 0.047 μF 100V
C621L/R	5170368000	Mylar 0.0047 μF 100V
C622L/R	5170358000	Mylar 0.0018 μF 100V
C623L/R	5260066550	Elec. 4.7 μF 35V (BP)
C625L/R	5170368000	Mylar 0.0047 μF 100V
C626L/R	5170362000	Mylar 0.0027 μF 100V
C627L/R	5172212000	Ceramic 100 pF 50V
C628L/R	5171856000	Mylar 0.01 μF 100V
C629L/R	5170360000	Mylar 0.0022 μF 100V
C633L/R	5760572200	Ceramic 100 pF 500V
C634	5260163452	Elec. 22 μF 25V
C635, C636	5260162050	Elec. 4.7 μF 35V
C637	5260163452	Elec. 22 μF 25V

REF. NO.	PARTS NO.	DESCRIPTION
C638, C639	5260166152	Elec. 100 μF 25V
C640	5260162550	Elec. 10 μF 16V
C641	5171868000	Mylar 0.033 μF 100V
C642	5260160750	Elec. 1 μF 50V
C643	5260165052	Elec. 47 μF 10V
C644	5760572300	Poly. 0.0068 μF 100V 2%
C645	5170364000	Mylar 0.0033 μF 100V
C646	5760572300	Poly. 0.0068 μF 100V 2%
C647	5260162050	Elec. 4.7 μF 35V
C648, C649	5260162550	Elec. 10 μF 16V
C650	5173430000	Ceramic 1000 pF 50V
C651	5172322000	Ceramic 680 pF 50V
C652	5263168523	Meta. 0.33 μF 50V
C653	5263168723	Meta. 0.47 μF 50V
C654, C655	5260166052	Elec. 100 μF 16V
C657	5760572400	Elec. 0.1 F 5.5V
C659	5173435000	Ceramic 0.047 μF 50V
C660	5170366000	Mylar 0.0039 μF 100V
VARIABLE RESISTORS		
RV601	5150096000	Semi-fixed, 100 kΩ (B)
RV602	5053446000	Semi-fixed, 1 kΩ (B)
RV603L/R	5150233300	Semi-fixed, 20 kΩ (B)
RV604L/R	5150094000	Semi-fixed, 50 kΩ (B)
RV605L/R	5150097000	Semi-fixed, 5 kΩ (B)
RV606	5150097000	Semi-fixed, 5 kΩ (B)
RV607L/R	5150233000	Semi-fixed, 20 kΩ (B)
COILS		
L601L/R	5760563900	Peaking, 22 mH
L602L/R	5760564000	Choke, 8.2 mH
L603L/R	5760572500	Choke, 3.6 mH
CONNECTORS		
P601	5760564700	2P
P602	5760563200	3P
P603	5760564800	5P
P605	5760563200	3P
P606	5122130000	Plug, 6P
P607	5760563200	3P
P608	5122127000	Plug, 3P
P609	5760565600	8P
MISCELLANEOUS		
OSC601	5760572600	OSC Block
X601	5347001100	Ceramic OSC, KBR-400B
TH1	5760573100	Thermistor, 10K

NR SW PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5760554600	PCB Assy (V-900X, V-800X)
	*5760554610	PCB Assy (V-700)
	5760557200	PCB
TRANSISTOR		
QS01	5145091000	2SC945AK
DIODES		
DS01~DS05	5224015020	1SS133T (V-900X, V-800X)
DS06	5224015020	1SS133T
DS07	5224015020	1SS133T (V-900X, V-800X)
DS08, DS09	5224015020	1SS133T (V-900X, V-800)
CARBON RESISTORS		
All resistors are rated $\pm 5\%$ tolerance and 1/8 watt.		
RS01~RS05	5240032220	47k Ω (V-900X, V-800X)
RS06~RS08	5240032220	47k Ω
RS09	5240031220	18k Ω
RS10	5240028220	1k Ω
MISCELLANEOUS		
SS01	5760557300	Push Switch (V-900X, V-800X)
	5760557400	Push Switch (V-700)
JS01	5760557500	Connector, 4P (V-700)
	5760557600	Connector, 6P (V-900X, V-800X)
JS02	5760557700	Connector, 10P

KEY SW PCB 1 ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5760567500	PCB Assy
	5760568600	PCB
LDC01	5760568900	LED, SLR34VR5F
LDC02	5760568900	LED, SLR34VR5F
LDC03	5760568900	LED, SLR34VR5F
LDC05	5760569000	LED, SLR34MG5F
SC01~SC08	5760568500	Switch, Key
CNS01	5760568700	Conn. Cord Assy
CNS02	5760568800	Conn. Cord Assy
	5760569100	Shield, SW
	5760569200	Barrier, SW

KEY SW PCB 2 ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5760567410	PCB Assy (V-900X)
	*5760567400	PCB Assy (V-800X, V-700)
	5760568200	PCB
SC20~SC22	5760568500	Switch, Key
SC23	5760568500	Switch, Key (V-900X)
SC24, SC25	5760568500	Switch, Key
SC26~SC28	5760568500	Switch, Key (V-900X)
CNS03	5760568400	Conn. Cord Assy (V-900X)
	5760568300	Conn. Cord Assy (V-800X, V-700)

VR PCB 1 ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5760567200	PCB Assy
	5760567700	PCB
VRV12	5760567800	Var. Res., 10k Ω (A) x 2
P004	5760564800	Connector, 5P

VR PCB 2 ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5760567310	PCB Assy (V-900X)
	*5760567300	PCB Assy (V-800X, V-700)
	5760567900	PCB
RV01	5240031020	Carbon Res. 15k Ω 1/8W 5% (V-800X, V-700)
VRV10	5760568100	Var. Res., 100k Ω (A) (V-900X)
	5760568000	Var. Res., 100k Ω (V-800X, V-700)
VRV11	5760568100	Var. Res., 100k Ω (A) (V-900X)
P014	5760564700	Connector, 2P (V-800X, V-700)
P116	5760556800	Connector, 3P (V-900X)
P121	5760563200	Connector, 3P (V-900X)

MONITOR SW PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5760554510	PCB Assy (V-900X)
	*5760554500	PCB Assy (V-800X, V-700)
	5760556700	PCB
SS05	5760557100	Push Switch (V-900X)
	5760557000	Push Switch (V-800X, V-700)
PS01	5760556900	Connector, 5P (V-900X)
	5760556800	Connector, 3P (V-800X, V-700)

PHONES PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5760564900	PCB Assy
	5760562500	PCB
C3	5173435000	Ceramic Cap., 0.047 μ F 50V
JZ01	5760562600	Jack, PHONES
P005	5760556800	Connector, 3P
	5760551500	Bracket, Jack

IN/OUTPUT PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5760556400	PCB Assy
	5760563000	PCB
RZ01L/R	5240029000	Carbon Res., 2.2k Ω 1/8W 5%
JZ01	5760563100	Jack, 4P
PZ01, PZ02	5760563200	Connector, 3P

Parts marked with * require longer delivery time.

MPX SW PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5760554700	PCB Assy
SS02	5760557800	PCB
PC01	5760558000	Push Switch
	5760557900	PC Joint

SW PCB L ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200132400	PCB Assy
	5210132400	PCB
	5301753100	Switch, Leaf

VR PCB 4 ASSY (V-900X)

REF. NO.	PARTS NO.	DESCRIPTION
	*5760573700	PCB Assy
VRV01	5760573900	PCB
LDV01	5760574200	Var. Res., Slide; 200k Ω (B)
LDV02	5760568900	LED, SLR34VR5F
SWV01	5760568900	LED, SLR34VR5F
SWV02	5760568500	Switch, Key
	5760568500	Switch, Key

SW PCB R ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200132500	PCB Assy
	5210132500	PCB
	5301753100	Switch, Leaf

MECHANISM PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200132601	PCB Assy
	5210132600	PCB
	IC	
U1	5220422100	NJM556D
RESISTORS		
All resistors are rated $\pm 5\%$ tolerance, 1/8 watt and are carbon type unless otherwise noted.		
R1, R2	5240031820	33k Ω
R3, R4	5240030620	10k Ω
R5	5240029420	3.3k Ω
R6	5240029320	3k Ω
R7	5181312000	18k Ω 1/4W
R8	5240032220	47k Ω
R9	5240029220	2.7k Ω
R13	5242115901	10k Ω 2000 ppm Temperature Sensitive
CAPACITORS		
C1	5260065850	Elec. 2.2 μ F 50V (BP)
C2	5260165952	Elec. 100 μ F 10V
C3	5263100720	Poly. 0.0012 μ F 100V 5%
C4	5263166723	Meta. 0.01 μ F 50V 5%
C5	5171864000	Mylar 0.022 μ F 100V 5%
C6	5263166723	Meta. 0.01 μ F 50V 5%
VARIABLE RESISTORS		
R10	5280003302	Semi-fixed, 5k Ω (B)
R11	5280003602	Semi-fixed, 20k Ω (B)
R12	5282010800	10k Ω (B)
MISCELLANEOUS		
L1	5286006700	Coil, Choke; 1.2 mH
P1	5122149000	Connector, Plug; 6P
P2	5122153000	Connector, Plug; 10P

SENSOR PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200107700	PCB Assy
Q1, Q2	5210107700	PCB
	5228008300	Photo Transistor, PH-102K

VR PCB 3 ASSY (V-800X, V-700) (PC Board Omitted)

REF. NO.	PARTS NO.	DESCRIPTION
	*5760567600	PCB Assy
VRV01	5760569300	PCB
CNV03	5284006500	Var. Res., Slide; 100k Ω (A) x 2
CNV04	5760569400	Conn. Cord Assy
	5760569500	Conn. Cord Assy
	5760569600	Shield, Slide VR
	5760569700	Barrier

POWER SW PCB ASSY (PC Board Omitted)

REF. NO.	PARTS NO.	DESCRIPTION
	*5760556500	PCB Assy [J, US, C]
	*5760556510	PCB Assy [GE, E, UK, A]
	5760563300	PCB
SS801	△5300031900	Switch, Push
CS801	△5760563400	Mylar Cap., 0.047 μ F 125V [J, US, C]
CS801	△5760563500	Mylar Cap., 0.01 μ F 250V [GE, E, UK, A]

Parts marked with * require longer delivery time.

[US]: U.S.A. [C]: CANADA
[A]: AUSTRALIA [J]: JAPAN

[GE]: GENERAL EXPORT


[E]: EUROPE

[UK]: U.K.


8 IC BLOCK DIAGRAMS

ICブロック・ダイアグラム


MB8841H-1248

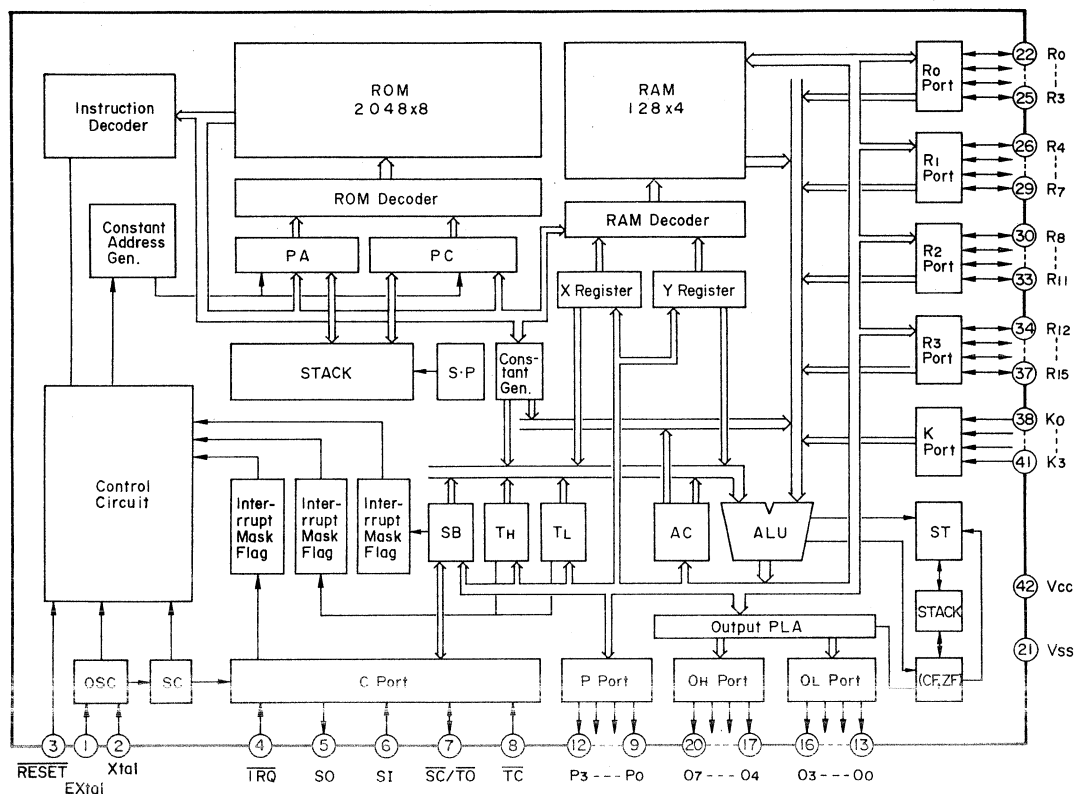


MSL9359RS

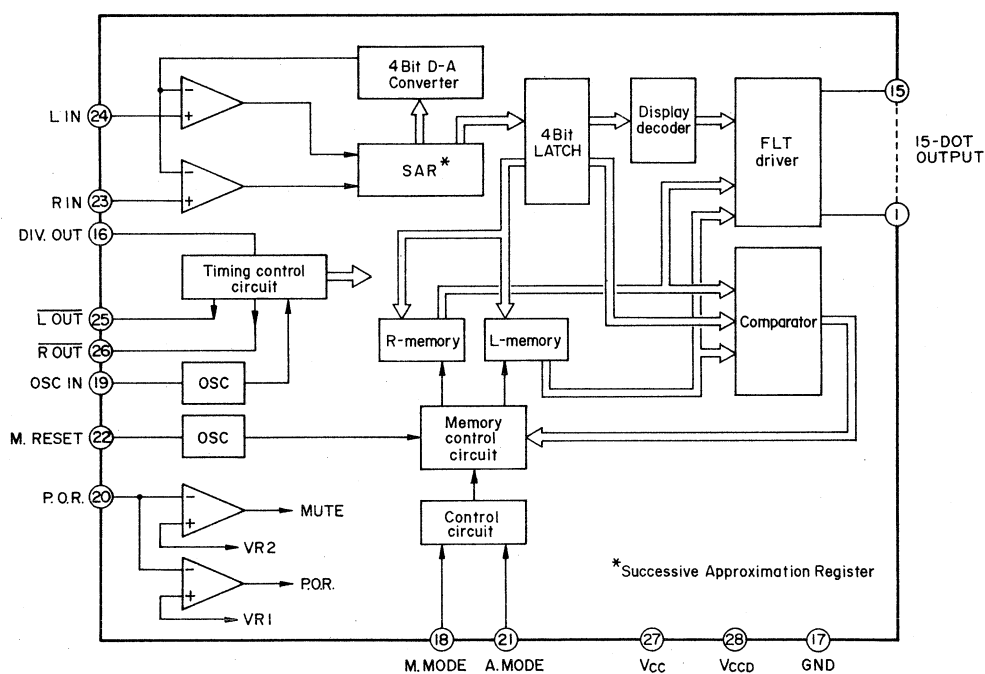


TC9153P

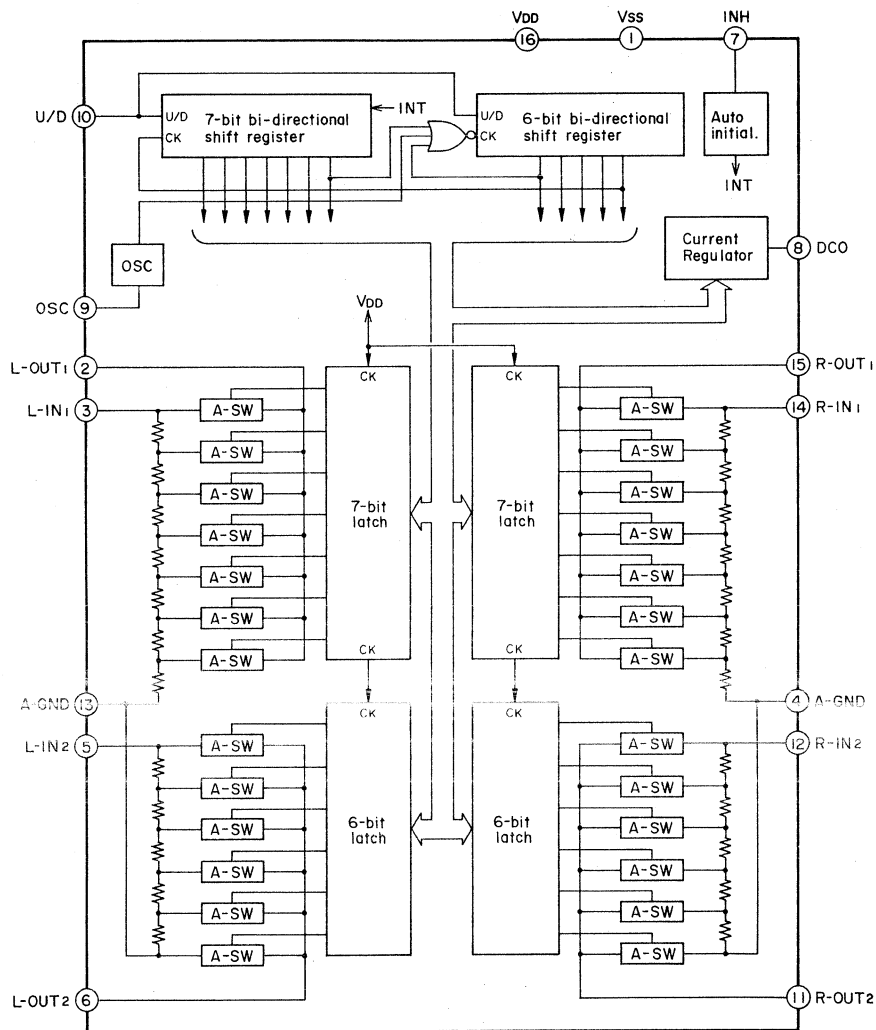


HA12035
(TOP VIEW)

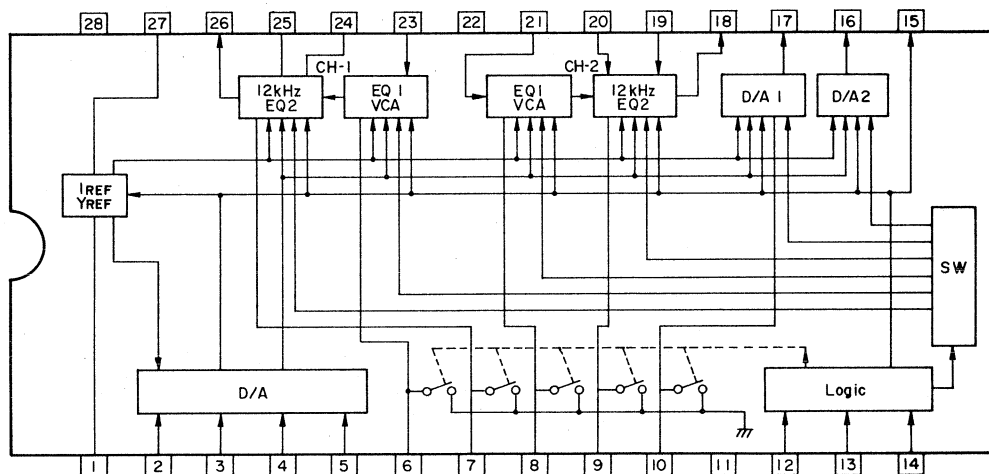


TA7318P

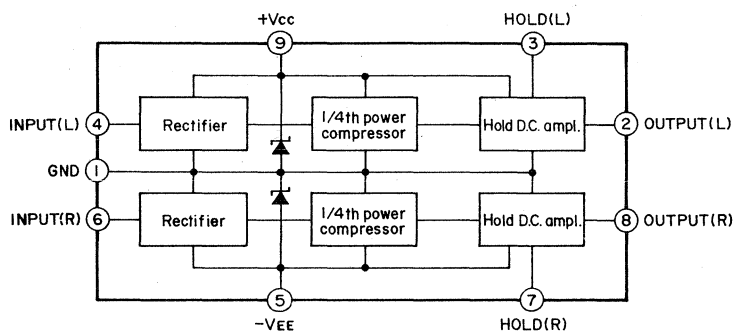


LA2000

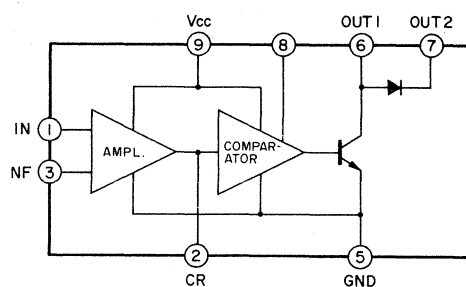


TC4053BP

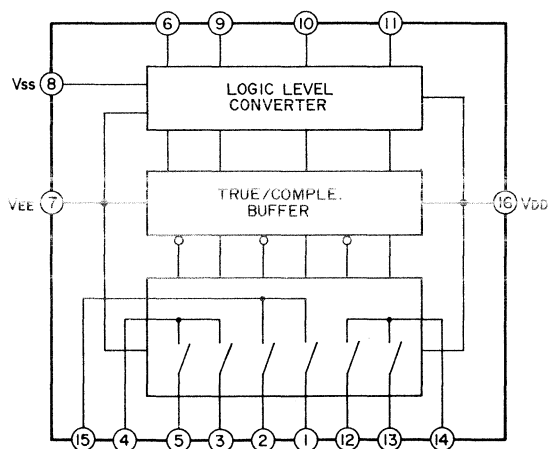


NJM556D
(TOP VIEW)

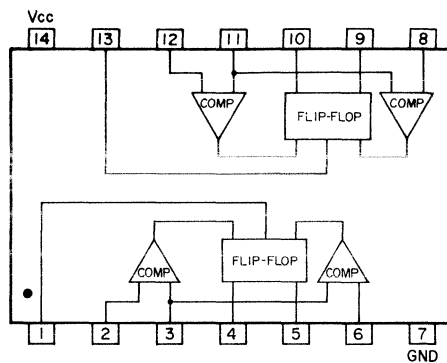


μ PC1252H2

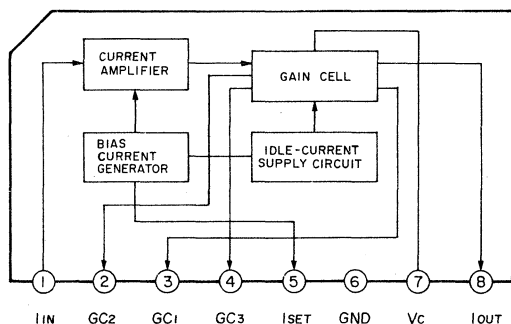


μ PC1253H2

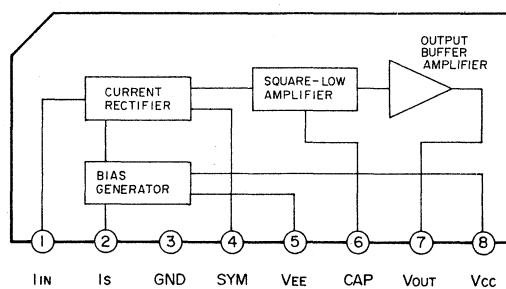


MSL912RS
(TOP VIEW)

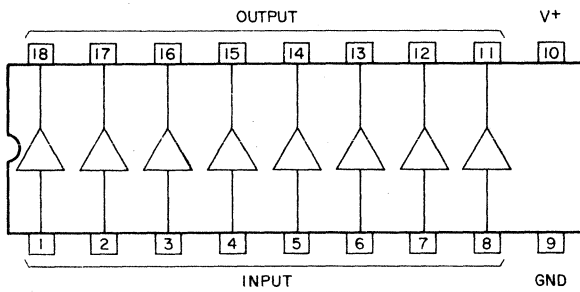


NJM4558D
(TOP VIEW)

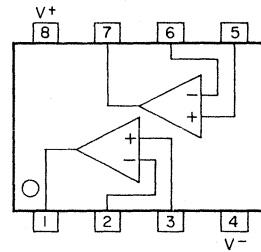


M54560P
(TOP VIEW)

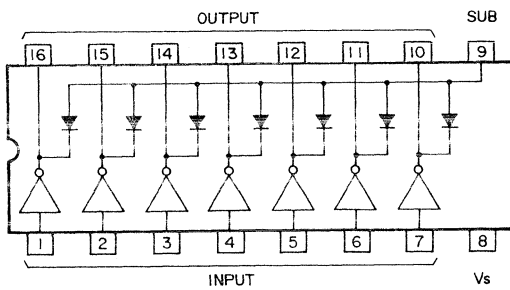


BA618
(TOP VIEW)

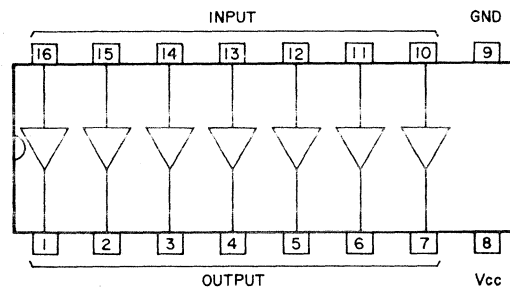

M5218L
M5219L
M5220L

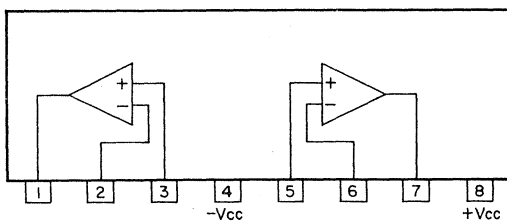

M54545L

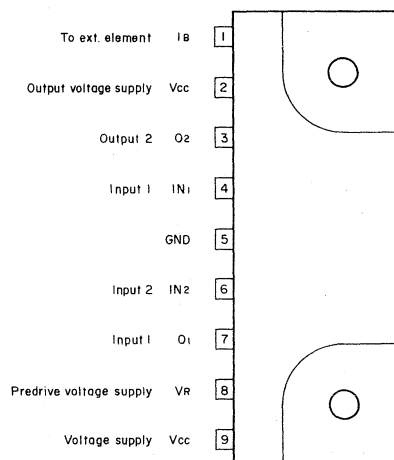

V-900X/V-800X/V-700

TEAC®

ティアック株式会社

本社
営業部

180・東京都武蔵野市中町3-7-3

電話 武蔵野 (0422) 53-1111代

製品についてのお問い合わせ
サービスに関するお問い合わせ

札幌営業所	064・札幌市中央区南7条西2-2	くぼたビル	電話 札幌 (011) 521-4101代
仙台営業所	980・仙台市1番町2-5-5	中央ビル	電話 仙台 (0222) 27-1501代
大宮営業所	330・大宮市桜木町4-2	ローズベイ大宮ビル	電話 大宮 (0486) 42-4551代
東京営業所	100・東京都千代田区永田町2-10-7	星ガ岡会館	電話 東京 (03) 592-1831代
千代田営業所	100・東京都千代田区永田町2-10-7	星ガ岡会館	電話 東京 (03) 592-1836代
千葉出張所	280・千葉市松波1-11-3	石橋松波ビル	電話 千葉 (0472) 55-1281代
立川営業所	190・東京都立川市栄町4-13-2		電話 立川 (0425) 25-4721代
横浜営業所	221・横浜市神奈川区沢渡1-1	高島台第一ビル	電話 横浜 (045) 312-3270代
名古屋営業所	464・名古屋市千種区東山通り3-2-3		電話 名古屋 (052) 782-4581代
静岡出張所	420・静岡市中島大割2-8-6	1-1	電話 静岡 (0542) 81-6561代
大阪営業所	564・大阪府吹田市垂水町3-34-10		電話 大阪 (06) 384-5201代
京都出張所	600・京都市下京区大宮通四条下ル四条大宮町21番地	三虎ビル	電話 京都 (075) 842-0751代
神戸出張所	650・神戸市中央区山本通り3-1-3	谷ロマンション内	電話 神戸 (078) 242-2458代
岡山出張所	700・岡山市十日市中町1番40号		電話 岡山 (0862) 25-8601代
広島営業所	733・広島市中区中島町10-24		電話 広島 (082) 243-3581代
福岡営業所	812・福岡市博多区博多駅東2-17-5	モリメンビル	電話 福岡 (092) 431-5781代

サービスに関するお問い合わせ

本社サービス1課	180・東京都武蔵野市中町3-7-3	電話 武蔵野 (0422) 53-3242代
沖縄サービスセンター	901-22・沖縄県宜野湾市字喜友名2-2-9	電話 沖縄 (09889) 2-2020代

技術的なお問い合わせ

テープデッキ相談室	180・東京都武蔵野市中町3-7-3	電話 武蔵野 (0422) 53-9213代
-----------	--------------------	------------------------

TEAC CORPORATION

3-7-3 NAKA-CHO MUSASHINO TOKYO PHONE (0422) 53-1111

TEAC CORPORATION OF AMERICA

7733 TELEGRAPH ROAD MONTEBELLO CALIFORNIA 90640 PHONE (213) 726-0303


TEAC AUSTRALIA PTY., LTD.

115 WHITEMAN STREET SOUTH MELBOURNE VICTORIA 3205 PHONE 699-6000

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
1 - 1	*5760549700	Cover, Top (V-900X, V-800X)	
	5760549600	Cover, Top (V-700)	
1 - 2	*5760551000	Bracket, Mechanism; L	
1 - 3	*5760551100	Bracket, Mechanism; R	
1 - 4	*5760552300	Plate, Contact	
1 - 5	5760573500	Cover Assy, Cassette (V-900X)	
	5760566900	Cover Assy, Cassette (V-800X)	
	5760575200	Cover Assy, Cassette (V-700)	
1 - 6	5760546800	Frame, Cassette	
1 - 7	5760546700	Window, Cassette; B (V-900X, V-800X)	
	5760546600	Window, Cassette; A (V-700)	
1 - 8	5760546200	Crip, Window; L	
1 - 9	5760546300	Crip, Window; R	
1 -10	*5760556600	Cushion, PCB	
1 -11	*5760551300	Foot	
1 -12	*5760550600	Cover, Bottom	
1-13	*5760576100	Spacer, Mechanism Chassis	

Parts marked with * require longer delivery time.


EXPLODED VIEW-2

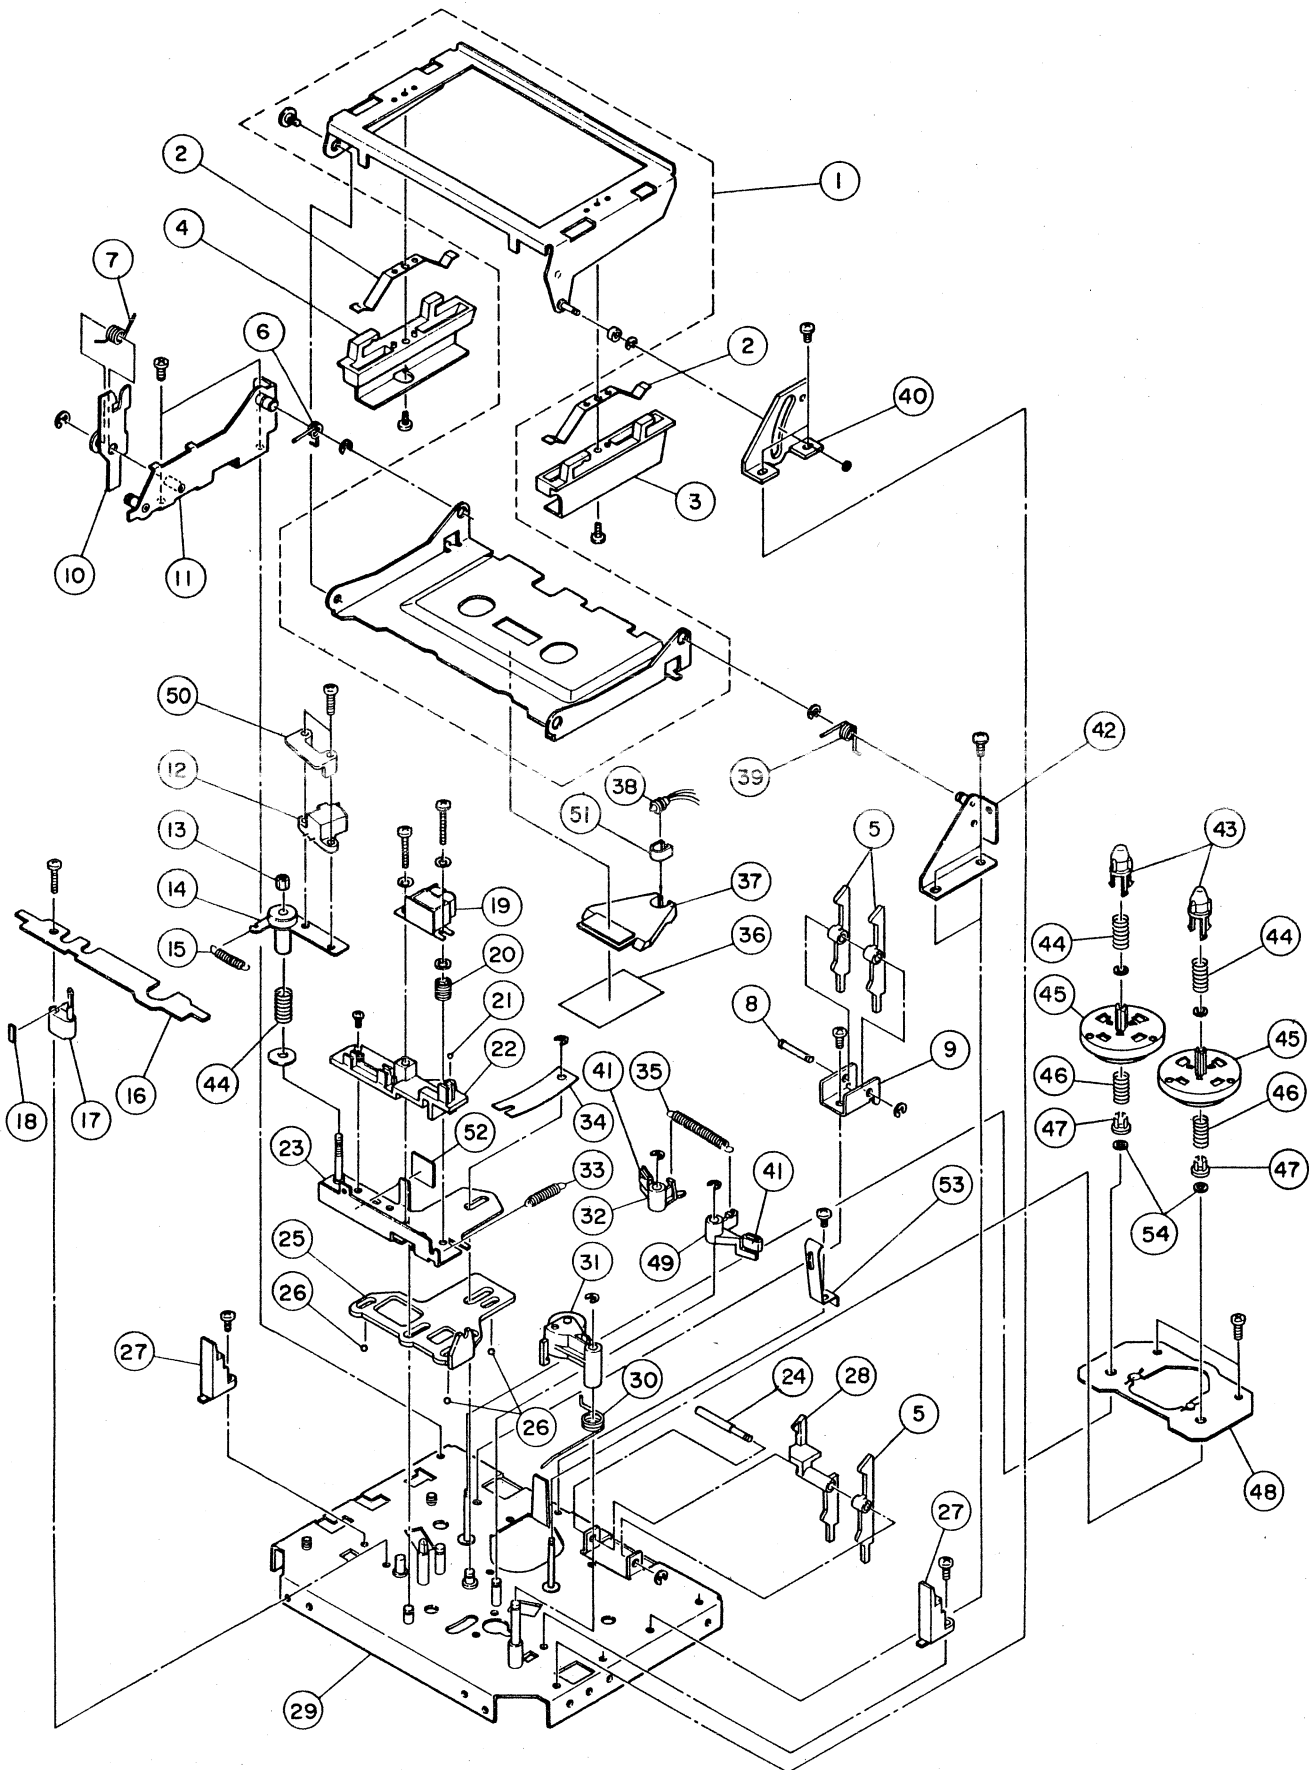

REF. NO.	PARTS NO.	DESCRIPTION	COMMON MODELS	REMARKS
2 - 1	*5800531100	Holder Assy, Cassette		
2 - 2	5800455200	Spring, Cassette Pressure	Z-5000	
2 - 3	5800122100	Holder, R	V-9	
2 - 4	5800109600	Holder, L	V-9	
2 - 5	*5800530800	Arm, Sensor; A		
2 - 6	5800115500	Spring, Holder; L	V-9	
2 - 7	5800448200	Spring, Lock	Z-5000	
2 - 8	*5800529600	Shaft, Arm; L		
2 - 9	*5800530700	Bracket, Sensor Arm		
2 -10	*5800530500	Arm, Lock; B		
2 -11	*5800441400	Bracket Assy, Holder; L	Z-5000	
2 -12	5569613000	Head, Erase	C-3	
2 -13	*5781953000	Nut, M3		
2 -14	*5800234601	Bracket Assy, Erase Head	V-1RX	
2 -15	5800519001	Spring, Erase Head	Z-5000	
2 -16	*5800237801	Cover, Head; B	V-1RX	
2 -17	5800235100	Holder, Pad	V-80	
2 -18	5800235201	Pad, Head	V-80	
2 -19	5378902700	Head, R/P (V-900X)		
	5378901300	Head, R/P (V-800X, V-700)	V-1RX	
2 -20	5800114700	Spring, Head	V-9	
2 -21	5540055000	Ball, Steel; $\phi 2$	A-450	
2 -22	*5800238302	Holder, Head; B	V-70C	
2 -23	*5800442400	Plate Sub-assy, Head Base	Z-5000	
2 -24	*5800529700	Shaft, Sensor Arm; R		
2 -25	*5800122802	Plate, Slider	V-9	
2 -26	5540056000	Ball, Steel; $\phi 3$	A-450	
2 -27	*5800117400	Guide, Cassette	V-9	
2 -28	*5800530900	Arm, Sensor; B		
2 -29	*5800531000	Chassis Assy, Mechanism		
2 -30	5800461802	Spring, Pinch Roller Arm (V-900X)	Z-5000	
	5800556501	Spring, Pinch Roller Arm; B (V-800X, V-700)		
2 -31	5800239002	Arm Assy, Pinch Roller; B	V-1RX	
2 -32	*5800439601	Arm, Brake; L	Z-5000	
2 -33	5800455100	Spring, Base Arm	Z-5000	
2 -34	*5800235700	Spring, Head Base Pressure; B	V-1RX	
2 -35	5800445800	Spring, Brake	Z-5000	
2 -36	*5800452700	Paper, Reflector	Z-5000	
2 -37	*5800441801	Lens, Cassette	Z-5000	
2 -38	5310006500	Lamp, DC12V		
2 -39	5800115600	Spring, Holder; R	V-9	
2 -40	*5800442201	Bracket, Holder Guide; B	Z-5000	
2 -41	*5800439800	Shoe, Brake	Z-5000	
2 -42	*5800441300	Bracket Assy, Holder; R	Z-5000	
2 -43	5800236501	Ring, Drive	V-70C	
2 -44	5800231300	Spring, Reel	V-70C	
2 -45	5800530200	Table Assy, Reel		
2 -46	5800481901	Spring, Back Tension	Z-5000	
2 -47	5800231500	Holder, Spring	V-70C	
2 -48	*5200107700	PCB Assy, SENSOR	Z-5000	
	5228008300	Photo Transistor, PH-102K		
2 -49	*5800439701	Arm, Brake; R	Z-5000	
2 -50	*5800468400	Cover, Erase Head	Z-5000	
2 -51	*5800423302	Filter	Z-6000	
2 -52	*5800520000	Stopper, Erase Head; B	Z-5000	
2 -53	*5800115002	Spring, Cassette Pressure	V-9	
2 -54	5800539800	Washer, Teflon; $\phi 1.7 \times \phi 4 \times t0.3$		

Parts marked with * require longer delivery time.


EXPLODED VIEW-3 (V-900X)

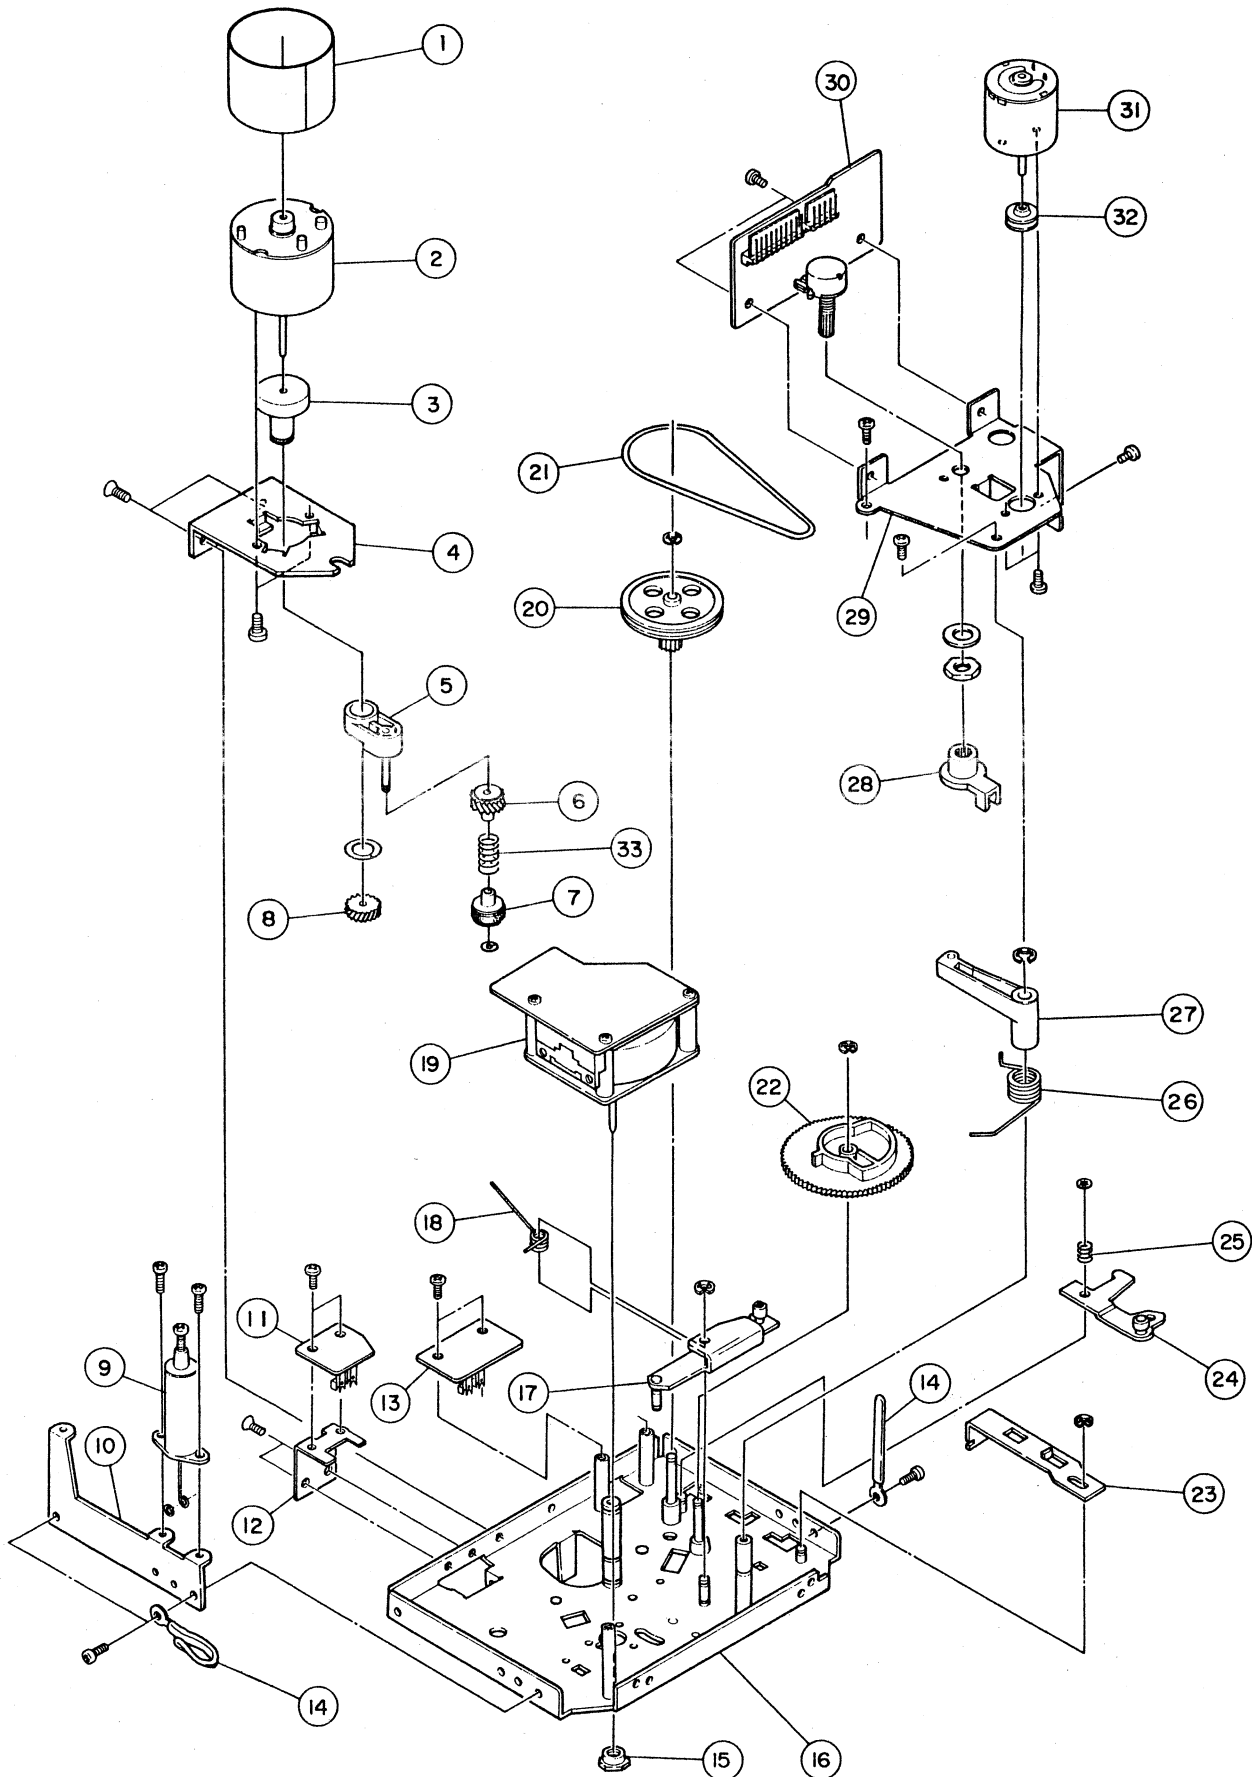

REF. NO.	PARTS NO.	DESCRIPTION	COMMON MODELS	REMARKS
3 - 1	*5800235900	Plate, Shield	V-1RX	
3 - 2	5370002502	Motor, Reel; DC	V-70C	
3 - 3	5800461700	Shaft, Pulley Arm	Z-5000	
3 - 4	*5800430001	Plate, Reel Motor	V-66C	
3 - 5	5800461500	Arm Assy, Pulley	V-70C	
3 - 6	5800461600	Pulley Assy, Gear; B	V-70C	
3 - 7	5800430302	Pulley Assy	V-70C	
3 - 8	5800232500	Pulley, Gear; A	V-70C	
3 - 9	5800131802	Damper Assy	V-9	
3 -10	*5800441001	Bracket, Damper	Z-5000	
3 -11	*5200132500	PCB Assy, SWITCH; R		
3 -12	*5800530600	Bracket, PCB		
3 -13	*5200132400	PCB Assy, SWITCH; L		
3 -14	*5581038000	Clamper, Cord; A		
3 -15	*5800239200	Nut, Motor	V-1RX	
3 -16	*5800531000	Chassis Assy, Mechanism		
3 -17	*5800532800	Arm Assy, Head Base		
3 -18	*5800530101	Spring, Base Return; B		
3 -19	5370002303	Motor Assy, Capstan; DC	V-1RX	
3 -20	5800117200	Pulley, Speed Reduction	V-9	
3 -21	5800419200	Belt, Pulley	Z-6000	
3 -22	5800428901	Cam, Control	Z-6000	
3 -23	*5800440901	Lever, Eject	Z-5000	
3 -24	*5800439901	Arm Assy, Eject	Z-5000	
3 -25	5800446000	Spring, Eject Arm	Z-5000	
3 -26	5800453700	Spring, Balance Arm	Z-5000	
3 -27	*5800418900	Arm Assy, Balance	Z-6000	
3 -28	*5800418800	Joint	Z-6000	
3 -29	*5800531400	Bracket, Motor; B		
3 -30	*5200132600	PCB Assy, MECHANISM		
3 -31	5370001400	Motor, Control; DC	V-9	
3 -32	5800123300	Pulley, V	V-9	
3 -33	5800430200	Spring, Pulley	V-70C	

Parts marked with * require longer delivery time.


EXPLODED VIEW-4 (V-800X/V-700)

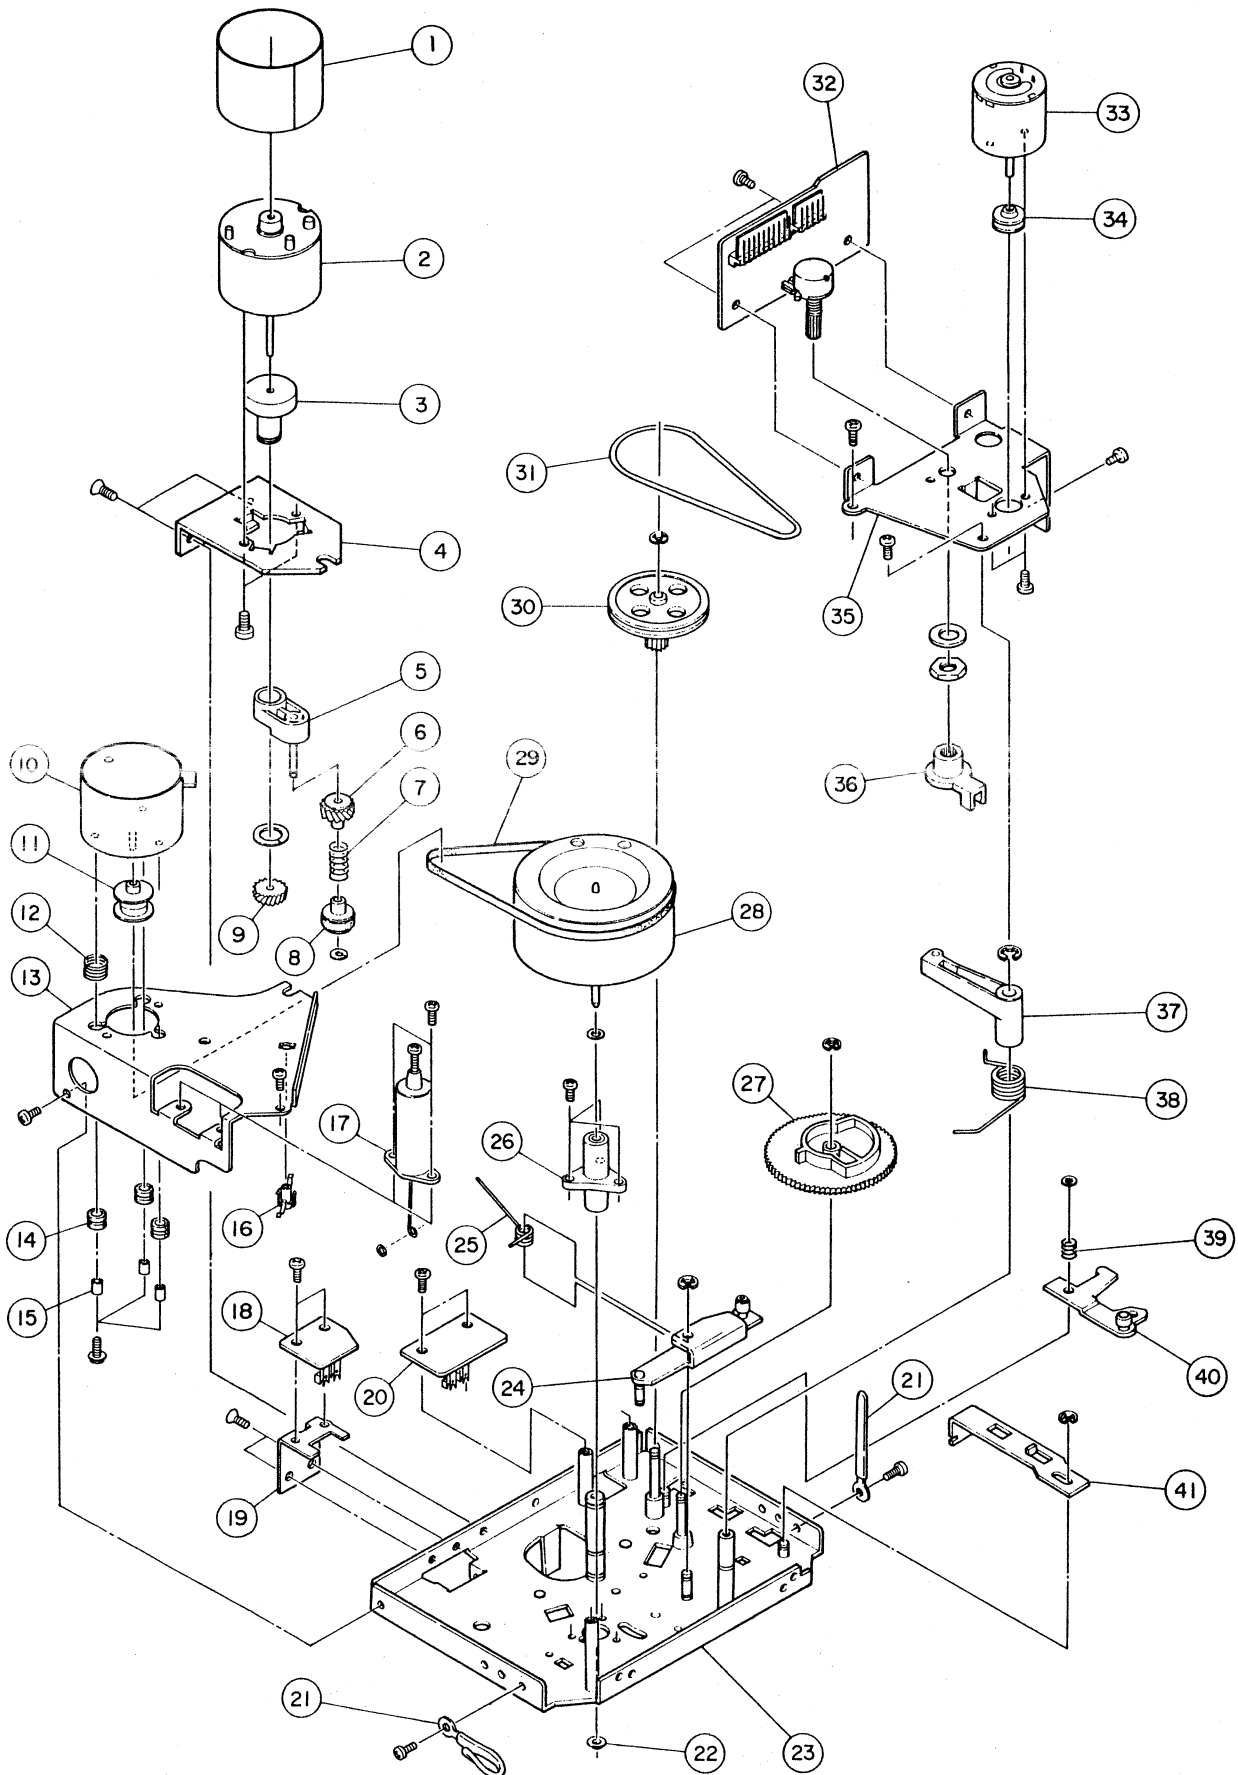

REF. NO.	PARTS NO.	DESCRIPTION	COMMON MODELS	REMARKS
4 - 1	*5800235900	Plate, Shield	V-1RX	
4 - 2	5370002502	Motor, Reel; DC	V-70C	
4 - 3	5800461700	Shaft, Pulley Arm	Z-5000	
4 - 4	*5800430001	Plate, Reel Motor	V-66C	
4 - 5	5800461500	Arm Assy, Pulley	V-70C	
4 - 6	5800461600	Pulley Assy, Gear; B	V-70C	
4 - 7	5800430200	Spring, Pulley	V-70C	
4 - 8	5800430302	Pulley Assy	V-70C	
4 - 9	5800232500	Pulley, Gear; A	V-70C	
4 -10	5370004200	Motor, Capstan; DC		
4 -11	5800232200	Pulley, Motor	V-70C	
4 -12	5800469800	Spring, Motor Earth	V-909RX	
4 -13	*5800531500	Bracket, Capstan Flywheel		
4 -14	*5534537000	Cushion, Rubber	A-206	
4 -15	*5785602650	Spacer, Cushion; $\phi 2.6 \times t5$		
4 -16	*5800236900	Bearing, Thrust	V-70C	
4 -17	5800131802	Damper Assy	V-9	
4 -18	*5200132500	PCB Assy, SWITCH; R		
4 -19	*5800530600	Bracket, PCB		
4 -20	*5200132400	PCB Assy, SWITCH; L		
4 -21	*5581038000	Clamper, Cord; A		
4 -22	5534130000	Cap, Oil Retainer	A-400	
4 -23	*5800531000	Chassis Assy, Mechanism		
4 -24	*5800532800	Arm Assy, Head Base		
4 -25	5800530101	Spring, Base Return; B		
4 -26	5800238800	Housing Assy, Capstan Flywheel	V-70C	
4 -27	5800428901	Cam, Control		
4 -28	5800556600	Flywheel Assy, Capstan		
4 -29	5800106900	Belt, Capstan Drive	V-9	
4 -30	5800117200	Pulley, Speed Reduction	V-9	
4 -31	5800419200	Belt, Pulley	Z-6000	
4 -32	*5200132600	PCB Assy, Mechanism		
4 -33	5370001400	Motor, Control	V-9	
4 -34	5800123300	Pulley, Motor	V-9	
4 -35	*5800531400	Bracket, Motor; B		
4 -36	*5800418800	Joint	Z-6000	
4 -37	*5800418900	Arm Assy, Balance	Z-6000	
4 -38	5800453700	Spring, Balance Arm	Z-5000	
4 -39	5800446000	Spring, Eject Arm	Z-5000	
4 -40	*5800439901	Arm Assy, Eject	Z-5000	
4 -41	*5800440901	Lever, Eject	Z-5000	

Parts marked with * require longer delivery time.

EXPLODED VIEW-5

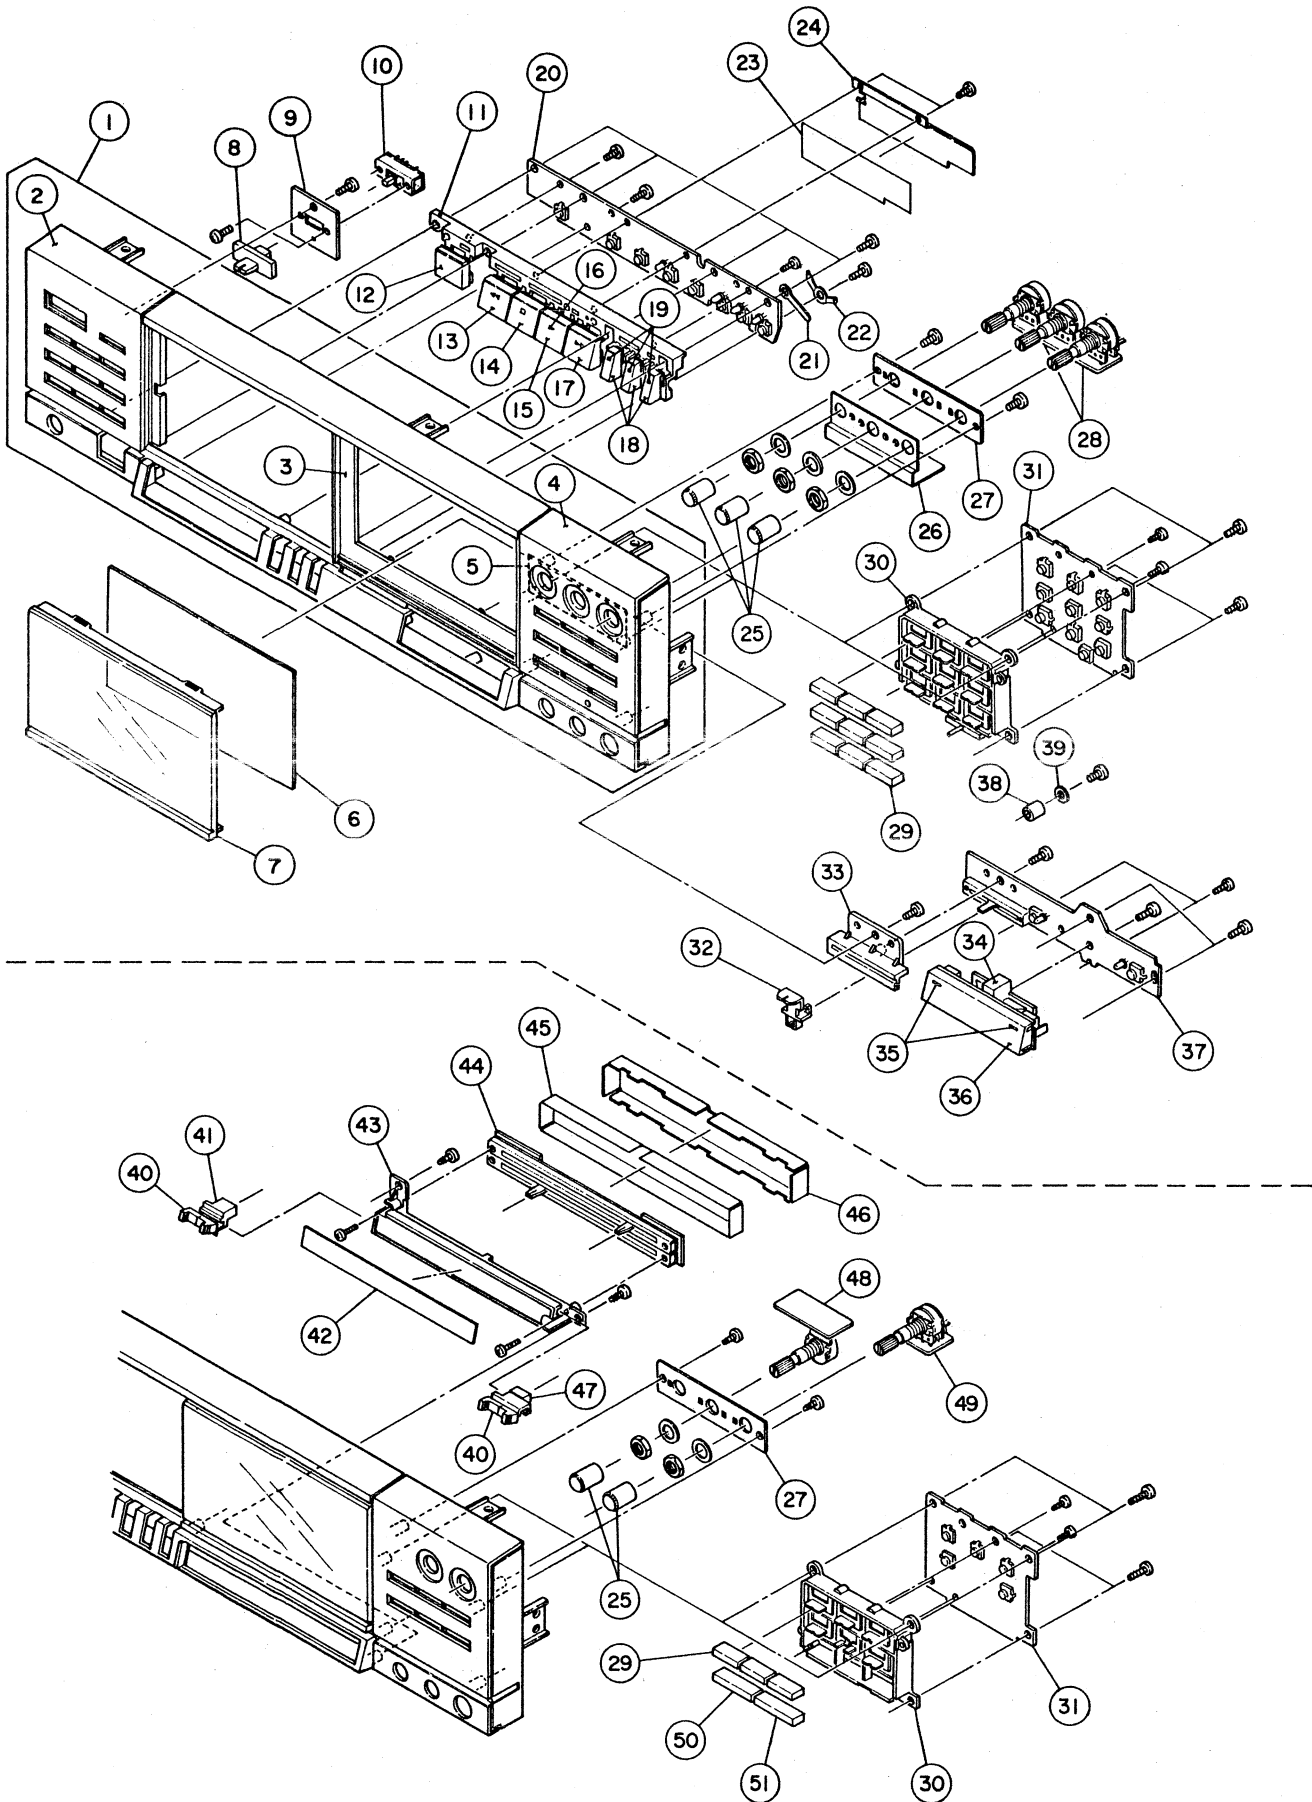


REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
5 - 1	*5760577500	Panel Assy, Front (V-900X)	
	*5760577600	Panel Assy, Front (V-800X)	
	*5760577700	Panel Assy, Front (V-700)	
5 - 2	*5760548000	Escutcheon, CL (V-900X)	
	*5760549900	Escutcheon, BL (V-800X)	
	*5760549800	Escutcheon, AL (V-700)	
5 - 3	*5760550000	Flame, Front; C (V-900X)	
	*5760549900	Flame, Front; B (V-800X)	
	*5760549800	Flame, Front; A (V-700)	
5 - 4	*5760548300	Escutcheon, CR (V-900X)	
	*5760548200	Escutcheon, BR (V-800X)	
	*5760548100	Escutcheon, AR (V-700)	
5 - 5	*5760550300	Scale, VR C (V-900X)	
	*5760550200	Scale, VR B (V-800X)	
	*5760550100	Scale, VR A (V-700)	
5 - 6	*5760547700	Filter, FL B (V-900X)	
	*5760547600	Filter, FL A (V-800X, V-700)	
5 - 7	5760547500	Window, FL C (V-900X)	
	5760547400	Window, FL B (V-800X)	
	5760547300	Window, FL A (V-700)	
5 - 8	5760543100	Knob, Timer (V-900X, V-800X)	
5 - 9	*5760543200	Bracket, Timer (V-900X, V-800X)	
5 -10	5760567100	Switch, Slide (V-900X, V-800X)	
5 -11	*5760549300	Frame, Button AB (V-900X, V-800X)	
	*5760549200	Frame, Button AA (V-700)	
5 -12	5760543600	Button, EJECT B (V-900X, V-800X)	
	5760543500	Button, EJECT C (V-700)	
5 -13	5760543800	Button, REWIND B (V-900X, V-800X)	
	5760543700	Button, REWIND A (V-700)	
5 -14	5760544000	Button, STOP B (V-900X, V-800X)	
	5760543900	Button, STOP A (V-700)	
5 -15	5760544200	Button, PLAY B (V-900X, V-800X)	
	5760544100	Button, PLAY A (V-700)	
5 -16	5760544300	Lens, Insert A	
5 -17	5760544500	Button, FF B (V-900X, V-800X)	
	5760544400	Button, FF A (V-700)	
5 -18	5760544700	Button, REC B (V-900X, V-800X)	
	5760544600	Button, REC A (V-700)	
5 -19	5760544800	Lens, Insert B	
5 -20	*5760567500	PCB Assy, KEY SW 1	
5 -21	*5760578000	Clamper	
5 -22	*5760552200	Contact Plate, TR NSP	
5 -23	*5760569200	Barrier, TR SP SW	
5 -24	*5760569100	Shield, TR NSP SW	
5 -25	5760546100	Knob, VR B (V-900X, V-800X)	
	5760546000	Knob, VR A (V-700)	
5 -26	*5760573600	Shield, REC LEV. (V-900X)	
5 -27	*5760548400	Bracket, VR	
5 -28	*5760567200	PCB Assy, VR 1	
	*5760567300	PCB Assy, VR 2	
5 -29	5760545200	Button, MB (V-900X, V-800X)	
	5760545100	Button, MA (V-700)	
5 -30	*5760549500	Frame, Button C	
5 -31	*5760567410	PCB Assy, KEY SW 2 (V-900X)	
	*5760567400	PCB Assy, KEY SW 2 (V-800X, V-700)	
5 -32	5760545700	Knob, Fade Time (V-900X)	
5 -33	*5760548500	Guide, VR S (V-900X)	
5 -34	*5760549400	Frame, Button B (V-900X)	
5 -35	5760545000	Lens, Insert C (V-900X)	
5 -36	5760544900	Button, FADE (V-900X)	
5 -37	*5760573700	PCB Assy, VR 4 (V-900X)	
5 -38	*5760573800	Spacer (V-900X)	
5 -39	*5760566800	Washer (V-900X)	

(Continued on page 14)

Parts marked with * require longer delivery time.

EXPLODED VIEW-6

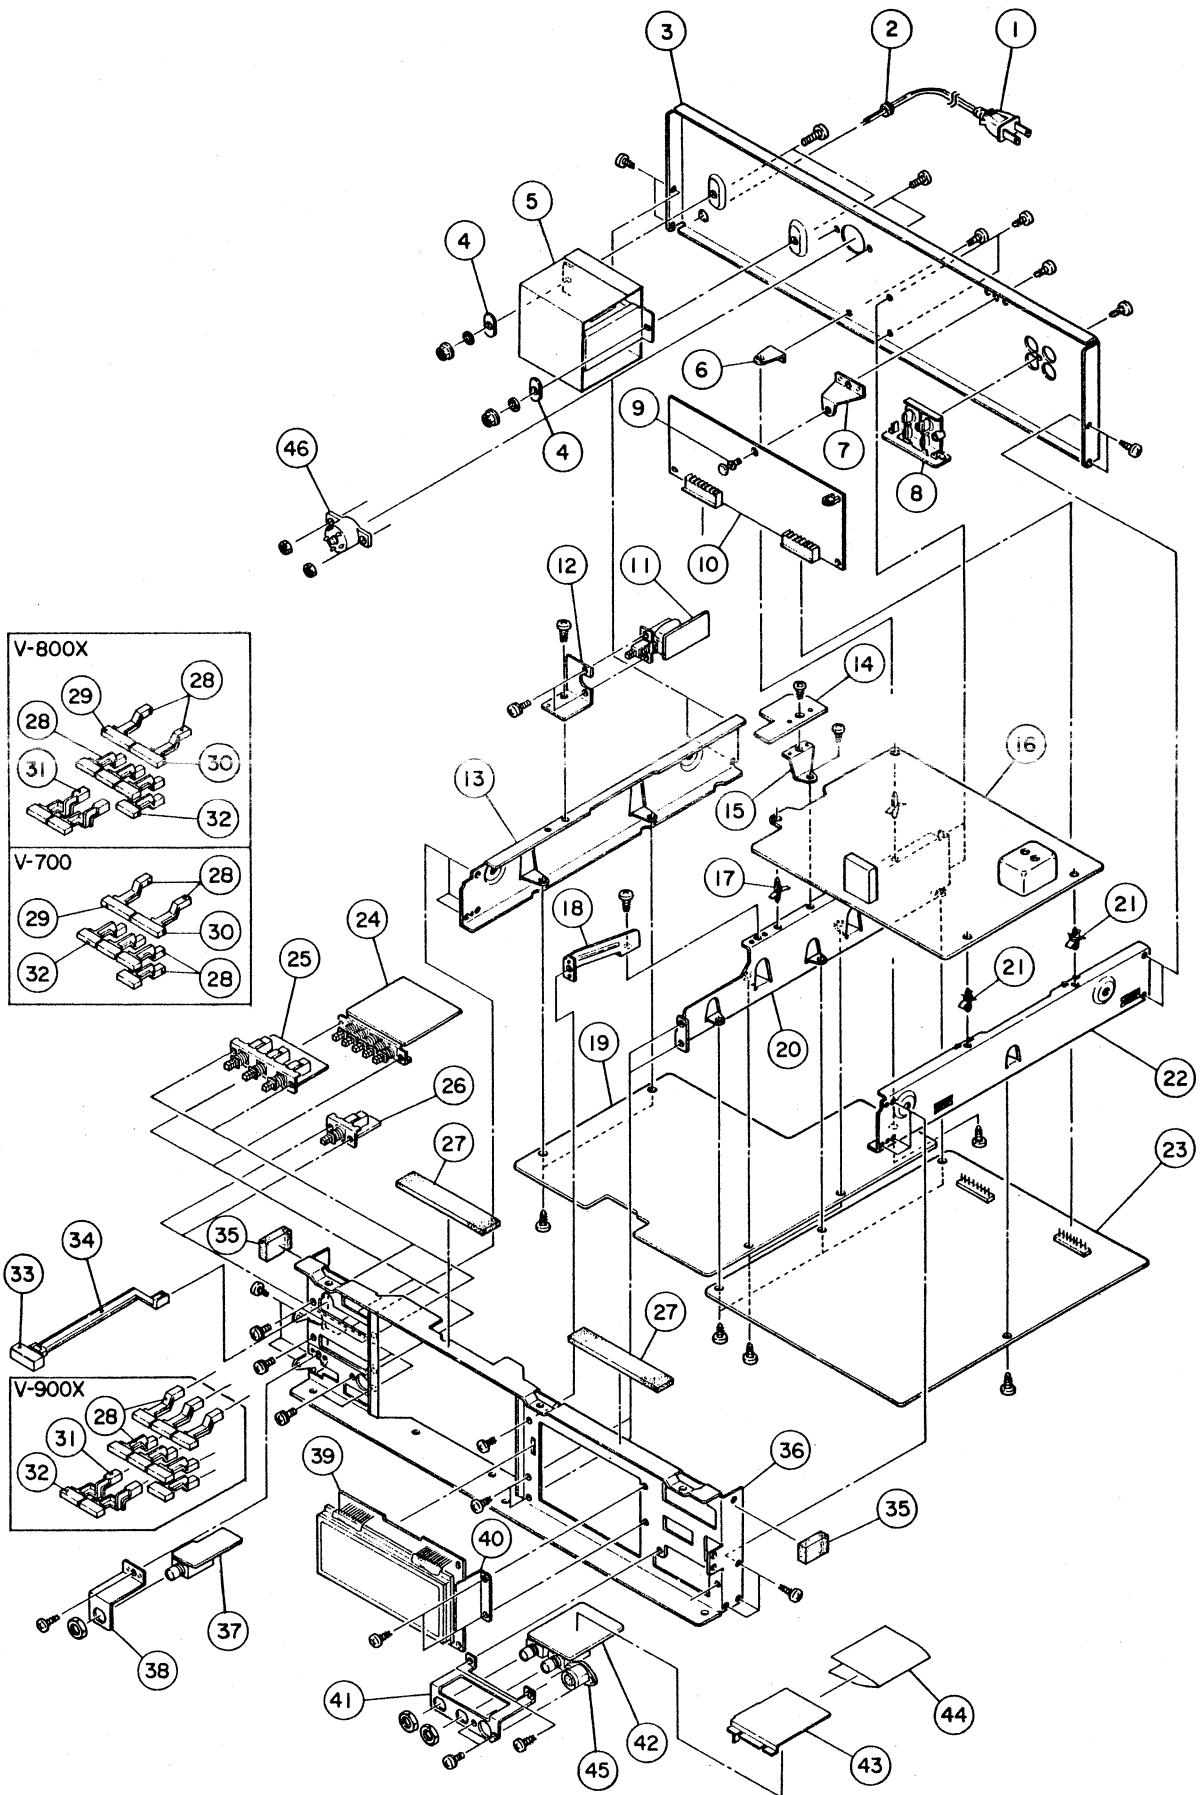

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
6 - 1	*5760555600 *5760555700 *5760555800 *5760555900 *5760556000	Cord Assy, AC Power [J] Cord Assy, AC Power [US, C, GE] Cord Assy, AC Power [E] Cord Assy, AC Power [UK] Cord Assy, AC Power [A]	
6 - 2	*5760556100 *5760556200	Bushing, Cord [J, US, C, GE] Bushing, Cord [E, UK, A]	
6 - 3	*5760550700 *5760550800 *5760555400	Panel, Rear [J, US, C] Panel, Rear [GE] Panel, Rear [E, UK, A]	
6 - 4	*5760552100	Plate	
6 - 5	5760555500 5760555510 5760555520 5760555530	Transformer, Power [J] Transformer, Power [US, C] Transformer, Power [GE] Transformer, Power [E, UK, A]	
6 - 6	*5760551200	Bracket, PCB	
6 - 7	*5760551400	Bracket, DBX PCB (V-900X, V-800X)	
6 - 8	*5760556400	PCB Assy, IN/OUTPUT	
6 - 9	*		
6 -10	*5760554400	PCB Assy, DBX (V-900X, V-800X)	
6 -11	*5760556500 *5760556510	PCB Assy, POWER SW [J, US, C] PCB Assy, POWER SW [GE, E, UK, A]	
6 -12	*5760553100	Bracket, Power SW	
6 -13	*5760550400	Bracket, Side; L	
6 -14	* * *	PCB Assy, TR 3 (V-900X) PCB Assy, TR 3 (V-800X) PCB Assy, TR 3 (V-700)	
6 -15	*5760551400	Bracket, DBX PCB	
6 -16	*5760571600 *5760576500	PCB Assy, AUTO CAL (V-900X) PCB Assy, TR 4 (V-900X)	
6 -17	*5760571700	Support, PCB (V-900X)	
6 -18	*5760551900	Bracket, MECH	
6 -19	*5760554320 *5760554330 *5760554300 *5760554310 *5760554340 *5760554350	PCB Assy, POWER/CONTROL (V-900X) [J, US, C, GE, A] PCB Assy, POWER/CONTROL (V-900X) [E, UK] PCB Assy, POWER/CONTROL (V-800X) [J, US, C, GE, A] PCB Assy, POWER/CONTROL (V-800X) [E, UK] PCB Assy, POWER/CONTROL (V-700) [J, US, C, GE, A] PCB Assy, POWER/CONTROL (V-700) [E, UK]	
6 -20	*5760551800	Bracket, Center	
6 -21	*5760571800	Support, PCB (V-900X)	
6 -22	*5760550500	Bracket, Side; R	
6 -23	*5760554210 *5760554200 *5760554220	PCB Assy, R/P (V-900X) PCB Assy, R/P (V-800X) PCB Assy, R/P (V-700)	
6 -24	*5760554600 *5760554610	PCB Assy, NR SW (V-900X, V-800X) PCB Assy, NR SW (V-700)	
6 -25	*5760554510 *5760554500	PCB Assy, MONITOR SW (V-900X) PCB Assy, MONITOR SW (V-800X, V-700)	
6 -26	*5760554700	PCB Assy, MPX SW	
6 -27	*5760552500	Spacer, Top Cover	
6 -28	*5760549000	Joint, A	
6 -29	5760545400 5760545300	Button, NB L (V-800X) Button, NA L (V-700)	
6 -30	5760545600 5760545500	Button, NB R (V-800X) Button, NA R (V-700)	
6 -31	5760549100	Joint, B (V-900X, V-800X)	
6 -32	5760545200 5760545100	Button, MB (V-900X, V-800X) Button, MA (V-700)	
6 -33	5760543400 5760543300	Button, Power B (V-900X, V-800X) Button, Power A (V-700)	

(Continued on page 14)

Parts marked with * require longer delivery time.

[US]: U.S.A.
[A]: AUSTRALIA

[C]: CANADA
[J]: JAPAN

[GE]: GENERAL EXPORT

[E]: EUROPE

[UD]: U.K.

(Continued from page 11)

EXPLODED VIEW-5

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
5 -40	5760545900	Knob, REC VR B (V-800X)	
	5760545800	Knob, REC VR A (V-700)	
5 -41	5760548900	Joint, VR RB (V-800X)	
	5760548800	Joint, VR RA (V-700)	
5 -42	*5760547000	Plate, REC VR B (V-800X)	
	*5760546900	Plate, REC VR A (V-700)	
5 -43	*5760547200	Guide, VR MB (V-800X)	
	*5760547100	Guide, VR MA (V-700)	
5 -44	*5760567600	PCB Assy, VR 3	
5 -45	*5760569700	Barrier (V-800X, V-700)	
5 -46	*5760569600	Shield, Slide VR (V-800X, V-700)	
5 -47	5760548700	Joint, VR LB (V-800X)	
	5760548600	Joint, VR LA (V-700)	
5 -48	*5760567300	PCB Assy, VR 2	
5 -49	*5760567200	PCB Assy, VR 1	
5 -50	5760545400	Button, NB L (V-800X)	
	5760545300	Button, NA L (V-700)	
5 -51	5760545600	Button, NB R (V-800X)	
	5760545500	Button, NA R (V-700)	

Parts marked with * require longer delivery time.

(Continued from page 13)

EXPLODED VIEW-6

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
6 -34	*5760552100	Shaft, L (V-900X)	
	*5760552000	Shaft, L (V-800X, V-700)	
6 -35	*5760567000	Spacer, Front	
6 -36	*5760550900	Panel, Front	
6 -37	*5760554900	PCB Assy, PHONES	
6 -38	*5760551500	Bracket, PHONES Jack	
6 -39	*5760554810	PCB Assy, FL (V-900X)	
	*5760554800	PCB Assy, FL (V-800X)	
	*5760554820	PCB Assy, FL (V-700)	
6 -40	*5760551600	Bracket, FL	
6 -41	*5760551700	Bracket, MIC Jack	
6 -42	*5760555000	PCB Assy, MIC AMPL.	
6 -43	*5760552600	Shield, MIC J	
6 -44	*5760552700	Barrier, MIC J	
6 -45	5760555100	Jack, Remote (V-900X, V-800X)	
6 -46	5760556300	Switch, Voltag Selector [GE]	

Part of 6-42
Part of 6-42

Parts marked with * require longer delivery time.

[US]: U.S.A.

[C]: CANADA

[GE]: GENERAL EXPORT

[E]: EUROPE

[UK]: U.K.

[A]: AUSTRALIA

[J]: JAPAN

Electronic Components

Parts No.	Description
57605570-00	Push Switch [V-800X,V-700]
57605571-00	Push Switch [V-900X]
51450910-00	Transistor 2SC945AK
52240150-20	Diode 1SS133T
57605582-00	Display Tube
57605583-00	IC TA7318P-2
57605584-00	IC MSL9359RS
57605585-00	IC MSL912RS
50425530-00	Transistor 2SA733P
52245403-01	Diode RD5.1EB2
52204173-00	IC M5219L
53000319-00	Push Switch
57605637-00	L.P. Filter
57605638-00	Bias Trap Coil
57605639-00	Peaking Coil 22mH
57605640-00	Choke Coil 8.2mH
57605641-00	Peaking Coil
57605642-00	Bias OSC Block
51502330-00	R., Trimmer 20k(B)
51500943-00	R., Trimmer 50k(B)
51501530-00	R., Trimmer 5k(B)
57605643-00	IC M5220L
52204162-00	IC M5218L
50427380-00	IC NJM4558D
57605645-00	IC HA12058
52307750-00	Transistor 2SC2878B
52320072-00	FET 2SK364BL
50424750-00	Transistor 2SC1384Q
52245431-01	Diode RD12EB2
57605652-00	Diode SR1K4LF
52280050-00	Diode W02
52245434-01	Diode RD13EB2
52245409-01	Diode RD6.2EB2
52245397-01	Diode RD4.3EB2
52245466-01	Diode RD33EB2
52245450-01	Diode RD22EB2
52245389-01	Diode RD3.0EB2
51450870-00	Transistor 2SD313E
50426250-00	Transistor 2SC1318S
51450430-00	Transistor 2SA720Q
57605660-00	Semi-Fixed VR 10k(B)
52204155-00	IC NJM7812A
52204138-00	IC NJM7912A
52204180-00	IC LA2000
52204185-00	IC M54545L
52322505-00	IC M54560P
57605661-00	IC MB8841H-1248
57605662-00	IC HD48801B56
57605663-00	IC BA618
53470010-00	Ceramic OSC KBR4.0M
53470011-00	Ceramic OSC KBR-400B
50411380-00	Fuse T500mA [E,UK]
51421880-00	Fuse T1.6A [E,UK]
52204145-01	IC UPCL252H2
52204146-01	IC UPCL253H2
51501560-00	R., Trimmer 50k(B)
51501540-00	R., Trimmer 10k(B)
57605678-00	VR 10k(A)x2
57605680-00	VR V16L4 100kCC [V-800X,V-700]
57605681-00	VR V16L4 100k [V-900X]
57605685-00	Key Switch
57605689-00	LED SLR34VR5F
57605690-00	LED SLR34MG5F
52840065-00	Slide VR 100k(A)x2
52245406-01	Diode RD5.6EB2
52245395-01	Diode RD3.9EB2
57605725-00	Choke Coil 3.6mH
57605726-00	OSC Block

Parts No.	Description
51500960-00	R., Trimmer 100k(B)
50534460-00	R., Trimmer 1k(B)
51500940-00	R., Trimmer 50k(B)
51500970-00	R., Trimmer 5k(B)
57605727-00	IC TC9153
57605728-00	IC HA12035
57605729-00	IC HD44801B58
57605730-00	IC TC4053BP
57605731-00	Thermistor 10k
57605573-00	Push Switch
57605574-00	Push Switch
57605580-00	Push Switch
57605742-00	Slide VR 200k(B) [V-900X]
52204178-00	IC LM556CN
52280083-00	Photo Interrupter
52800033-02	R., Trimmer VR
52800036-02	R., Trimmer VR
52820108-00	VR
52860067-00	Choke Coil 1.2mH
53017531-00	Leaf Switch

Owner's Manuals

Parts No.	Description
57000536-00	Owner's Manual V-900X DM
57000537-00	Owner's Manual V-900X Multi
57000538-00	Owner's Manual V-800X DM
57000539-00	Owner's Manual V-800X/V-700 Multi
57000540-00	Owner's Manual V-700 DM

TEAC®

ティアック株式会社

本社 営業部 180・東京都武蔵野市中町3-7-3

電話 武蔵野 (0422) 53-1111代

製品についてのお問い合わせ サービスに関するお問い合わせ

札幌営業所	064・札幌市中央区南7条西2-2くぼたビル	電話札幌	(011) 521-4101代
仙台営業所	980・仙台市1番町2-5-5中央ビル	電話仙台	(0222) 27-1501代
大宮営業所	330・大宮市桜木町4-2ローズベイト大宮ビル	電話大宮	(0486) 42-4551代
東京営業所	100・東京都千代田区永田町2-10-7星ガ岡会館	電話東京	(03) 592-1831代
千代田営業所	100・東京都千代田区永田町2-10-7星ガ岡会館	電話東京	(03) 592-1836代
千葉出張所	280・千葉市松波1-11-3石橋松波ビル	電話千葉	(0472) 55-1281代
立川営業所	190・東京都立川市柴町4-13-2	電話立川	(0425) 25-4721代
横浜営業所	221・横浜市神奈川区沢渡1-1高島台第一ビル	電話横浜	(045) 312-3270代
名古屋営業所	464・名古屋市中千種区東山通り3-2-3	電話名古屋	(052) 782-4581代
静岡出張所	420・静岡市中島大割2861-1	電話静岡	(0542) 81-6561代
大阪営業所	564・大阪府吹田市垂水町3-34-10	電話大阪	(06) 384-5201代
京都出張所	600・京都市下京区大宮通四条下ル四条大宮町21番地三虎ビル	電話京都	(075) 842-0751代
神戸出張所	650・神戸市中央区山本通り3-1-3谷ロマンション内	電話神戸	(078) 242-2458代
岡山出張所	700・岡山市十日市中町1番40号	電話岡山	(0862) 25-8601代
広島営業所	733・広島市中区中島町10-24	電話広島	(082) 243-3581代
福岡営業所	812・福岡市博多区博多駅東2-17-5モリメンビル	電話福岡	(092) 431-5781代

サービスに関するお問い合わせ

本社サービス課	180・東京都武蔵野市中町3-7-3	電話 武蔵野	(0422) 53-3242代
沖縄サービスセンター	901-22・沖縄県宜野湾市字喜友名229	電話 沖縄	(09889) 2-2020代

技術的なお問い合わせ

テープデッキ相談室	180・東京都武蔵野市中町3-7-3	電話 武蔵野	(0422) 53-9213代
-----------	--------------------	--------	-----------------

TEAC CORPORATION

3-7-3 NAKA-CHO MUSASHINO TOKYO PHONE (0422) 53-1111

TEAC CORPORATION OF AMERICA

7733 TELEGRAPH ROAD MONTEBELLO CALIFORNIA 90640 PHONE (213) 726-0303

TEAC AUSTRALIA PTY., LTD.

115 WHITEMAN STREET SOUTH MELBOURNE VICTORIA 3205 PHONE 699-6000

Printed in Japan





SCHEMATIC DIAGRAMS

V-900X/V-800X/V-700





INSTRUCTIONS FOR SERVICE PERSONNEL

BEFORE RETURNING APPLIANCE TO THE CUSTOMER, MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT.

NOTES

1. Resistor values are in ohms (k=kilo-ohms, M=megohms).
2. Capacitor values are in microfarads (p=picofarads).
3. Voltage and signal level values are for reference only.
0dB=0.775V
4.  : Front panel indication
5.  : Rear panel indication
6.  : +B power supply circuit
7.  : -B power supply circuit
8. Δ Parts marked with this sign are safety critical components.
They must always be replaced with identical components-refer to the appropriate parts list and ensure exact replacement.

注意

1. 抵抗の単位は Ω (k=k Ω , M=M Ω)です
2. コンデンサの単位は μF (p=pF)です。
3. 電圧及び信号レベルは参考値です。
0dB=0.775V
4.  : フロント・パネル上の表示
5.  : リア・パネル上の表示
6.  : +B 電源回路
7.  : -B 電源回路
8. Δ マークのある部品は安全重要部品です。
交換するときは必ずティアック指定の部品を使用してください。

チップ部品について

本ステレオ・カセット・デッキには、チップ部品を用いてオーディオ製品に於いて、かつては不可能だった回路の小型化を実現しました。チップ部品はサービス上特別な扱いが必要です。下記の内容をよくお読みいただき、本カセット・デッキを修理して下さい。

チップ部品の種類

カセット・デッキに使用されるチップ部品はどれも同じような大きさ、形状ですが、次の2種類に分けられます。

チップ抵抗

抵抗値を示す3桁の数字を持っています。最初の2桁は抵抗の有効数値を示します。3番目の桁すなわち乗数は最初の2桁に続く零の数を示します。下の例を参照して下さい。

部品上の数字		抵抗値
470	=	47 ohms
471	=	470 ohms
472	=	4.7 kohms
473	=	47 kohms

チップ・トランジスタ

2文字のコードによって分類されます。サービスに際しての本部品の詳しい情報は回路図、部品表、部品配置図を参照して下さい。


文字コード	品番	品名
ZQ, ZR or ZS	5760558600	2SD601D

チップ部品の取りはずし/交換


チップ部品はセラミック及びプラスチックのモールドで、衝撃には弱い構造です。又、チップ部品は耐熱性ではないのでハンダづけする時：

(A) チップ部品をプリント基板上に平らにセットして下さい。

(B) 時々、片方の端子がハンダづけされると、他のハンダづけされていない端子は若干上りますが、下へ押さないで下さい。又、チップ部品の周囲に必要以上に、長く熱を加えたり、ハンダをつけることはショートを引き起す場合があります。チップ部品は正しく取付けをして下さい。

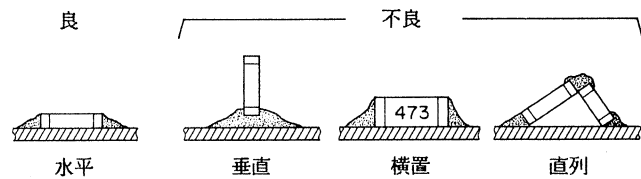

チップ部品を取りはずす場合、下図のようにその端子へ熱を2、3回繰り返しかえし与えてからスライドさせて下さい。

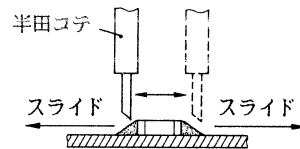

取りはずし後、プリント基板上に損傷がないか確認して下さい。チップ部品の交換の時は、ピンセットを用いてチップ部品を必要とする箇所へ置いて下さい。それから注意してその端子をプリント基板へハンダづけして下さい。ハンダづけ後、チップ部品のハンダ・ブリッジやいもハンダがあるかチェックして下さい。

CHIP DEVICES INFORMATION

These stereo cassette decks utilize chip devices that allow miniaturization of circuitry previously unattainable in an audio product. These chip devices require specialized handling during service. Please read the following before attempting to service these cassette decks:

Identification of Chip Devices

There are two types of chip devices being used in the cassette deck, and although they have similar size and shape, they can be identified as follows:

Chip resistors -- have a three digit number which represents the value of resistance. The first two digits indicate the significant numeric value of resistance. The third digit or multiplier indicates the number of zeros after the first two digits. Please follow the examples below:


Number on Device		Resistive Value
470	=	47 ohms
471	=	470 ohms
472	=	4.7 k ohms
473	=	47 k ohms

Chip transistors -- can be identified by a two letter code. Use of the schematic diagram, parts list, and parts layout diagram should provide adequate identification for service.


Letter Code	Part Number	Description
ZQ,ZR or ZS	5760558600	2SD601D

Removal and replacement of chip devices

The chip devices are not heatproof or shockproof. The devices are made of ceramic and plastic moldings so they can not stand a direct shock to them. When soldering the devices, (A) set the device flat on the printed circuit board, (B) sometimes when one terminal is soldered, the other unsoldered terminal is slightly raised. In such a case, do not try to push down the end of the device. Also try to keep prolonged heat away from the area of the device and having an excess of solder as this might result in a short. Do not mount the chip devices incorrectly.

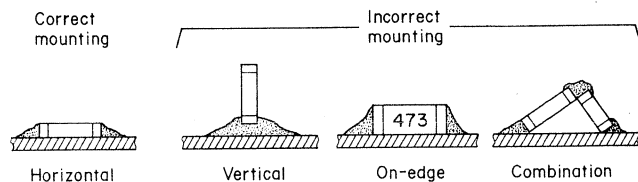

When removing a chip device, it is recommended to heat the terminals of the device repeatedly two or three times and then slide the chip device as described below.

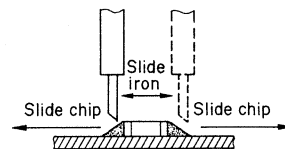

After the device has been removed, make sure that no damage has occurred to the printed circuit board. To replace a chip device, use a pair of tweezers to place the device where it is needed. Then carefully solder the terminals to the printed circuit board. After cooling, check for solder bridges or cold solder joints on the chip device.

TEAC CORPORATION

TEAC SCHEMATIC DIAGRAM (dbx NR PCB) V-900X/V-800X

1

2

3


A

B

C


D

E

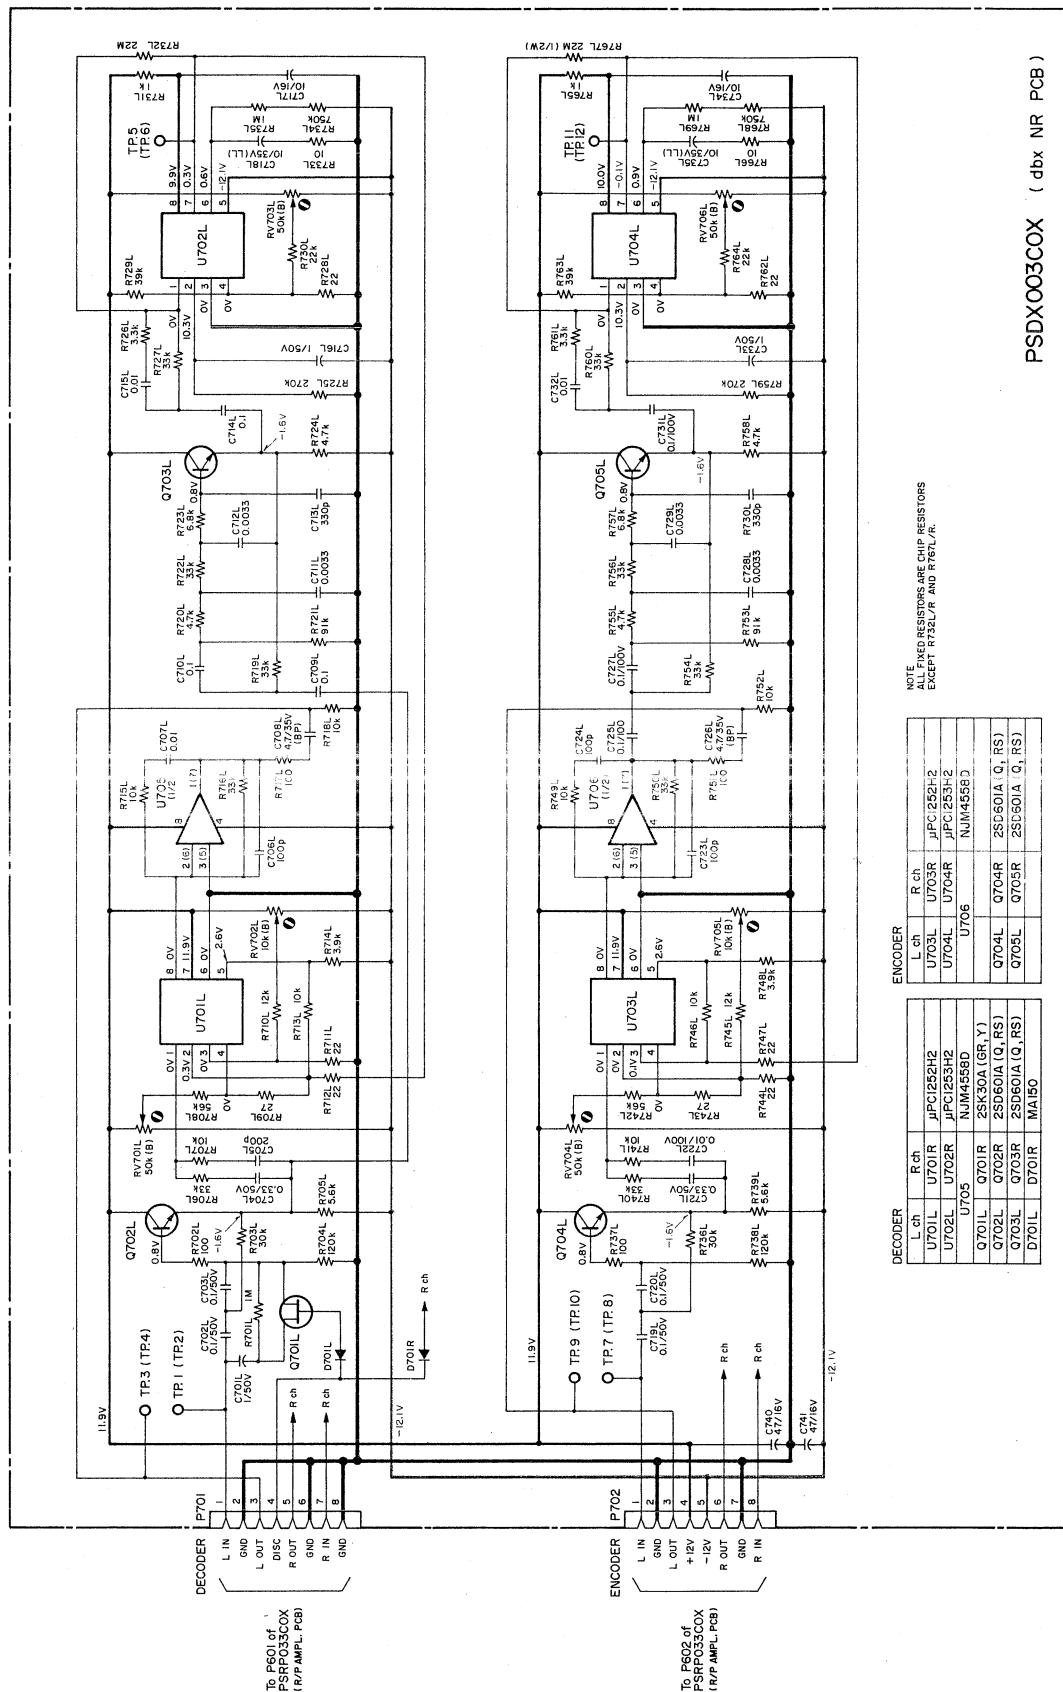

V-900X/V-800X Stereo Cassette Deck

3rd Issue; April, 1984

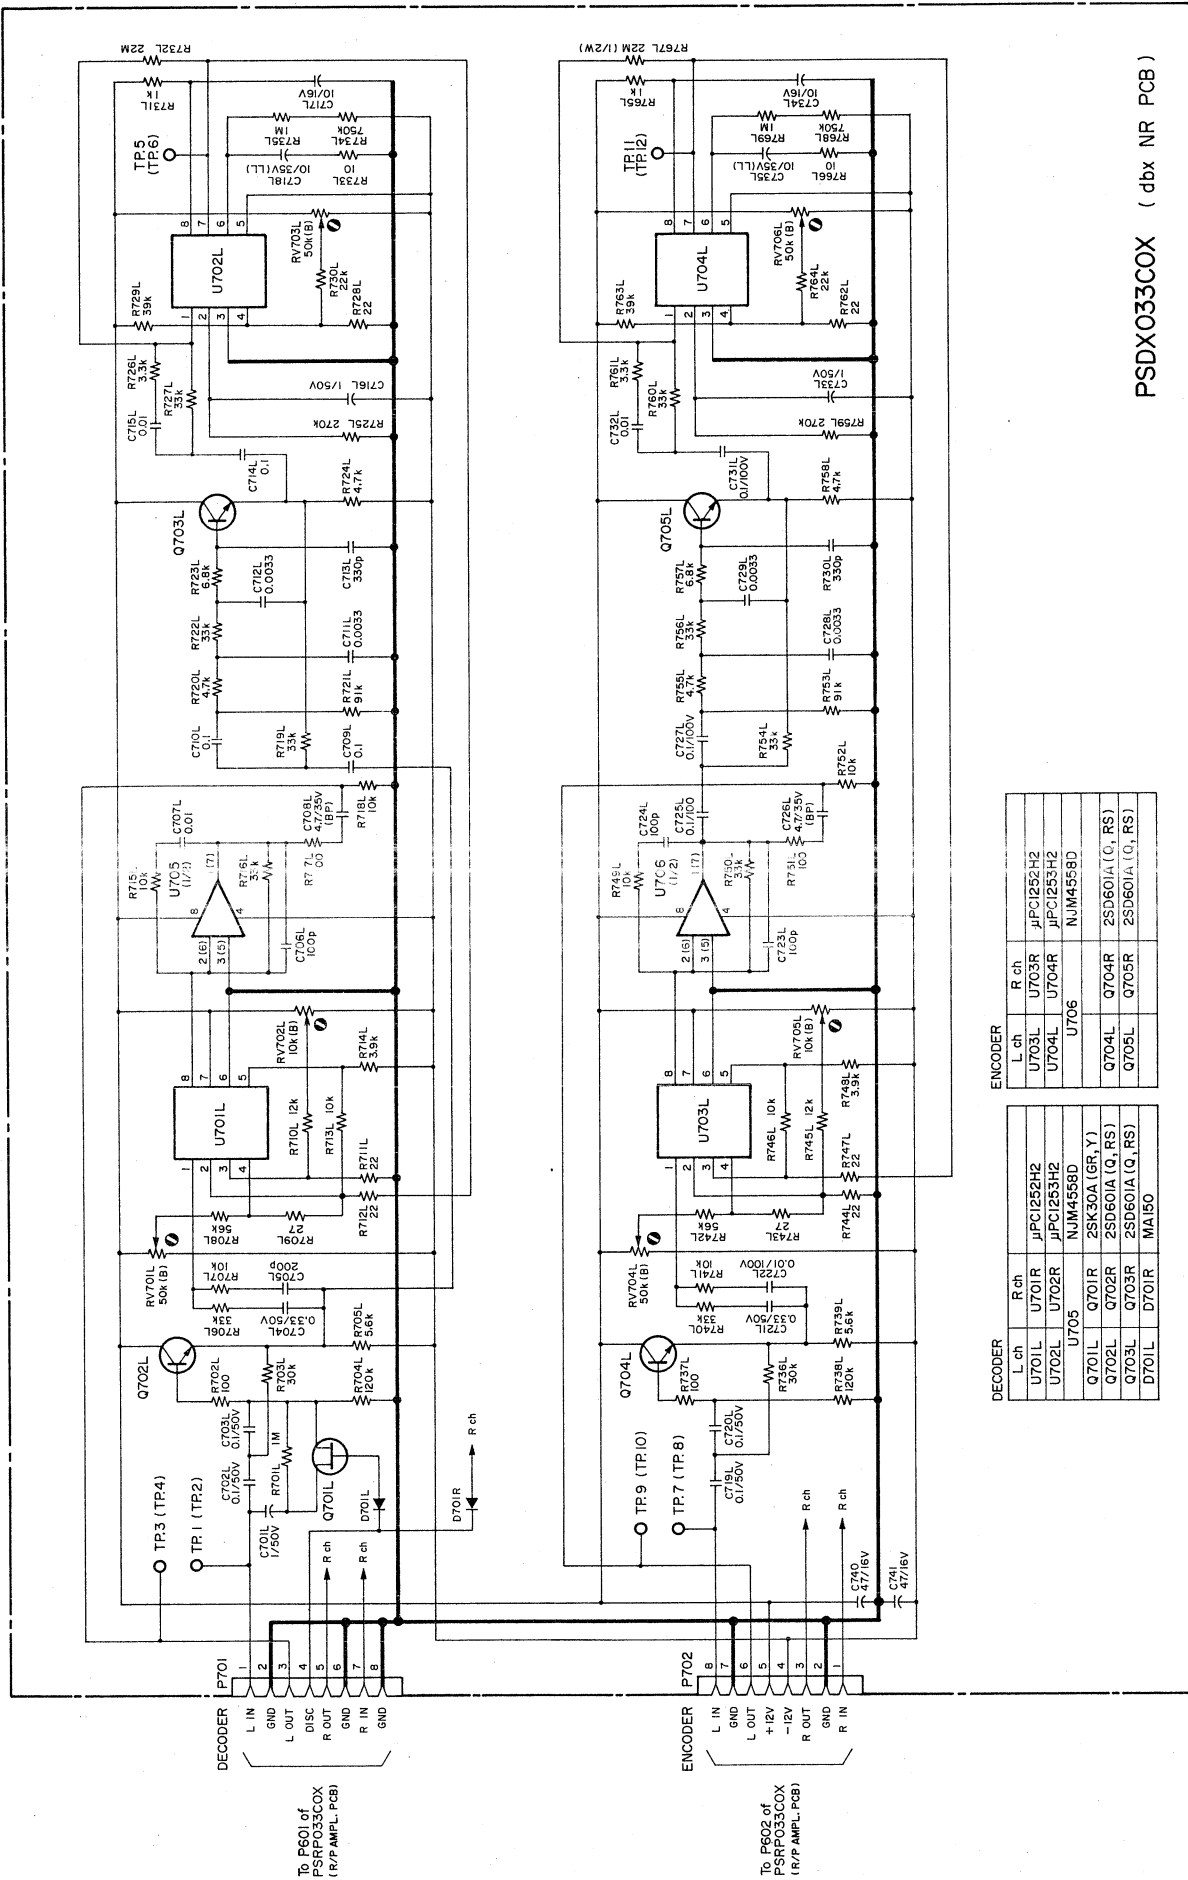


DECODER		ENCODER	
L ch	R ch	L ch	R ch
U701L	U701R	U703L	U703R
U702L	U702R	U704L	U704R
U703L	U703R	U705L	U705R
U704L	U704R	U706L	U706R
U705L	U705R	U707L	U707R
U706L	U706R	U708L	U708R
U707L	U707R	U709L	U709R
U708L	U708R	U710L	U710R
U709L	U709R	U711L	U711R
U710L	U710R	U712L	U712R
U711L	U711R	U713L	U713R
U712L	U712R	U714L	U714R
U713L	U713R	U715L	U715R
U714L	U714R	U716L	U716R
U715L	U715R	U717L	U717R
U716L	U716R	U718L	U718R
U717L	U717R	U719L	U719R
U718L	U718R	U720L	U720R
U719L	U719R	U721L	U721R
U720L	U720R	U722L	U722R
U721L	U721R	U723L	U723R
U722L	U722R	U724L	U724R
U723L	U723R	U725L	U725R
U724L	U724R	U726L	U726R
U725L	U725R	U727L	U727R
U726L	U726R	U728L	U728R
U727L	U727R	U729L	U729R
U728L	U728R	U730L	U730R
U729L	U729R	U731L	U731R
U730L	U730R	U732L	U732R
U731L	U731R	U733L	U733R
U732L	U732R	U734L	U734R
U733L	U733R	U735L	U735R
U734L	U734R	U736L	U736R
U735L	U735R	U737L	U737R
U736L	U736R	U738L	U738R
U737L	U737R	U739L	U739R
U738L	U738R	U740L	U740R
U739L	U739R	U741L	U741R
U740L	U740R	U742L	U742R
U741L	U741R	U743L	U743R
U742L	U742R	U744L	U744R
U743L	U743R	U745L	U745R
U744L	U744R	U746L	U746R
U745L	U745R	U747L	U747R
U746L	U746R	U748L	U748R
U747L	U747R	U749L	U749R
U748L	U748R	U750L	U750R
U749L	U749R	U751L	U751R
U750L	U750R	U752L	U752R
U751L	U751R	U753L	U753R
U752L	U752R	U754L	U754R
U753L	U753R	U755L	U755R
U754L	U754R	U756L	U756R
U755L	U755R	U757L	U757R
U756L	U756R	U758L	U758R
U757L	U757R	U759L	U759R
U758L	U758R	U760L	U760R
U759L	U759R	U761L	U761R
U760L	U760R	U762L	U762R
U761L	U761R	U763L	U763R
U762L	U762R	U764L	U764R
U763L	U763R	U765L	U765R
U764L	U764R	U766L	U766R
U765L	U765R	U767L	U767R
U766L	U766R	U768L	U768R
U767L	U767R	U769L	U769R
U768L	U768R	U770L	U770R
U769L	U769R	U771L	U771R
U770L	U770R	U772L	U772R
U771L	U771R	U773L	U773R
U772L	U772R	U774L	U774R
U773L	U773R	U775L	U775R
U774L	U774R	U776L	U776R
U775L	U775R	U777L	U777R
U776L	U776R	U778L	U778R
U777L	U777R	U779L	U779R
U778L	U778R	U780L	U780R
U779L	U779R	U781L	U781R
U780L	U780R	U782L	U782R
U781L	U781R	U783L	U783R
U782L	U782R	U784L	U784R
U783L	U783R	U785L	U785R
U784L	U784R	U786L	U786R
U785L	U785R	U787L	U787R
U786L	U786R	U788L	U788R
U787L	U787R	U789L	U789R
U788L	U788R	U790L	U790R
U789L	U789R	U791L	U791R
U790L	U790R	U792L	U792R
U791L	U791R	U793L	U793R
U792L	U792R	U794L	U794R
U793L	U793R	U795L	U795R
U794L	U794R	U796L	U796R
U795L	U795R	U797L	U797R
U796L	U796R	U798L	U798R
U797L	U797R	U799L	U799R
U798L	U798R	U800L	U800R

TEAC® V-900X/V-800X

2nd Issue, February, 1984

TEAC®

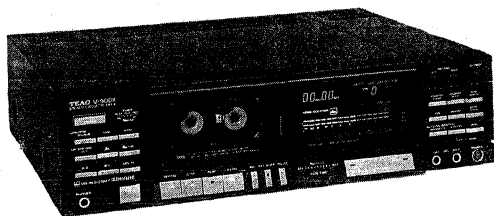

CIRCUIT DESCRIPTION

V-900X

Stereo Cassette Deck

Table of Contents

1. I.C. Functions	2	9. Multi-mode Counter	28
2. Function Key Input Circuitry	15	9-1. Tape Counter Mode	
2-1. Key Matrix		9-2. Tape Remaining Time Counter Mode	
2-2. Multiple Key Operation		9-3. TRT Counter Mode	
3. Data Exchange between U905 and U904	17	10. Audio Signal Path	28
3-1. Serial Data Transfer		10-1. NR System and Signal Path	
3-2. 5-bit Data Transfer		10-2. Monitor Circuitry	
3-3. 5-bit Data Content		11. Auto-fader	31
4. FL Meter Lighting Circuitry	19	11-1. Outline	
4-1. Peak Level Meter		11-2. Electronic Attenuator	
4-2. Counter and CPS Display		11-3. Initial Set	
5. Remote Circuitry	22	11-4. Fade In	
6. Cam and Motor Control	23	11-5. Fade Out	
7. Timers	24	12. Auto-Calibration	34
8. CPS and Intro Check	26	12-1. Circuit Composition	
8-1. CPS _{FF} (Intro Check)		12-2. Auto-Calibration Process	
8-2. CPS _{REW}		12-3. Leader Tape Detection	
8-3. Compensation for Tape Overtravel		12-4. Level Adjustment (Rough)	
		12-5. Bias Adjustment	
		12-6. VCA Level Adjustment	
		12-7. EQ Adjustment	

Note: The wave-forms (pulse widths) shown in the various time charts in this manual have been expanded and reduced for ease of explanation, and therefore do not represent the correct time relationships. When referring to a time chart, be sure to check the time values and units.

1. I.C. Functions

Pin functions, block diagrams, and/or internal circuitry will be given in this manual for the main I.C.s used in the V-900X unit.

U-905 HD44801B69 or HD44801B56 Key Microcomputer

Pin	Code	Function
1	D ₃	Executes a check and write of 5-bit data when a High is input.
2	D ₄	Outputs High (Static signal) in response to Intro Check key input.
3	D ₅	Outputs H after writing the 5-bit data when H is input to D ₃ .
4	D ₆	} Key input, serial clock data output pin.
5	D ₇	
6	D ₈	H (static sig.) is output in Play and Rec/play modes. FL tube Tape display.
7	D ₉	High is output (static signal) on memory Key input. FL tube Memory display.
8	D ₁₀	<div> <div>LED display common signal.</div> <div> <div>Key return signal</div> <div>source output</div> </div> <div> <div>FL tube Dig.1</div> <div>FL tube Dig.5</div> <div>FL tube Dig.4</div> <div>FL tube Dig.3</div> <div>FL tube Dig.2</div> </div> <div>High is output.</div> </div>
9	D ₁₁	
10	D ₁₂	
11	D ₁₃	
12	D ₁₄	
13	D ₁₅	
14	NC	(NC)
15	RESET	High:CPU reset, Low:CPU operation, power on reset pin.
16	GND	Ground
17	OSC ₁	} External oscillator connection pin (400kHz ceramic oscillator KBR400B).
18	OSC ₂	
19	HLT	V _{CC} level.
20	TEST	V _{CC} level.
21	V _{cc}	Power supply pin (+5V)
22	R ₀₀	} 5-bit data including D ₁
23	R ₀₁	
24	R ₀₂	
25	R ₀₃	
26	R ₁₀	} Input pin for return signal from key matrix.
27	R ₁₁	
28	R ₁₂	
29	D ₁₃	
30	INT ₀	Left reel revolution pulse input pin. (for tape counter and remaining time calculation.)
31	INT ₁	(NC)
32	R ₂₀	FL tube Seg. a record LED display signal output.
33	R ₂₁	FL tube Seg. b play LED display signal output.
34	R ₂₂	FL tube Seg. c pause LED display signal output.
35	R ₂₃	FL tube Seg. d record mute LED display signal output.
36	R ₃₀	FL tube Seg. e (fast forward LED display signal output.)
37	R ₃₁	FL tube Seg. f (rewind LED display signal output.)
38	R ₃₂	FL tube Seg. g (stop LED display signal output.)
39	R ₃₃	FL tube Seg. h
40	D ₀	High (static signal) is output except for play and rec/play modes. FL tube Source display.
41	D ₁	5-bit data including R ₀₀ -R ₀₃ .
42	D ₂	High is input when metal tape is detected (thickness compensation for remaining tape meter.).

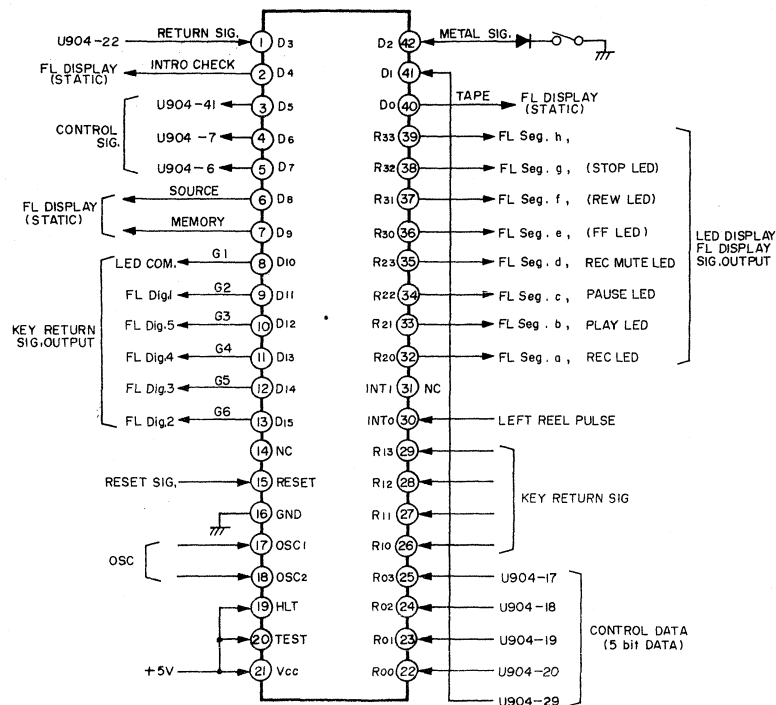


Fig.1-1 U905 HD44801B69 or HD44801B56 Pin Chart

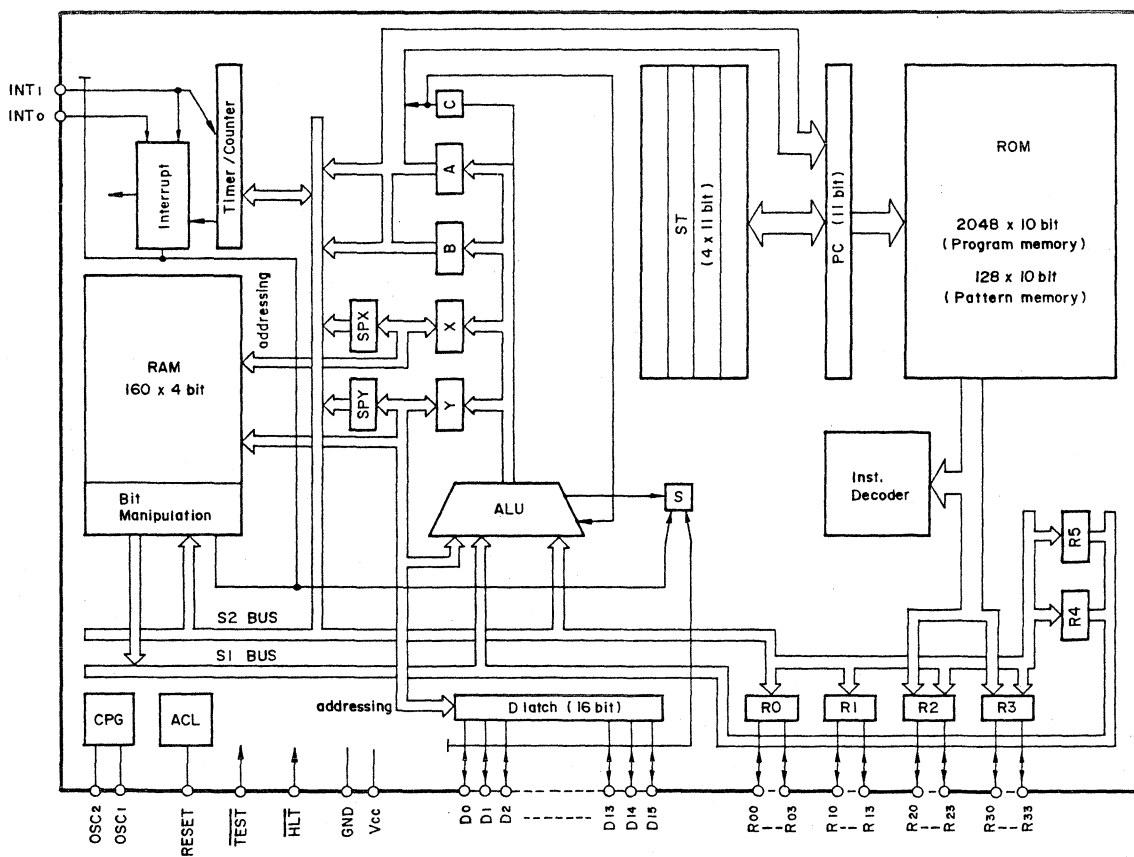


Fig.1-2 U905 Block Diagram

U904 MB8841H-1248
Mechanical microcomputer

Pin	Code	Function
1	OSC ₁	External oscillator connection pin (4MHz ceramic oscillator KBR-4.0M)
2	OSC ₂	
3	RESET	L:CPU reset, H:CPU operation, power-on reset pin.
4	IQS	Cam interrupt oscillator input (standard signal input for cam position detection).
5	SO	(NC)
6	SI	Key input, serial clock data input pin.
7	SCK	Key input, serial clock data input pin.
8	TC	Cam position oscillator input (Cam position signal input).
9	P ₀	Control data output pin.
10	P ₁	
11	P ₂	
12	P ₃	
13	O ₀	Signal output for remote control detection.
14	O ₁	
15	O ₂	
16	O ₃	
17	O ₄	5-bit data output pin including R ₇ .
18	O ₅	
19	O ₆	
20	O ₇	
21	GND	GND
22	R ₀	Data write control signal, outputs High.
23	R ₁	Cam motor control signal output pin.
24	R ₂	Cam motor control signal output pin.
25	R ₃	Remote control return signal input pin.
26	R ₄	Reel motor play signal output pin, outputs High.
27	R ₅	Reel motor fast-forward signal output pin, outputs High.
28	R ₆	Reel motor rewind signal output pin, outputs High.
29	R ₇	5-bit data output pin, including O ₄ -O ₇ .
30	R ₈	Recording detector signal input pin. High:recording possible, Low: recording not possible.
31	R ₉	Right reel pulse input pin (Tape end detect and CPS tape overtravel compensation).
32	R ₁₀	Cassette detector signal input pin. High: no cassette, Low: casetter present.
33	R ₁₁	CPS track detection signal input pin.
34	R ₁₂	Play mute signal output pin. High:mute off, Low: mute on.
35	R ₁₃	Record mute signal output pin. High:mute off, Low:mute on.
36	R ₁₄	Bias osc. on/off signal output pin. High:bias off, Low:bias on.
37	R ₁₅	Remote record signal input (Low input during remote recording).
38	K ₀	Control Data input pin.
39	K ₁	
40	K ₂	
41	K ₃	Data write completion signal input pin.
42	V _{cc}	Power supply pin (+5V).

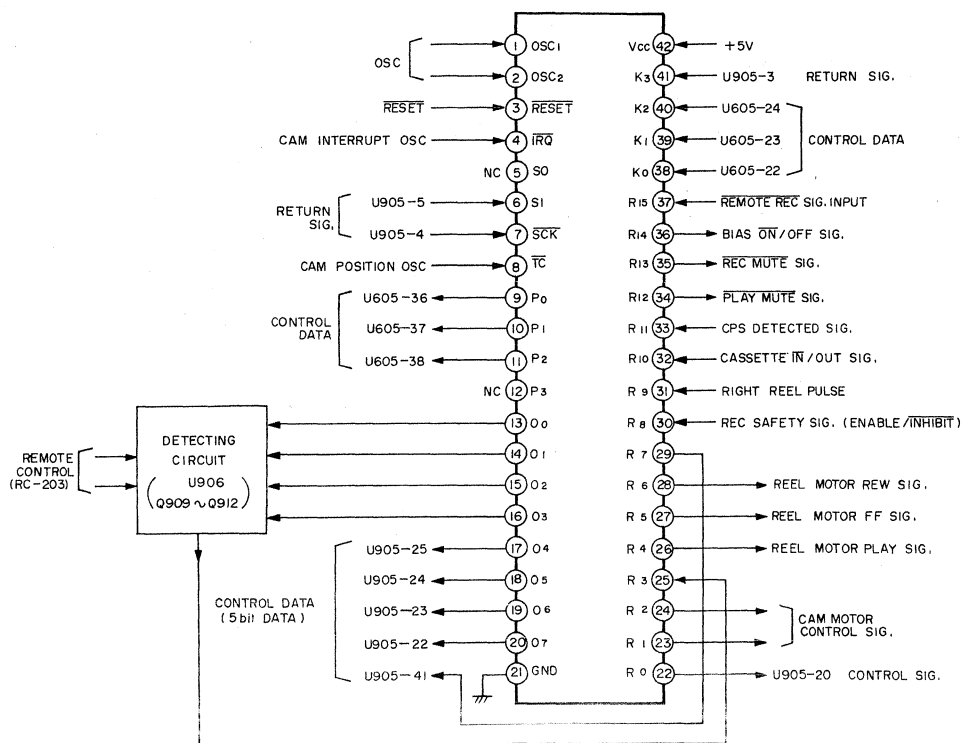


Fig. 1-3 U904 MB8841H-1248 Pin Chart

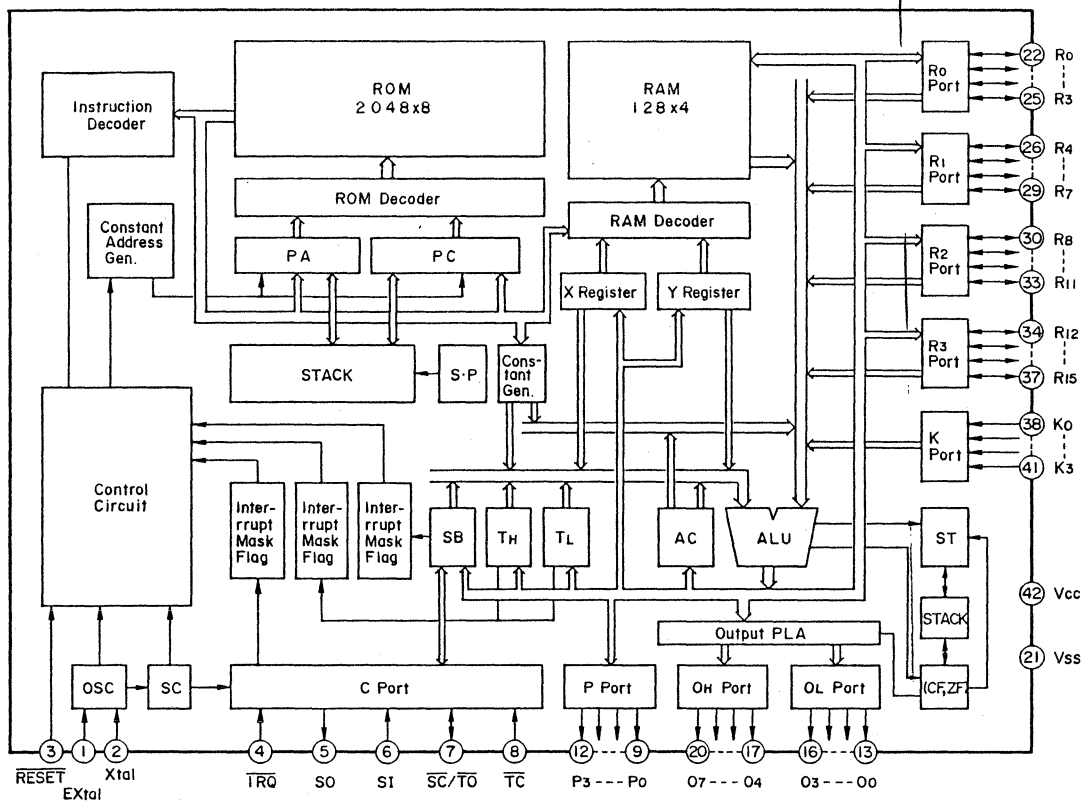


Fig. 1-4 U904 Block Diagram

U605 HD44801B58
Auto Cal Microcomputer

Pin	Code	Function
1	D3	Fade-in LED light signal, outputs High.
2	D4	Fade-out LED light signal, outputs High.
3	D5	3kHz sig. output pin for a to-calibration. H is output.
4	D6	12kHz sig. output pin for auto-calibration. H is output.
5	D7	Preset cancel sig., outputs L. Fade-in/out control sig.
6	D8	Fade-out sig., outputs L. Fade-in/out control sig.
7	D9	Fade-in sig., outputs L. Fade-in/out control sig.
8	D10	Clock input, fade-in/out completion dataaction.
9	D11	Comparator reset sig. output pin. L:during auto-calibrate, H:other times.
10	D12	L:metal, H:other. Tape select signal input pin.
11	D13	L:70 usec, H:120 usec.
12	D14	L:L ch., H:R ch., L/R select signal output pin for autocalibration.
13	D15	Halt condition signal.
14	NC	(NC)
15	RESET	H:CPU reset, L:CPU operation.
16	GND	GND
17	OSC1	External oscillator connection pin (400kHz ceramic oscillator KBR-400).
18	OSC2	
19	HLT	Halt signal
20	TEST	VCC
21	Vcc	Power supply terminal with back-up.
22	R00	Control data output terminal.
23	R01	
24	R02	
25	R03	Mute signal output pin. H:during auto-calibration, L:other times.
26	R10	Auto-calibration data output pin.
27	R11	
28	R12	
29	R13	
30	INT0	Right reel pulse input pin.
31	INT1	(NC)
32	R20	EQ and D/A select signal output pin for auto-calibration.
33	R21	
34	R22	
35	R23	(NC)
36	R30	Control data input pin.
37	R31	
38	R32	
39	R33	Comp signal input pin (comparative signal of L/R signal to standard signal during auto-calibration).
40	D0	Memo LED light signal, outputs High.
41	D1	Ref LED light signal, outputs High.
42	D2	Auto LED light signal, output High.

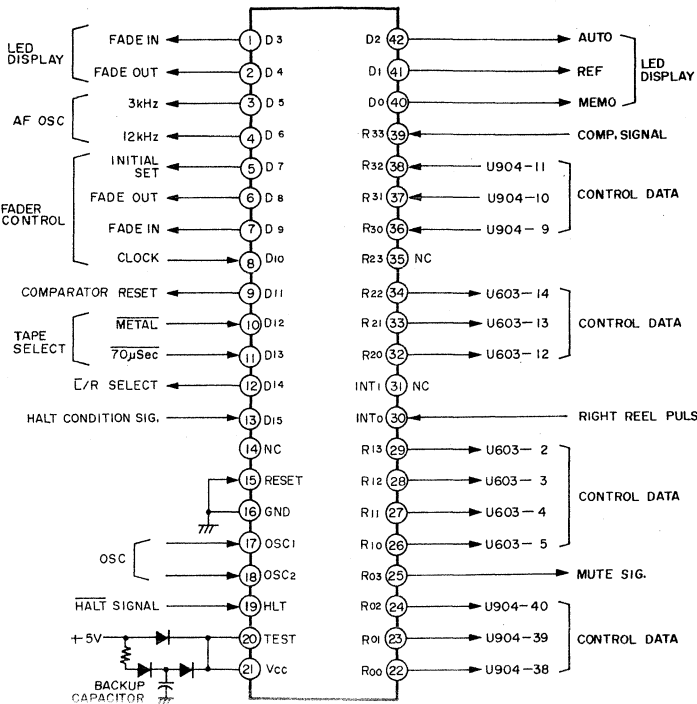


Fig. 1-5 U605 HD44801B58 Pin Chart

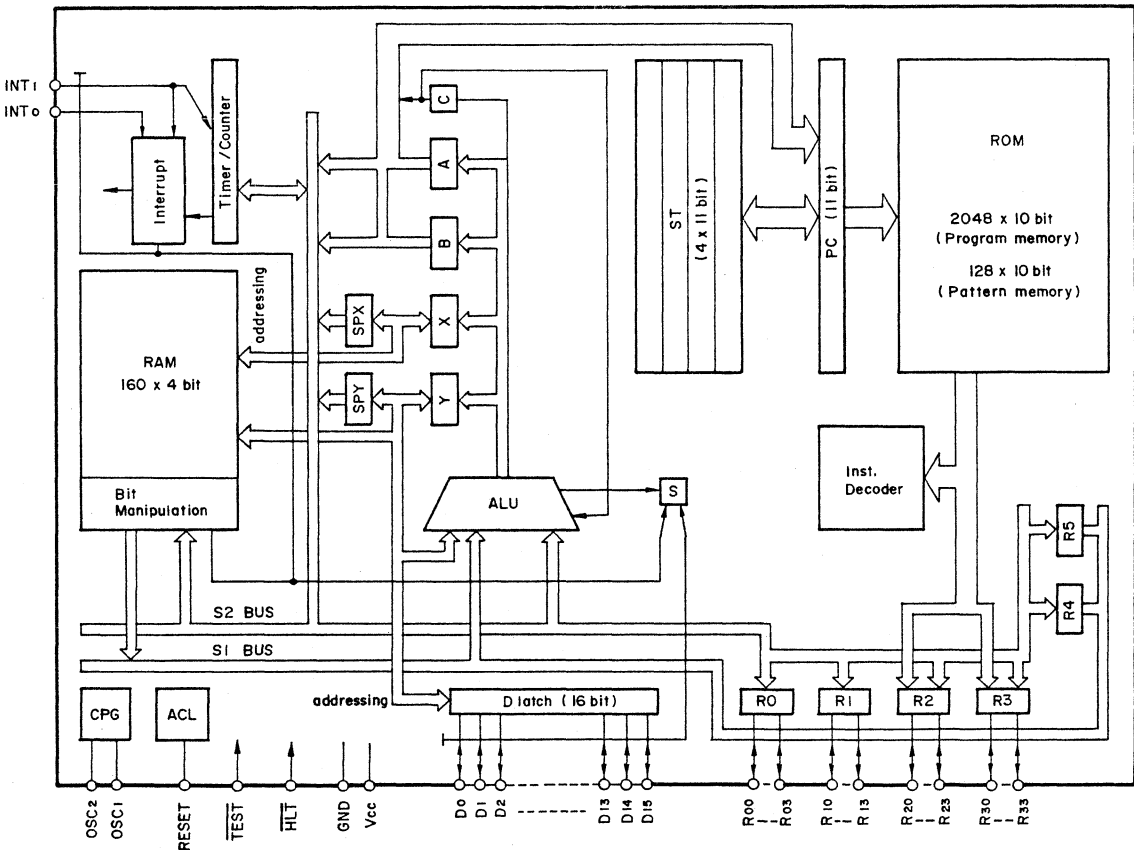


Fig. 1-6 U605 Block Diagram

U603 HA12035
2-channel Automatic Equalizer

Pin	Code	Function
1	TEST	TEST
2	D ₂	2 ³
3	D ₃	2 ²
4	D ₄	2 ¹
5	D ₅	2 ⁰
6		4-bit data input pin.
7		
8		
9		
10		
11	GND	Digital ground
12	R ₀	Mode select signal input pin.
13	R ₁	
14	R ₂	
15		V _{cc}
16		D/A 2 output pin(Comparitive output)
17		D/A 1 output pin (bias control)
18		EQ output pin (audio signal output pin)
19		EQ external connection pin.
20		EQ external connection pin.
21		VCA input pin (audio signal input pin.)
22	GND	Analogue ground
23		VCA input pin (audio signal input pin.)
24		EQ external connection pin.
25		EQ external connection pin.
26		EQ output pin (audio signal output pin).
27		Reference voltage decoupling.
28	V _{cc}	Power supply pin.

4-bit Data Chart

MODE	4 bit DATA	Gain	Current	Voltage
VCA (L ch,R ch)	0000	Min	--	--
EQ (L ch,R ch)	1111	Max	--	--
D/A 1 (BIAS)	0000	--	Max	--
	1111	--	Min	--
D/A 2 (COMP)	0000	--	--	Max
	1111	--	--	Min

4 bit Data(BCD)

D₀ : 2⁰
D₁ : 2¹
D₂ : 2²
D₃ : 2³

Mode Selector Chart

	R ₂	R ₁	R ₀	
No effect	0	0	0	(Mode for fast forward or rewind)
EQ R	0	0	1	Controls the 12kHz right-channel equalizer.
EQ L	0	1	0	Controls the 12kHz left-channel equalizer.
D/A 2 (COMP)	0	1	1	Controls the reference voltage for the comparator.
VCA L	1	0	0	Contorls left-channel gain.
VCA R	1	0	1	Controls right-channel gain.
D/A 1 (BIAS)	1	1	0	Controls bias.
RESET	1	1	1	Discharges the hold condenser

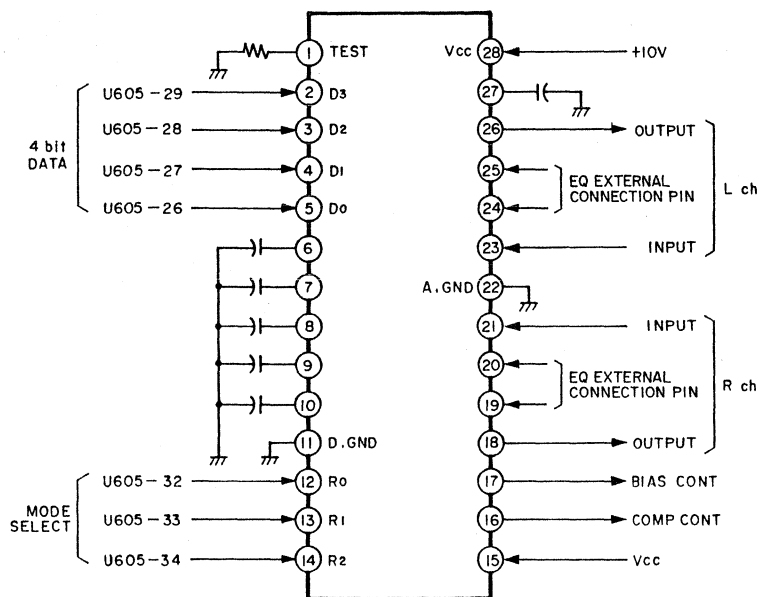


Fig.1-7 U603 HA12035 Pin Chart

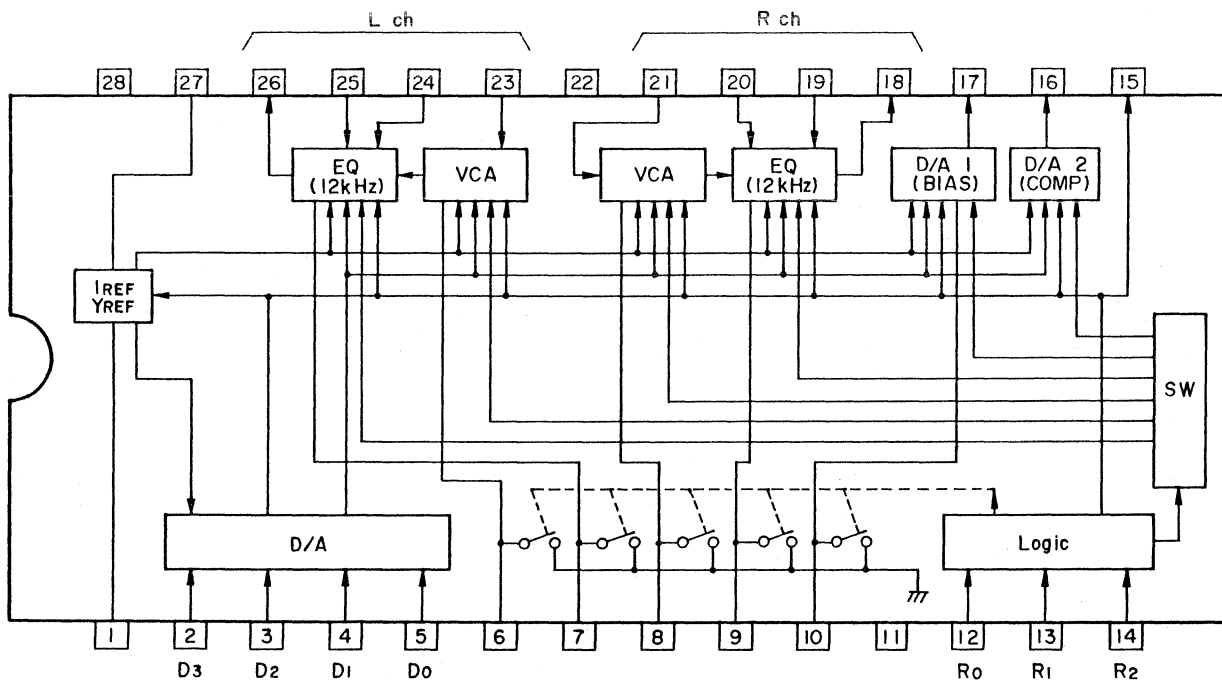


Fig.1-8 U603 Block Diagram

U601 TC9153P Electronic Volume I.C.

Pin	Code	Function.
1	VSS	Minus power supply pin.
2	L-OUT ₁	Left channel output 1. $\leftarrow 10 \text{ dB/step} \times 7$
3	L-IN ₁	Left channel input 1.
4	A-GND	Right channel ground.
5	L-IN ₂	Left channel input 2. $\leftarrow 2 \text{ dB/step} \times 5$
6	L-OUT ₂	Left channel output 2.
7	INH	Low:Stop operation (maintain), set to High.
8	DCO	Attenuation display DC output pin (unused).
9	OSC	Time constant circuit for internal osc., fade speed set pin.
10	U/D	High:fade-in (up), Low:fade-out (down).
11	R-OUT ₂	Right channel output 2. $\leftarrow 2 \text{ dB/step} \times 5$
12	R-IN ₂	Right channel input 2.
13	A-GND	Left channel ground.
14	R-IN ₁	Right channel input 1. $\leftarrow 10 \text{ dB/step} \times 7$
15	R-OUT ₁	Right channel output 1.
16	VDD	Positive power supply pin.


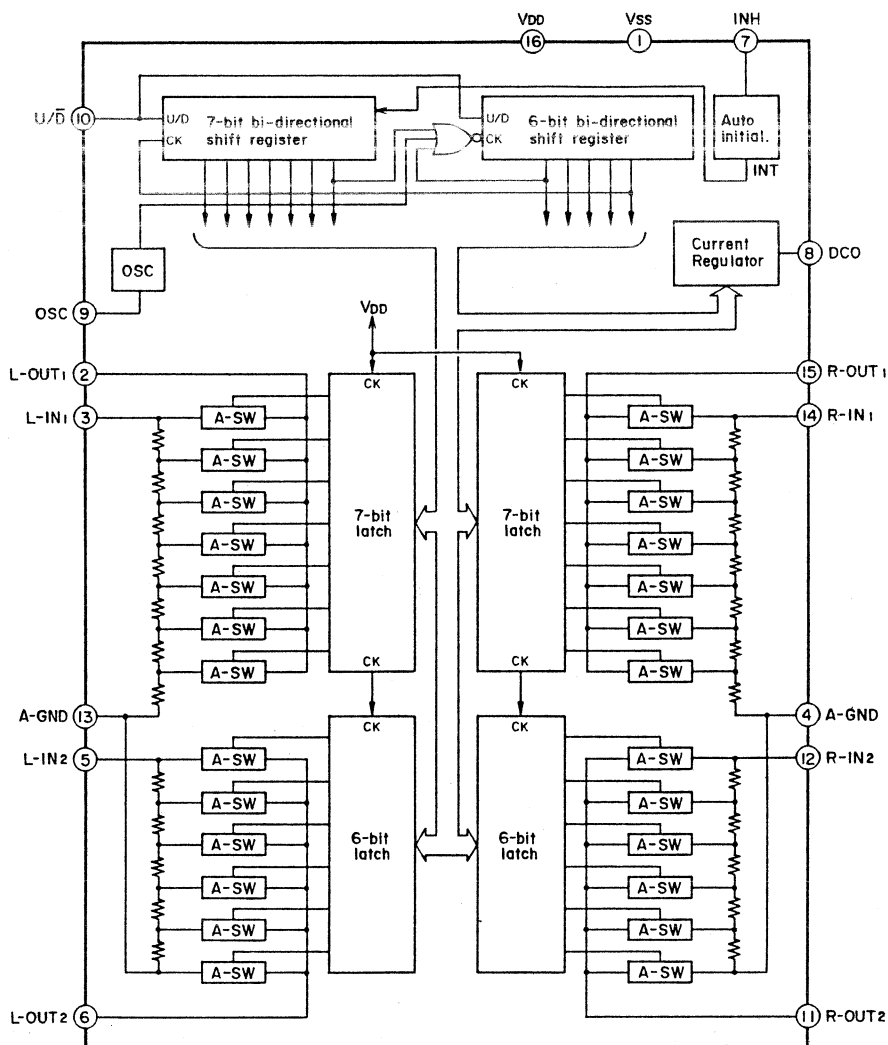


Fig. 1-9 U601 Block Diagram

U606 TC4053BP Triple 2-channel Multiplexer/demultiplexer

Pin	Code	Function
1	1Y	400Hz/3kHz/12kHz signal input pin for auto-calibration.
2	0Y	L ch audio signal input pin.
3	1Z	400Hz/3kHz/12kHz signal input pin for auto-calibration.
4	Z _{COM}	R ch output pin.
5	0Z	R ch audio signal input pin.
6	INH	Set to Low.
7	V _{EE}	Minus power supply pin.
8	V _{SS}	GND
9	C	Control data input pin.
10	B	
11	A	
12	0X	Unused
13	1X	
14	X _{COM}	
15	Y _{COM}	L ch output pin.
16	V _{DD}	Positive power supply pin.

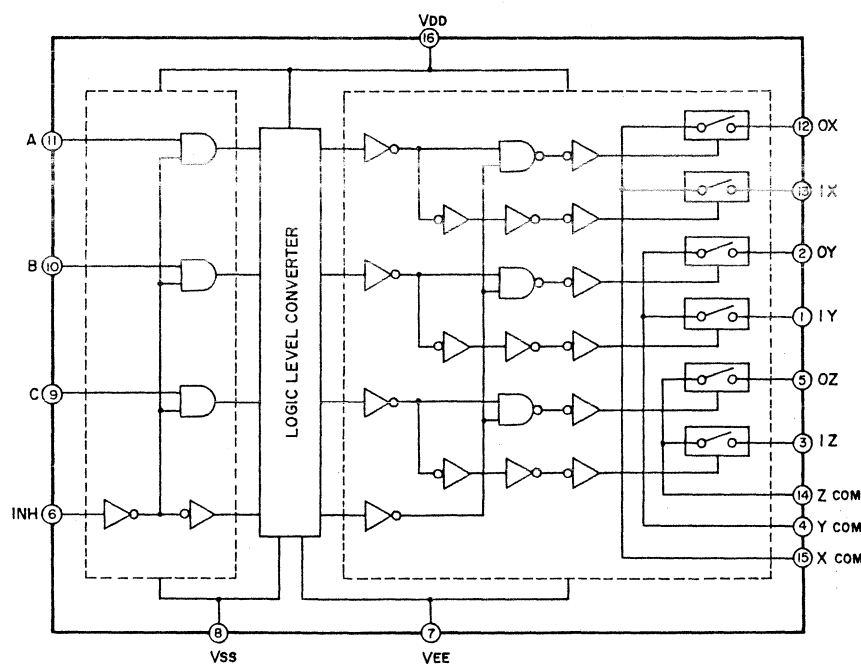

Function Chart

CONTROL INPUTS				"ON" CHANNEL
6 INH	9 C	10 B	11 A	
L	L	L	L	0X, 0Y, 0Z
L	L	L	H	1X, 0Y, 0Z
L	L	H	L	0X, 1Y, 0Z
L	L	H	H	1X, 1Y, 0Z
L	H	L	L	0X, 0Y, 1Z
L	H	L	H	1X, 0Y, 1Z
L	H	H	L	0X, 1Y, 1Z
L	H	H	H	1X, 1Y, 1Z

Fig. 1-10 U606 Block diagram

UL-02 MSL9359RS 2-channel 15-dot Level Meter Driver

Pin	Code	Function
1	O ₁	<div>-20dB meter output.</div> <div>15-dot meter segment light signal output pin.</div> <div>+10dB meter output.</div>
2	O ₂	
3	O ₃	
4	O ₄	
5	O ₅	
6	O ₆	
7	O ₇	
8	O ₈	
9	O ₉	
10	O ₁₀	
11	O ₁₁	
12	O ₁₂	
13	O ₁₃	
14	O ₁₄	
15	O ₁₅	
16	DIV.OUT	Clock minutes signal output pin, unused.
17	GND	Ground
18	M.MODE	Peak hold manual mode select pin (set to Low).
19	OSC.IN	Clock oscillator time constant circuit connection pin.
20	POR	Power on reset input pin, resets and mutes on Low.
21	A.MODE	Peak hold auto mode select pin, set to Low.
22	M.RESET	Peak hold auto reset time constant connection pin.
23	R _{IN}	Right channel input pin.
24	L _{IN}	Left channel input pin.
25	L _{OUT}	Meter segment left channel common signal output pin.
26	R _{OUT}	Meter segment right channel common signal output pin.
27	VCC	Power supply pin.
28	VCCD	Power supply pin.

UL02 MSL9359RS Block Diagram

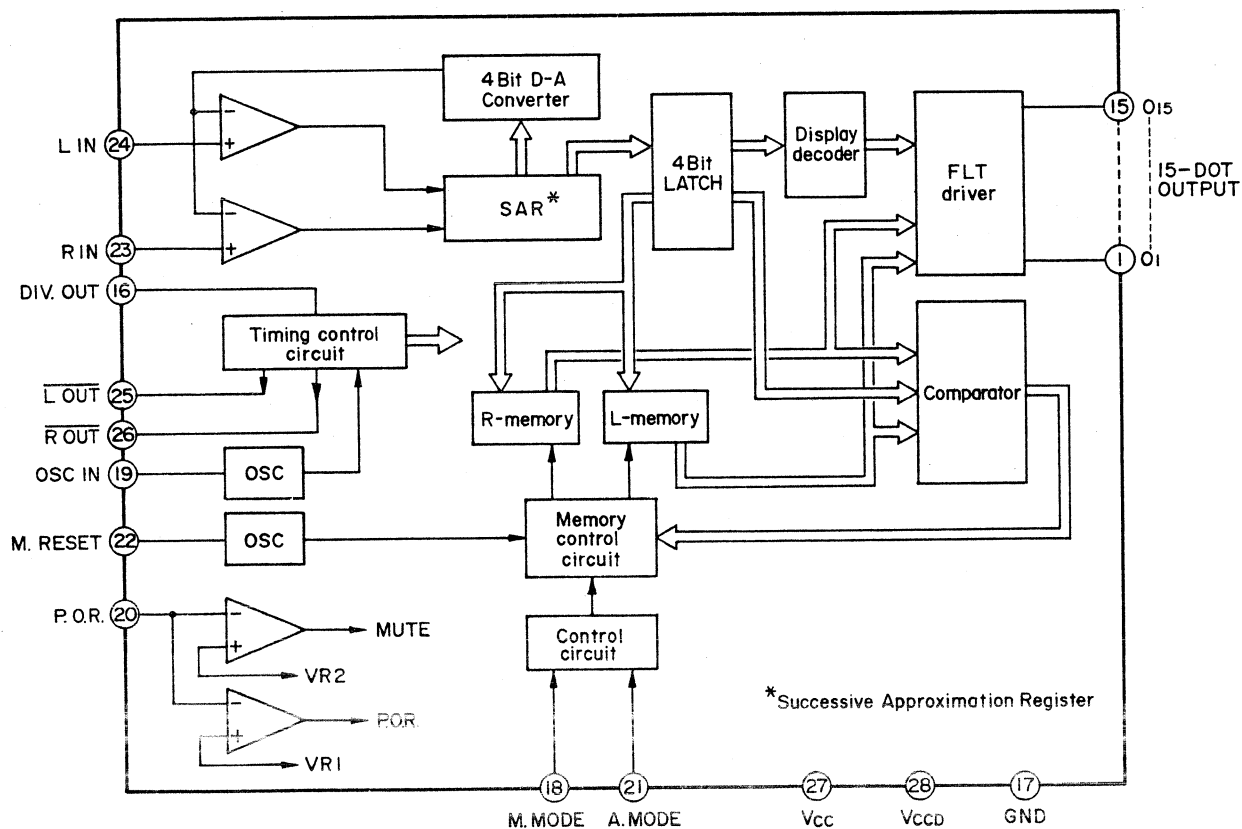


Fig. 1-11

UL01 TA7318P Wide-range Peak Power Meter Driver

Pin	Code	Function
1	GND	Ground pin for minus power supply.
2	OUTPUT L	L ch output pin, output is DC.
3	HOLD L	L ch time constant external pin.
4	INPUT L	L ch input pin.
5	-V _{EE}	Minus power supply pin, ground on the V-900X.
6	INPUT R	R ch input pin.
7	HOLD R	R ch time constant external pin.
8	OUTPUT R	R ch output pin, output is DC.
9	+V _{CC}	Positive power supply pin.

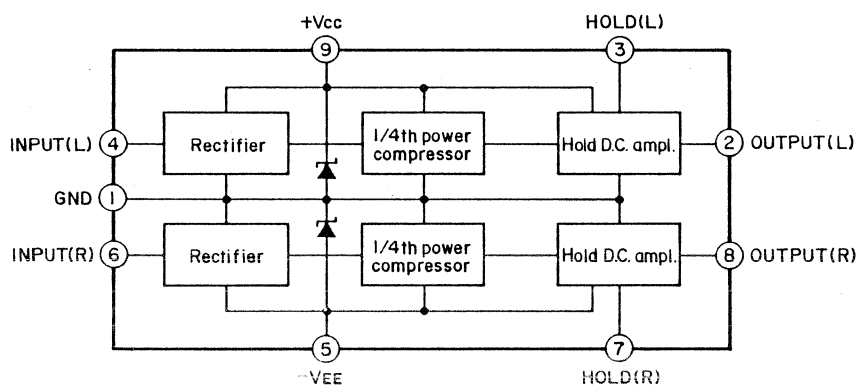


Fig. 1-12 UL01 Block Diagram

U701L/R, U702L/R HA12058 B/C-type Switchable Processor

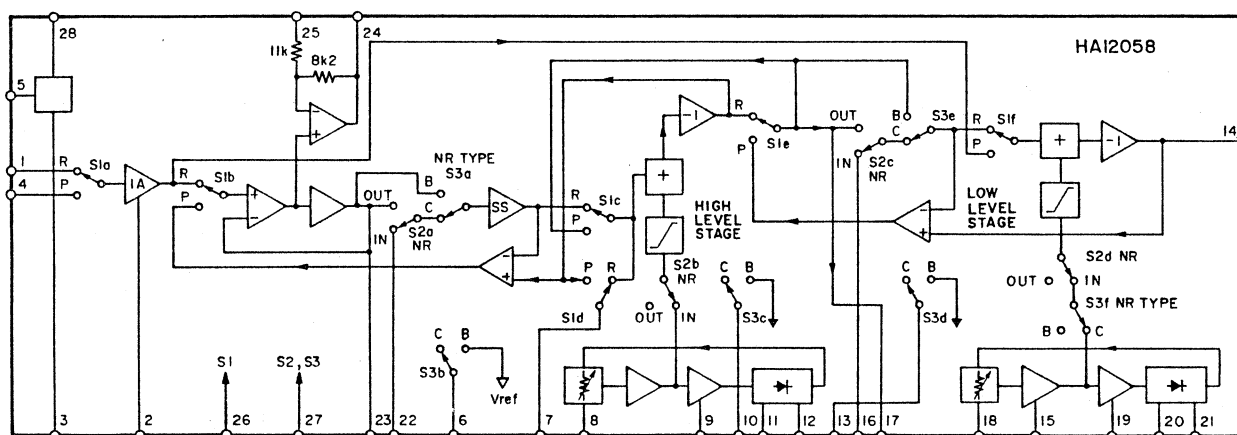


Fig. 1-13

2. Function Key Input Circuitry

2-1. Key Matrix.

The function key input circuit is as shown in figure 2-1. (The diagram indicates the condition when the rewind key has been depressed).

The operational mode of the deck is determined by the combinations (timings) of the D₁₀-D₁₅ outputs

and the R₁₀-R₁₃ input. For example, as shown in figure 2-2, when the D₁₄ output is High, and a High is input to R₁₁, the U905 micro-computer determines that it has been ordered to enter rewind mode.

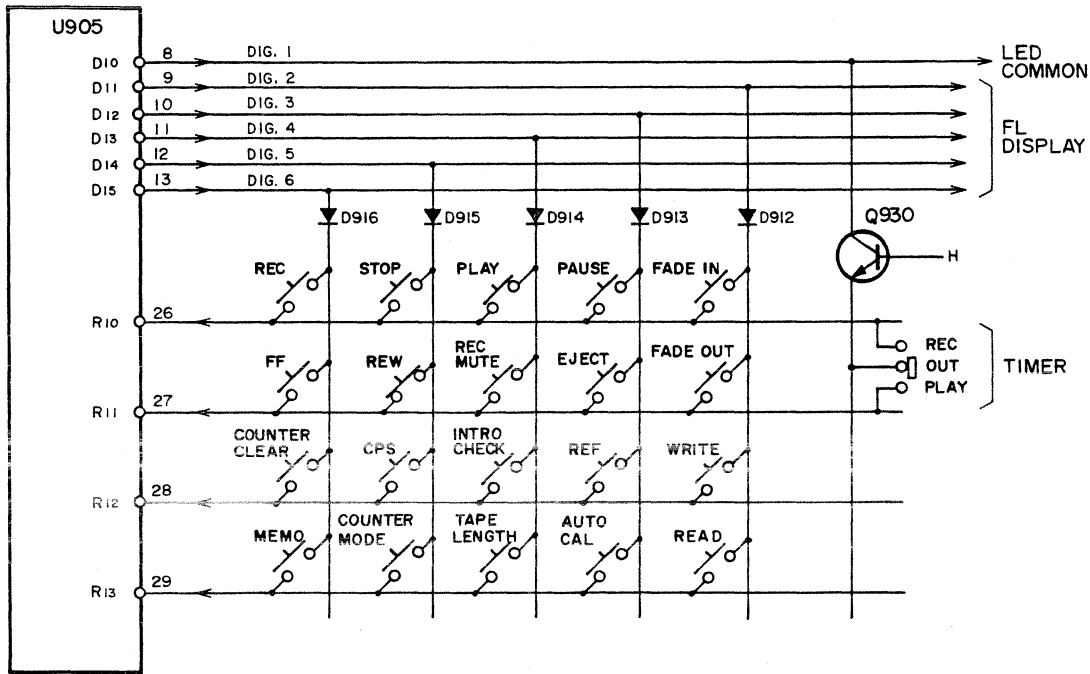


Fig. 2-1 Key Matrix

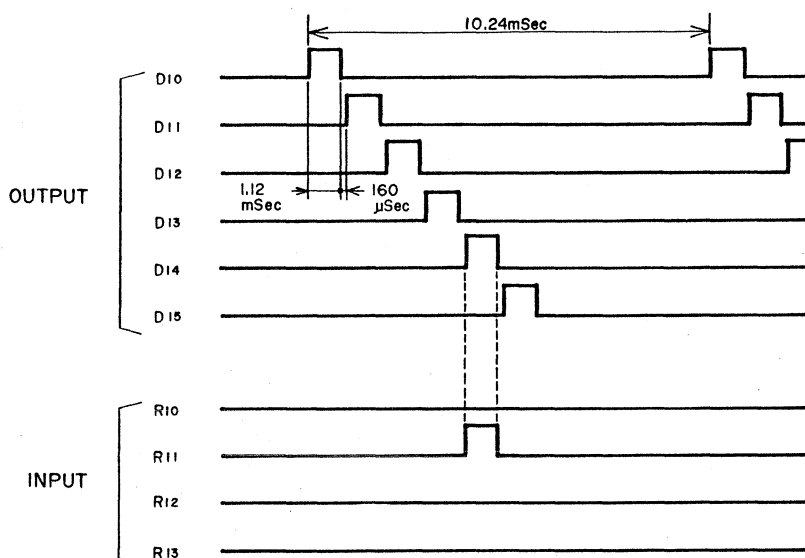


Fig. 2-2 Diagram of Rewind Mode

2-2. Multiple Key Operation.

The U905 key microcomputer basically reacts as follows in response to keyed input.

When a key is operated, the U905 receives the keyed function command, but it will not accept a new command unless all the keys are turned off first. As a result of this, when multiple keys are depressed at the

same time, the first key to be depressed will be received, regardless of when they are turned off. The four special cases of FF and REW, PLAY and REC, PLAY and PAUSE, and REC and PAUSE are treated differently from the above, though. In addition, if the STOP key is depressed with any other key, the STOP key is given priority.

Table 2-1 Multiple Key Modes when Depressed

		Second key depressed					
		REW	STOP	PLAY	F.FWD	REC	PAUSE
First key depressed	REW		STOP	REW	STOP	REW	REW
	STOP	STOP		STOP	STOP	STOP	STOP
	PLAY	PLAY	STOP		PLAY	REC/PLAY	PAUSE
	F.FWD	STOP	STOP	F.FWD		F.FWD	F.FWD
	REC	STOP	STOP	REC/PLAY	STOP		REC/PAUSE
	PAUSE	PAUSE	STOP	PAUSE	PAUSE	REC/PAUSE	

Table 2-2 Modes after Multiple Key Depression

 : Differences from Table 2-1 above.

		Second key released					
		REW	STOP	PLAY	F.FWD	REC	PAUSE
First key depressed	REW		STOP	REW	F.FWD	REW	REW
	STOP	STOP		STOP	STOP	STOP	STOP
	PLAY	PLAY	STOP		PLAY	REC/PLAY	PAUSE
	F.FWD	REW	STOP	F.FWD		F.FWD	F.FWD
	REC	STOP	STOP	REC/PLAY	STOP		REC/PAUSE
	PAUSE	PAUSE	STOP	PLAY	PAUSE	REC/PAUSE	

3.Data Exchange between U904 and U905

3-1. Serial data transfer.

Refer to figures 3-1 and 3-2. The U905 key microcomputer receives an input from the key matrix, and transfers the content to the U904 mechanical microcomputer after changing it to serial data.

The serial data is composed of 4-bit key matrix return signals, placed one on each of DIG-1 to DIG-6.

The U904, after receiving the

serial data, determines the deck's operation mode, and sends that status information to U905 after converting it to 5-bit data. The U904 checks the SCK clock, and writes data if any is available. SI data is output from the U905 once each time a key switch is turned on or off.

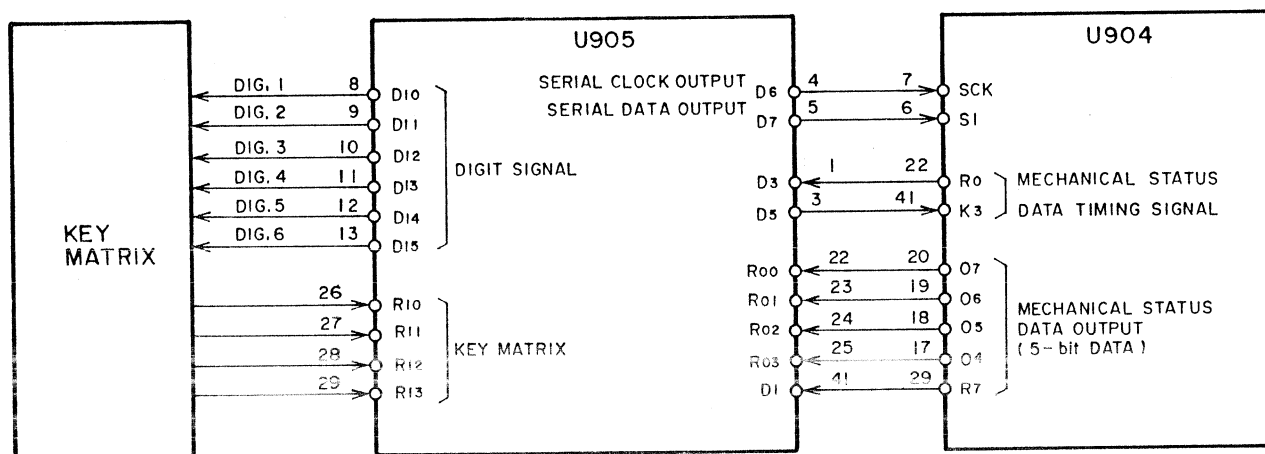


Fig. 3-1 Data Exchange between U905 and U904

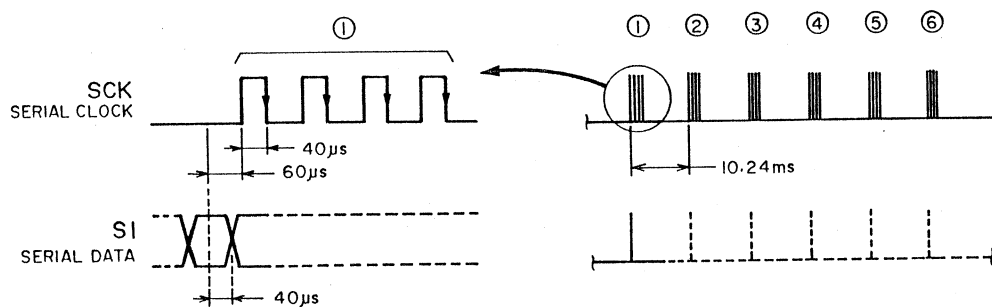


Fig. 3-2 Waveforms

3-2 5-bit Data Transfer.

Operations of the mechanical microcomputer U904:

1. Determines the deck's function mode through serial data input, and creates 5-bit data.
2. R0 port goes High, and 5-bit data is output.
3. After outputting the 5-bit data, checks the status of the K3 input port. If a High is detected, the R0 port is returned to Low.

Operation of key microcomputer U905:

1. When D3 port input goes High, it writes the 5-bit data, and then changes D5 output port to High.
2. Checks the D3 port input, and is Low, then changes D5 port output to Low.

3-3 5-bit Data Content.

The 5-bit data output by U904 after it receives serial data from U905 is shown below.

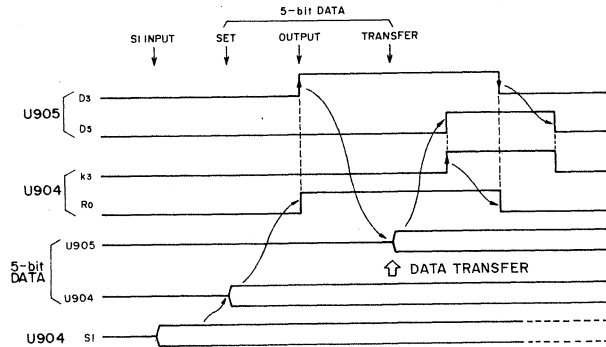


Fig. 3-3 5-bit Data Transfer

Pin of U904					MODE
20	19	18	17	29	
07	06	05	04	R7	
L	L	L	L	L	STOP
L	L	L	H	L	INTRO SCAN FF
L	L	H	L	L	REW
L	L	H	H	L	CPS FF
L	H	L	L	L	PAUSE
L	H	L	H	L	CPS COUNTER CLEAR
L	H	H	L	L	FF
L	H	H	H	L	REC PAUSE
H	L	L	L	L	PLAY
H	L	L	H	L	INTRO SCAN PLAY
H	L	H	L	L	TAPE END SIGNAL
H	L	H	H	L	CPS REW
H	H	L	L	L	REC MUTE
H	H	L	H	L	CPS DATA COUNT DOWN)
H	H	H	L	L	REC PLAY
H	H	H	H	L	INTRO SCAN REW
H	L	H	H	H	MEMORY
H	L	H	L	H	COUNTER MODE
L	L	H	L	H	TAPE LENGTH
H	H	L	L	H	CASSETTE CUT
L	H	L	H	H	CPS DATA (COUNT UP)
H	L	L	H	H	CLEAR
L	H	L	L	H	AUTO CAL REW

4. FL Meter Lighting Circuitry

4-1. Peak Level Meter.

Refer to figure 4-1.

The left or right channel audio signal which is applied to pin 6/pin 4 of UL01, is changed to DC current in response to its level, and sent to the UL02 meter driver.

The UL02 outputs a level meter light signal in response to this input signal, and lights the left and right

channel meters alternatively every 0.5msec. as determined by an oscillator inside the I.C. The peak hold time is determined by the time constant circuit formed by RL11 and CL08, and ranges from about 0.5 to 1.0 seconds.

The meter scale numbers and the ∞ are always lit.

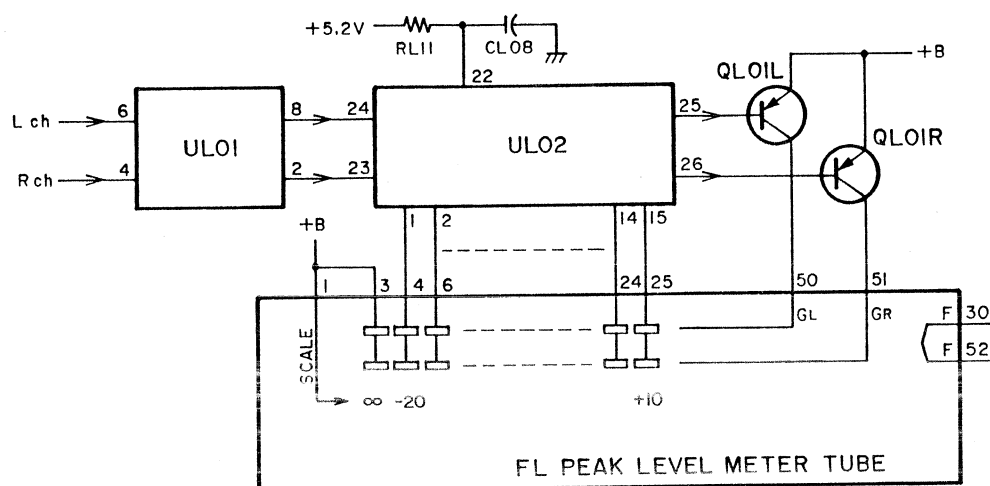


Fig. 4-1 Peak Level Meter

4-2 Counter and CPS Display

The circuit is composed as shown in figure 4-2, and figure 4-3 is a timing chart for a lighting example. Note that the orders of the key matrix signal source digit numbers (G1-G6) and the FL Meter tube digit numbers (G1-G5) are different.

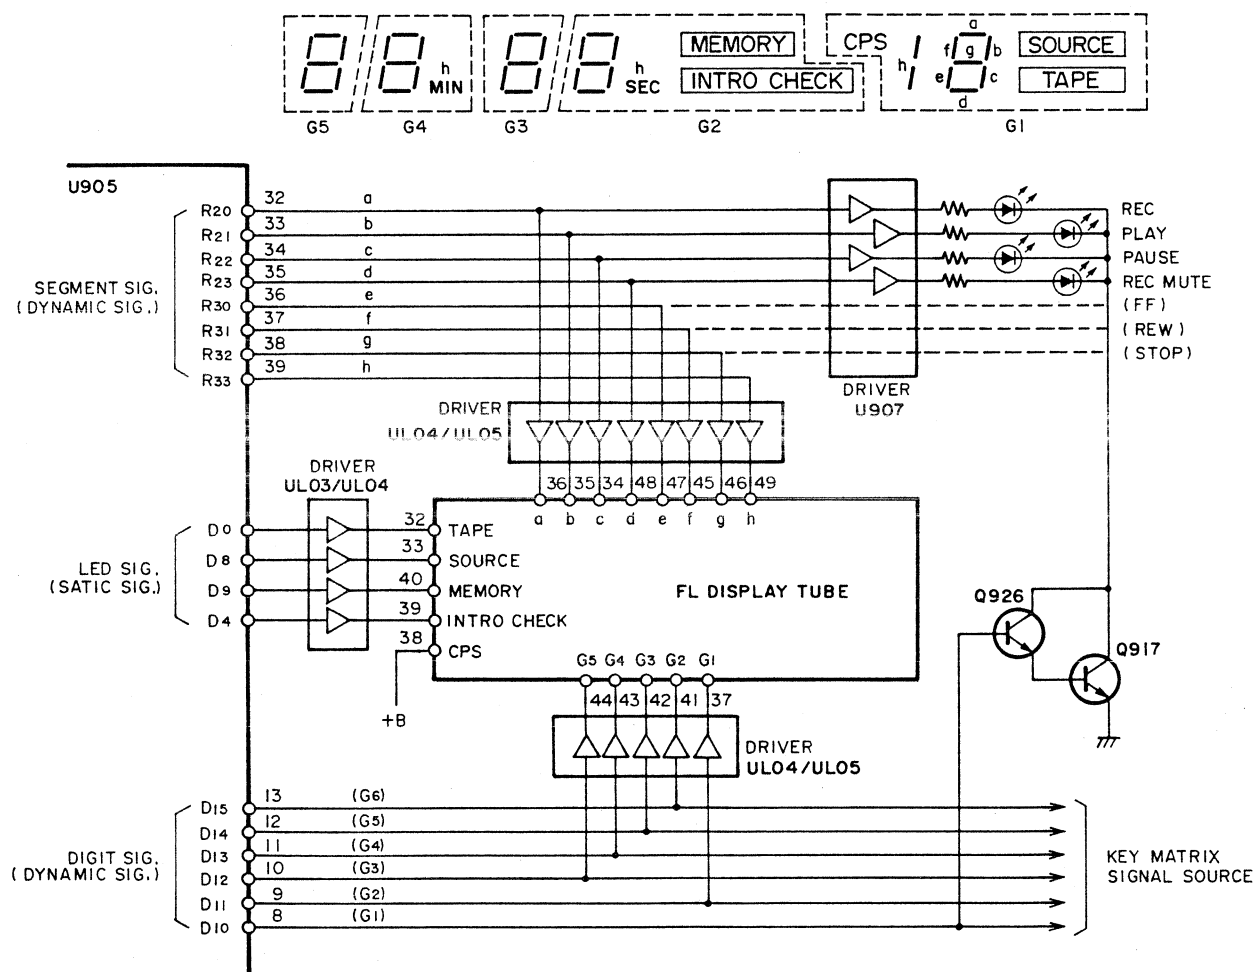


Fig. 4-2 FL Meter Circuit Diagram

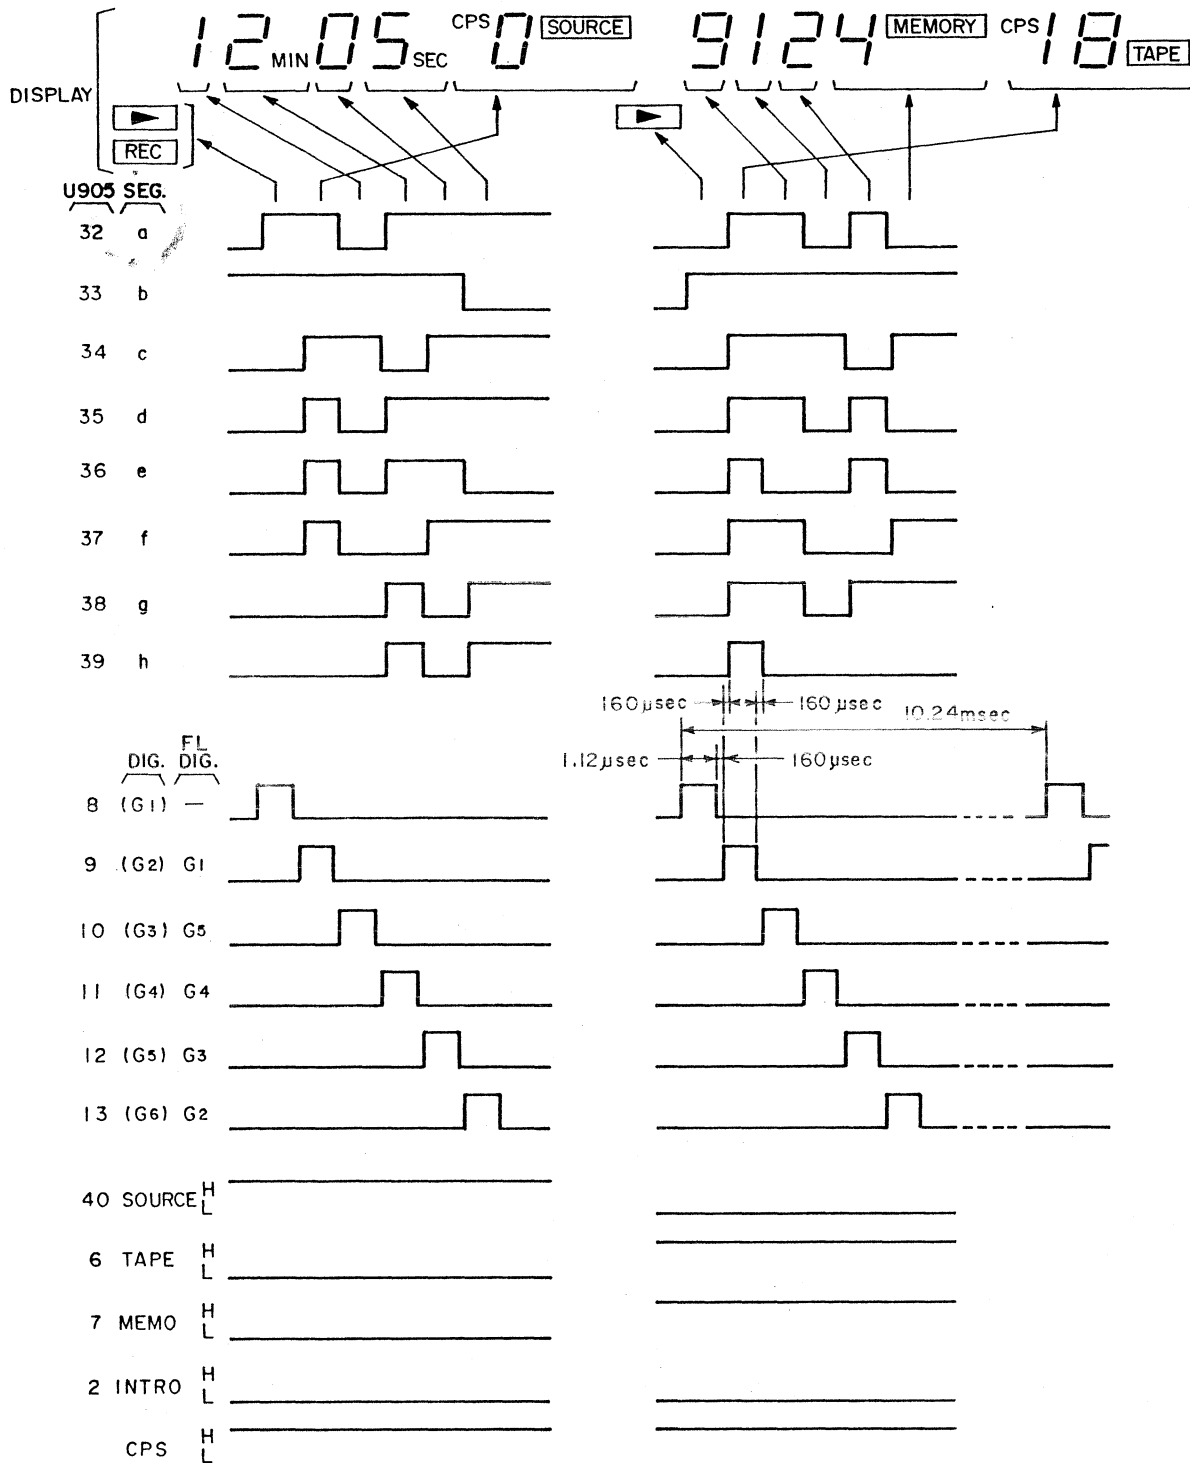


Fig. 4-3 Timing Example of Digit

5. Remote Circuitry

The remote control unit used in the V-900X is the RC-203, which is a two-lead wired type. Operation command signals are sent from the RC-203 to the V-900X as DC potentials (static signals). The remote circuit shown in figure 5-1 then detects the command content from these signals.

The output signals from pins 13-16 of U904 turn Q909-Q912 on and off, and change the resistance value between pin 2 of U906 and ground. As a result the voltage potential of pin 1 (pin 5) of U906 becomes a step-form.

When a switch is pressed on the RC-203, a DC signal corresponding to that command is applied to pin 6 of U906. The potential of pin 5 of U-906 enters step-form (rises), and when the potential reaches or exceeds that of pin 6 the output from pin 7 changes Low to High. The U904 mechanical microcomputer detects this rise timing, and determines the command content.

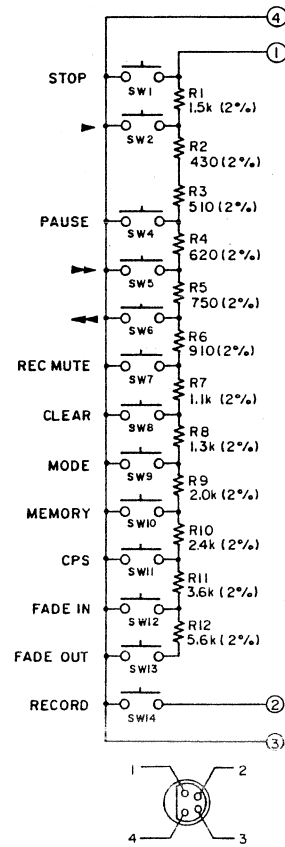


Fig. 5-2 RC-203 Remote Control

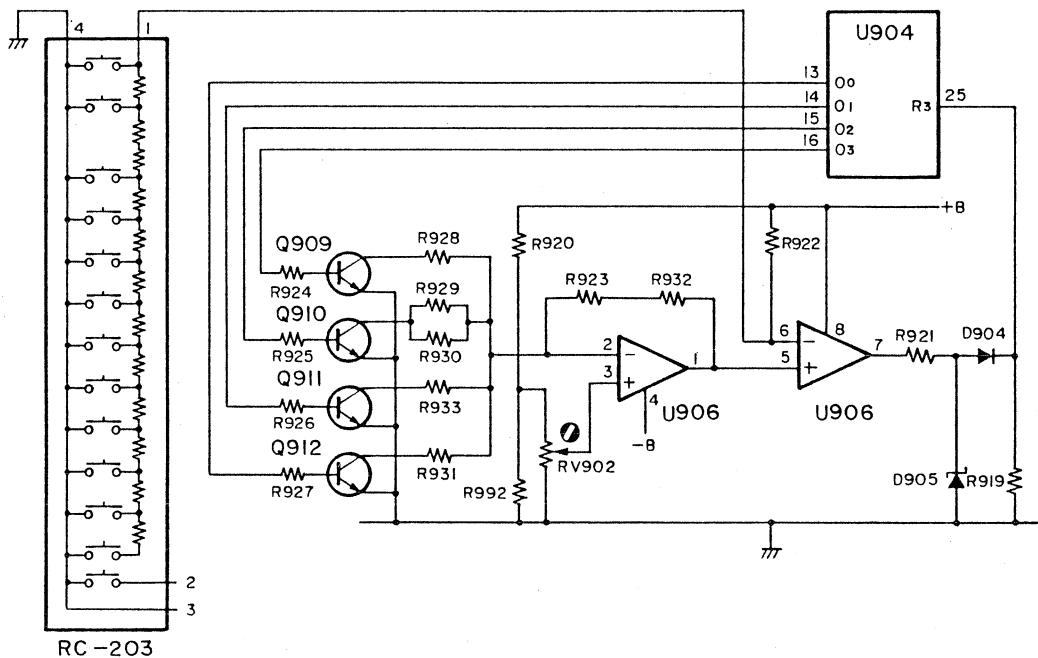


Fig. 5-1 Remote Control Detection Circuit

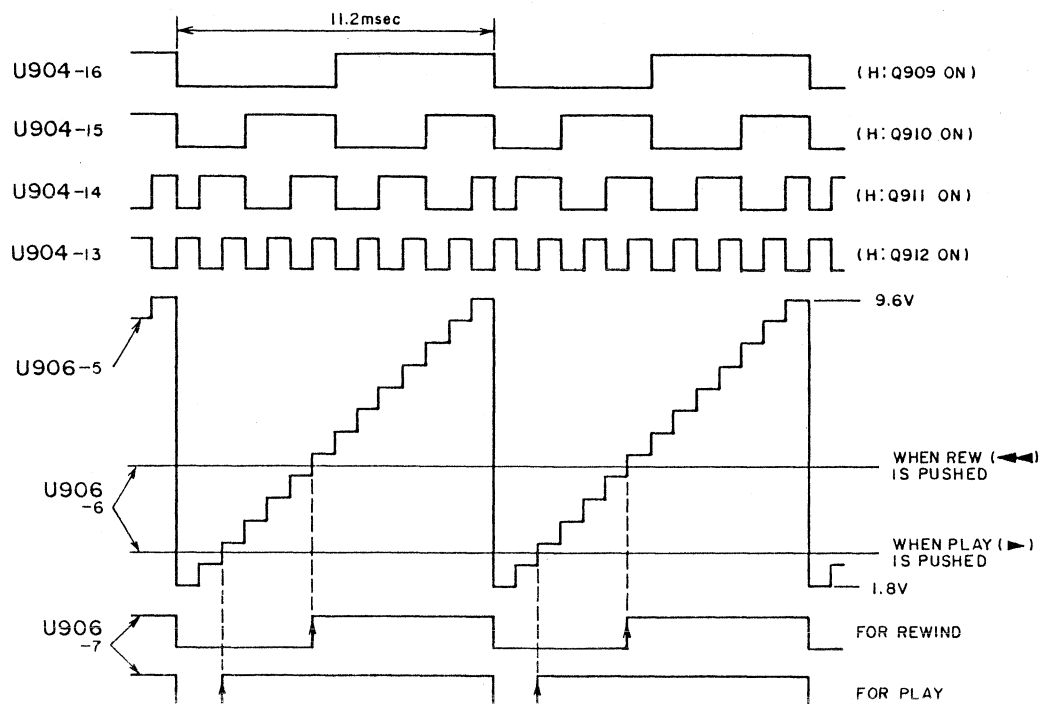


Fig. 5-3 Potential Chart

6. Cam and Motor Control

The mechanical operation is controlled by a cam, which is driven by the cam motor. The U902 cam motor control I.C. controls the direction of

the cam motor rotation through the combination of Highs and Lows input from the mechanical microcomputer, U904, by way of the U903 unit.

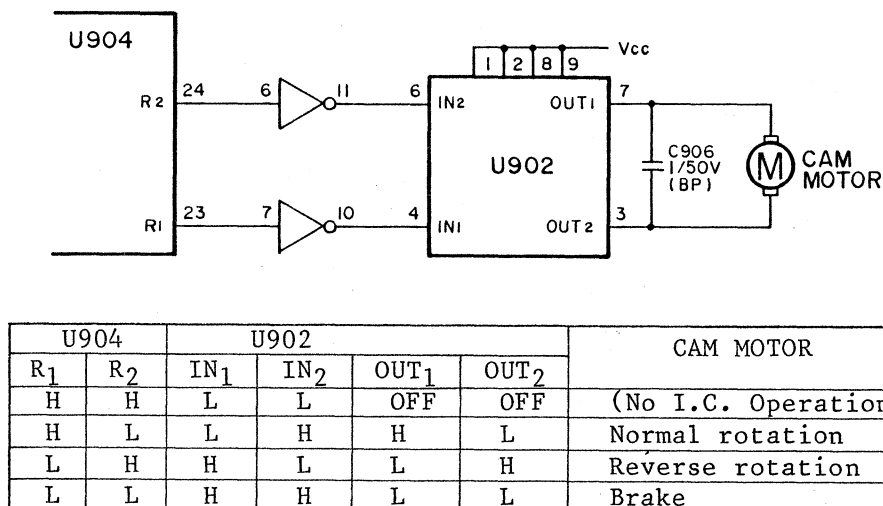


Fig. 6-1 Cam Motor Control

The cam is driven by the cam motor. Two oscillators are used to determine if the cam has reached the target position or not. (Fig. 6-2). OSC-2 is the cam interrupt oscillator, with a frequency of 500Hz, and a time of 2.0 mseconds. OSC-1 is the cam position oscillator, and is a voltage

controlled oscillator (VCO) controlled by the volume coupled to the cam.

When the cam rotates, the output frequency of OSC-1 changes, and that changed frequency is detected by U904 to determine the cam position.

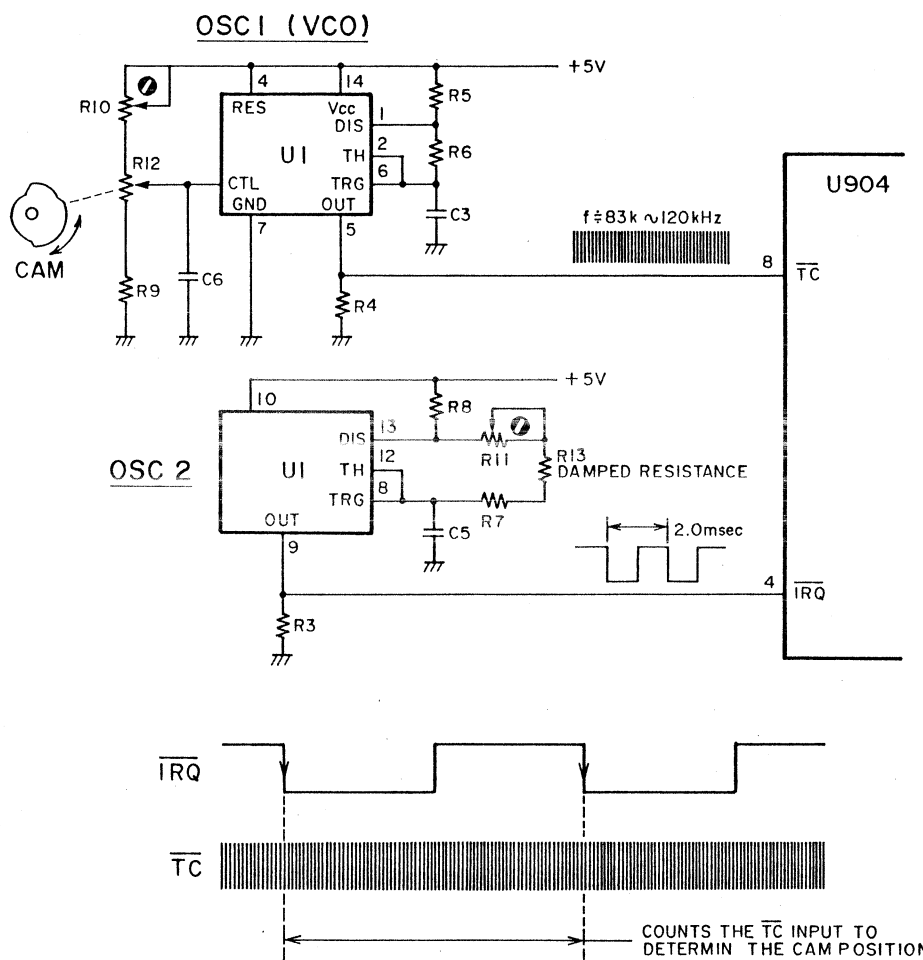


Fig. 6-2 Cam Control and Detection Circuit

7. Timer

The output of the cam interrupt oscillator, in other words, the clock of the $\overline{\text{IRQ}}$ pin of U-904, is taken as reference, and sets the following timers as shown below.

Timer name	Standard time	Function
POWER ON WAIT	2.5 sec	This timer is used for timed recording and such, so that even if the power is on and a play command is received, the unit will not operate until the microphone amplifier V_{CC} is detected. This is the time from the receipt of the play and timer switch. The actual time until the mechanism operates and begins timed recording or play is the power on switch + the power on wait, or about 3.5 seconds.
POWER ON SW	0.97 sec	This is the time after power on when all switches can be received, except for the CPS switch.
POWER ON FL TUBE	0.49 sec	This is the time needed to operate the FL meter display after the power is turned on. The cam servo also begins to operate after this time.
EJECT HOLD	0.28 sec	When a cassette is present, and the eject switch is pressed, this is the time until the cam stops at the eject position.
AMP MUTE	67 msec	This is the rise and fall time for the bias oscillator. It is the time it takes for the play mute to be cancelled after the head and the tape contact.
REC MUTE	3.9 sec	This is the record mute time.
CPS START	106 msec	This is the activation time for the scan and CPSFF Function, when the music signal is not checked.
SCAN	10 sec	Play time during scan.
END STOP	1.2 sec	This is the tape end detect time.
SW HOLD	20 msec	This is the minimum hold time for a function input signal.

8. CPS and Intro Check

The CPS, or Computomatic Program Search, is divided into the CPS_{FF}, which searches out tracks ahead of the present position, and the CPS_{REW}, which searches out tracks behind the present position.

The intro check automatically creates a CPS count of '1' in the

CPS_{FF} mode, searches out the first track, plays the first 10 seconds, and continues the process.

In this case, though, the 'CPS 1' is processed inside the microcomputer, so the CPS counter display remains at '0'. The CPS detection circuit is as shown in figure 8-1.

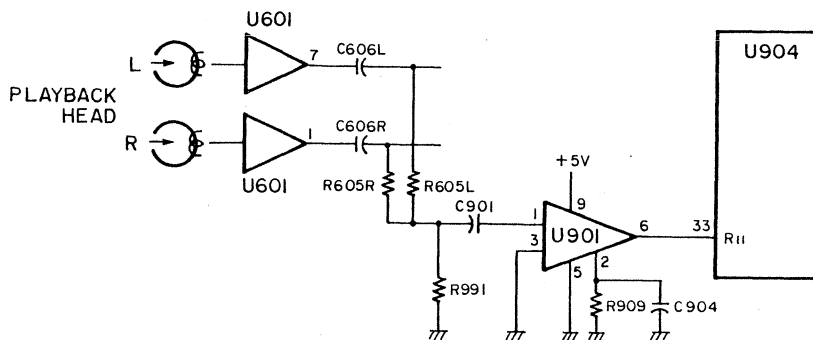


Fig. 8-1 CPS Detection Circuit

8-1. CPS_{FF} (Intro Check)

In the CPS_{FF} mode the start of each track is detected, and the CPS counter is reduced by one each time. However, no track starts are detected within the first 0.1 seconds after the start of CPS_{FF}. In addition, if CPS_{FF} is started from the middle of a track, that track is not counted. In figure 8-2 the current position is between E and F, and if the third track (D) is selected, the CPS_{FF} mode will detect each track start, and

lower the count by 1 each time. When the count reaches zero, that is the beginning of track D. Assuming that the start point was to the right of point F, the start of track B would not be detected, and track D would be the second track ahead. Likewise, if the present position was to the left of E, track A's start would be detected, and the third track would be C.

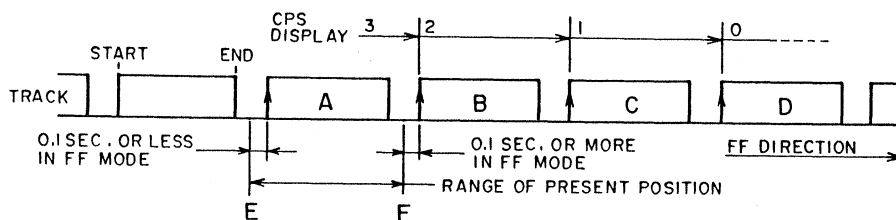


Fig.8-2 CPS_{FF} Example

8-2. CPS_{REW}

During CPS_{REW}, the start point of each track is detected, and the CPS counter is lowered by one for each start detected. Just as for CPS_{FF}, track starts within 0.1 seconds of the CPS_{REW} start point are not detected. The current position in figure 8-3 is from f to g. When the third track is selected, the CPS count is reduced by

one for each track start detected, reaching 0 at the beginning of track d. If the present position is to the right of f, the start point of track a would be detected, and the third track will become c. If the present position is left of g, the start of track b will not be detected, and the third track will be track e.

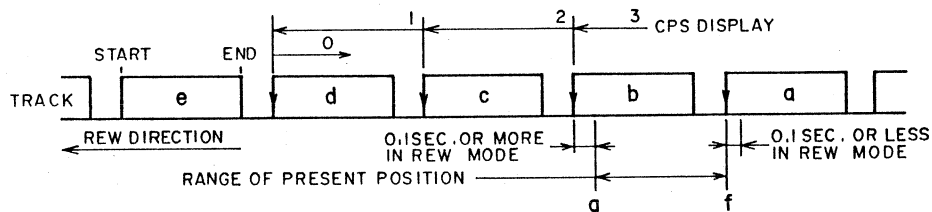


Fig. 8-3 CPSREW Example

8-3. Compensation for Tape Overtravel

In CPSFF and CPSREW the U-904 mechanical microcomputer issues a stop command when the CPS counter reaches '0'. Through inertial forces, though, the tape continues to travel beyond this point. This overtravel distance is compensated for by the following process.

Rotation pulses (4 pulses per revolution) from the right reel are input to the R₉ port, pin 31 of

U904, which handles tape end and tape stop. When the CPS count changes from '1' to '0', U904 issues a stop mode signal, and counts the right reel pulses from that point until the tape stops moving. If that count is, for example, N, then the tape would only have to be rewound N pulses for CPSFF, and N/2 pulses FF for CPSREW compensation. After the compensation, the tape stops, and then begins play.

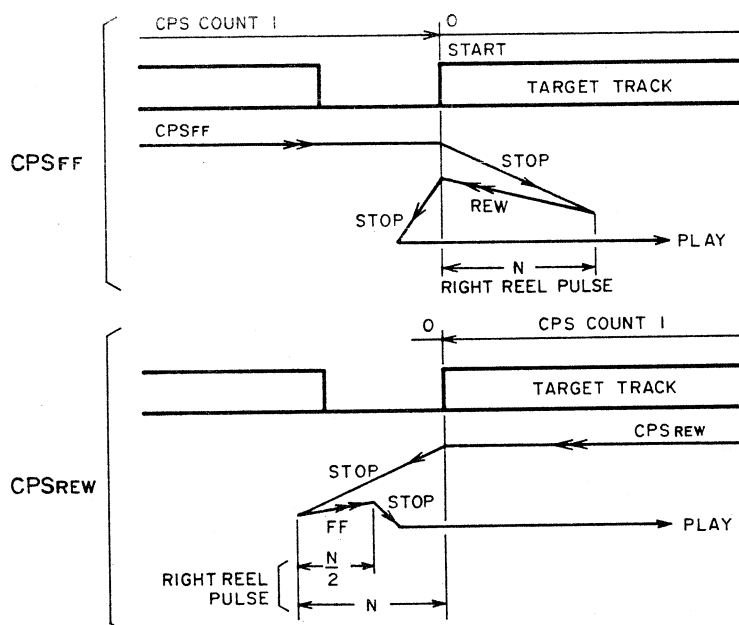


Fig. 8-4 Overtravel Compensation

9. Multi-mode Counter

9-1 Tape Counter Mode

The count signal is produced by a photo-transistor which detects the left reel rotation. As shown in figure 9-1, the reel table has four holes in it, so that 4 pulses are produced for each revolution. These pulses are counted by the U905 key microcomputer to raise or lower the count by one digit for every two pulses detected.

9-2 Tape Remaining Time Counter Mode

U905 has already memorized varying data for different tape sizes and thicknesses. The U905 selects the

needed tape running data based on the tape length signal (C-90, C-60, C-46L) from the key matrix and the metal tape detector signal from pin 42.

In addition, it measures the revolution time of the left reel (average time for 4 pulses), and calculates the remaining time from the above data.

9-3 TRT Counter Mode

This mode signal is made up from the reference clock of the U905 key microcomputer.

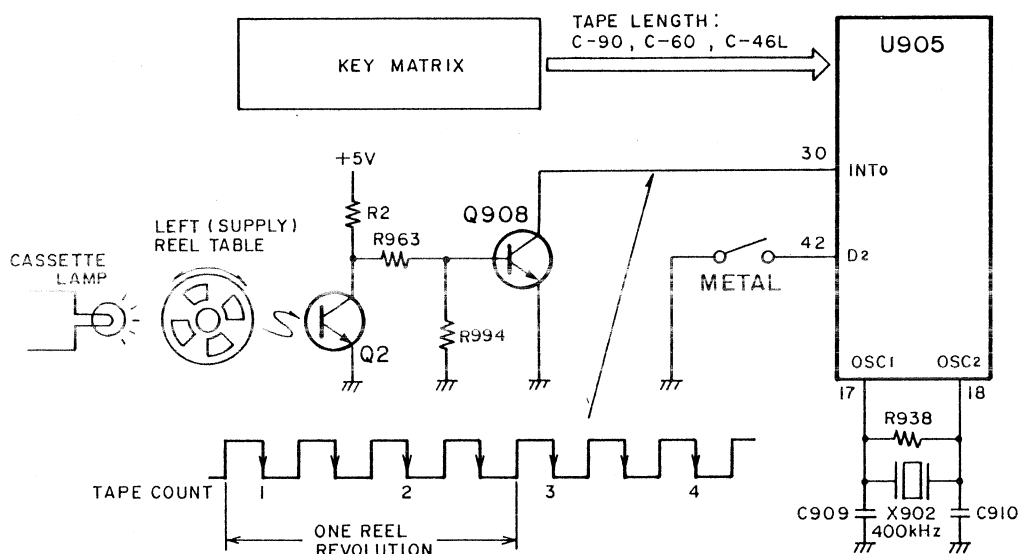


Fig. 9-1 Multi-Mode Counter Circuit

10. Audio Signal Path

10-1 NR System and Signal Path

dbx on...see figure 10-2.

dbx DISC on...see figure 10-3.

NR out, Dolby B, Dolby C.....

...see figure 10-4.

The signal path for NR OUT, Dolby B and Dolby C is the same, except for the decoding/encoding of the signal

inside the Dolby decoder/encoder.

The operation of NR (Dolby) OUT, B, C are determined by the voltage applied to pin 27 of the Dolby I.C. The Dolby NR becomes OUT during auto-calibration.

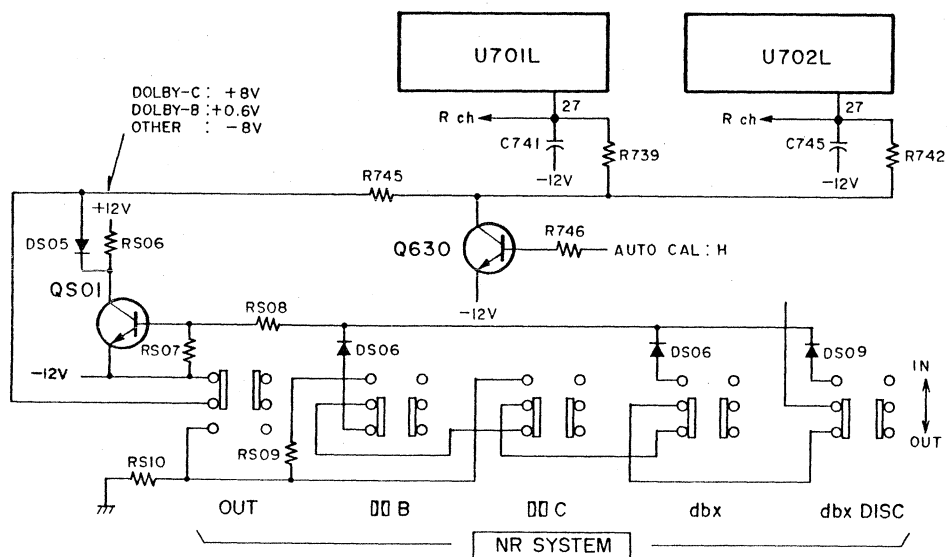
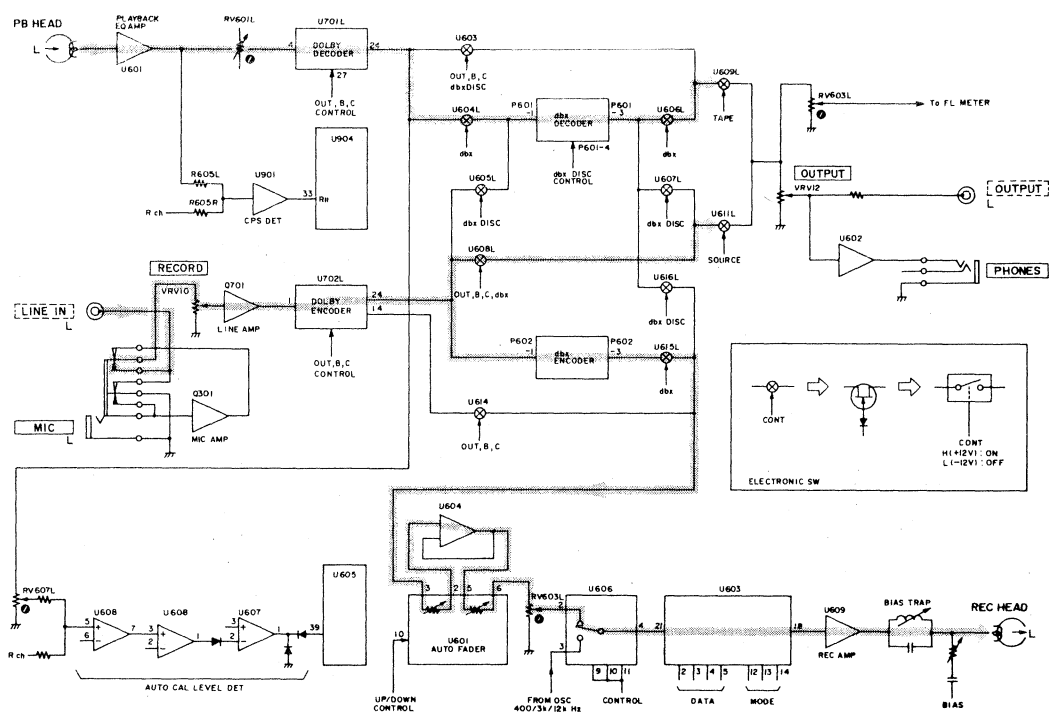


Fig. 10-1 NR System Circuit



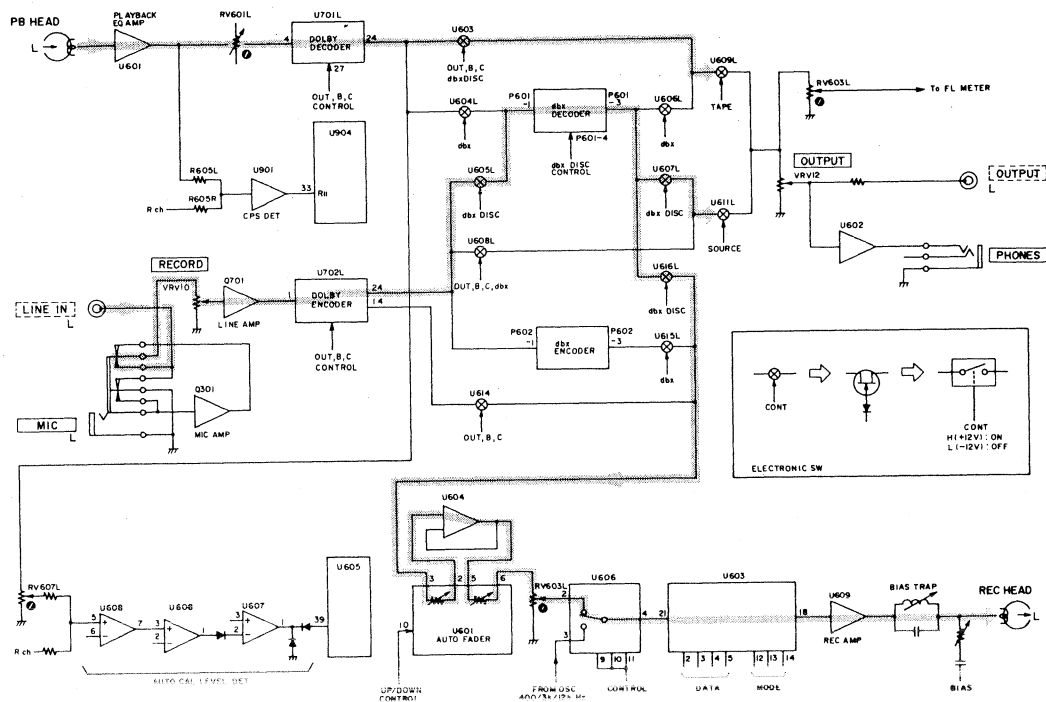


Fig. 10-3 V-900X Amplifier Block Diagram - dbx DISC


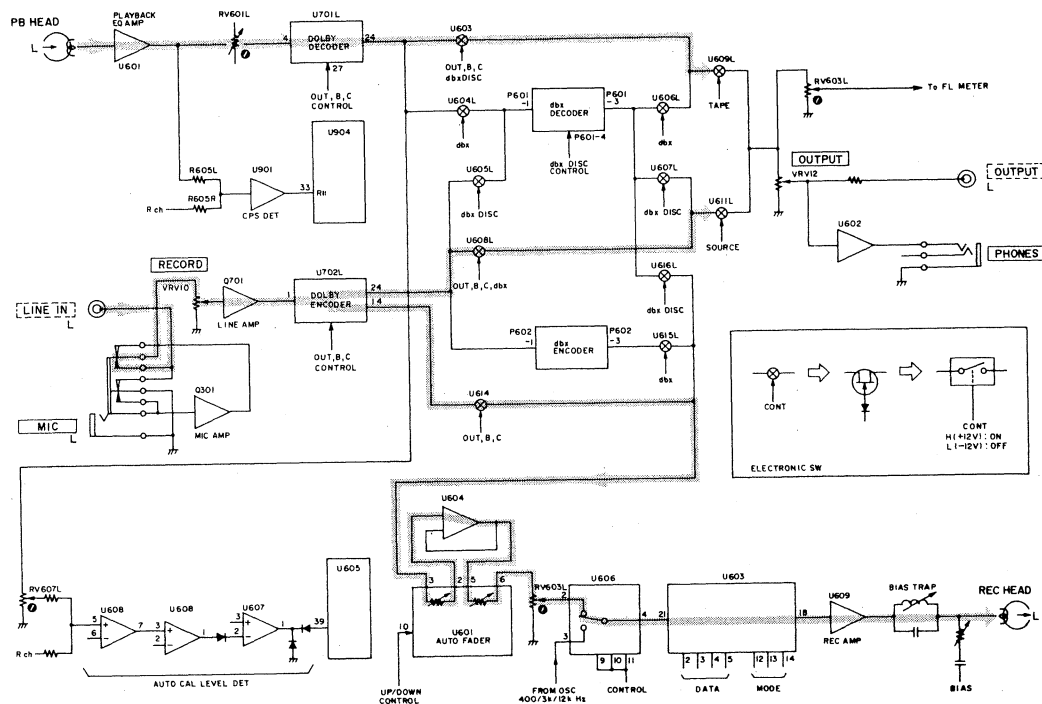


Fig. 10-4 V-900X Amplifier Block Diagram - NR OUT, Dolby B, C

10-2 Monitor Circuitry

Refer to figure 10-5. When the sync switch is turned on, the tape monitor is automatically cued for play and rec/play modes, and the source monitor is automatically cued for

stop, FF, REW, pause, and rec/pause modes. REC MUTE, fade in/out, and auto calibrate are basically the REC/PLAY mode, and so are the tape monitor.

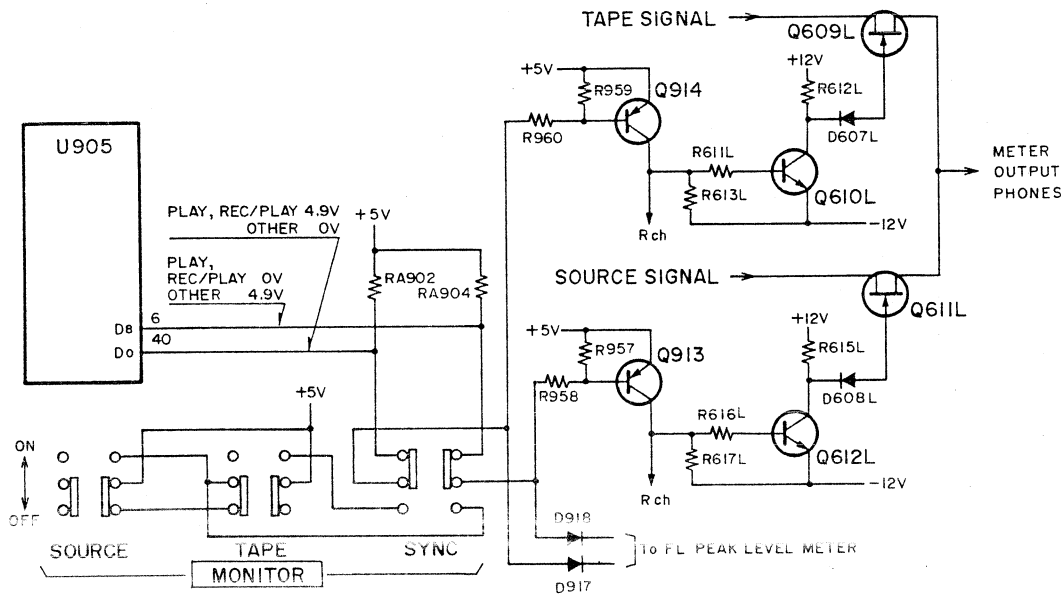

MONITOR SW	DECK MODE	Db	Do	Q913	Q914	Q610L	Q609L	Q612L	Q611L	MONITORING
SOURCE	—	—	—	OFF	ON	ON	OFF	OFF	ON	SOURCE
TAPE	—	—	—	ON	OFF	OFF	ON	ON	OFF	TAPE
SYNC	PLAY, REC/PLAY	L	H	ON	OFF	OFF	ON	ON	OFF	TAPE
	OTHER	H	L	OFF	ON	ON	OFF	OFF	ON	SOURCE

Fig. 10-5 Monitor Circuitry

11. Auto-fader

11-1 Out line

Refer to figure 11-1. Fade in/out is handled by the electronic attenuator U601, which is in turn controlled by the output signals from U605.

When the fade in (fade out) switch is pressed, U904 outputs the appropriate command to U605. After receiving this signal, U605 outputs a signal to light the fade in(out) LED from pin 1 (2), and outputs an up(down) Low-level signal from pin 7

(6). This up/down signal determines whether it is fade in or fade out, and also starts the internal oscillator of U601 for electronic attenuation.

The initial set signal is output from pin 5 of U605 (refer to 11-3). The oscillator pulses from U601 are input to pin 8 of U605, and when the pulses reach 34, U601 determines that the fade in/out is completed. U605 then sends a fade in finish (or rec mute) signal to U904.

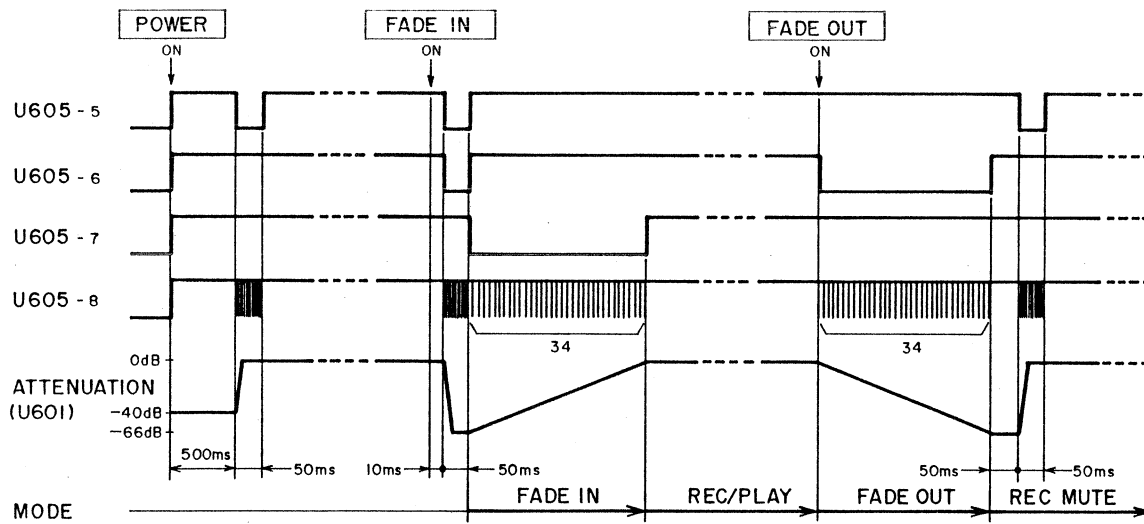
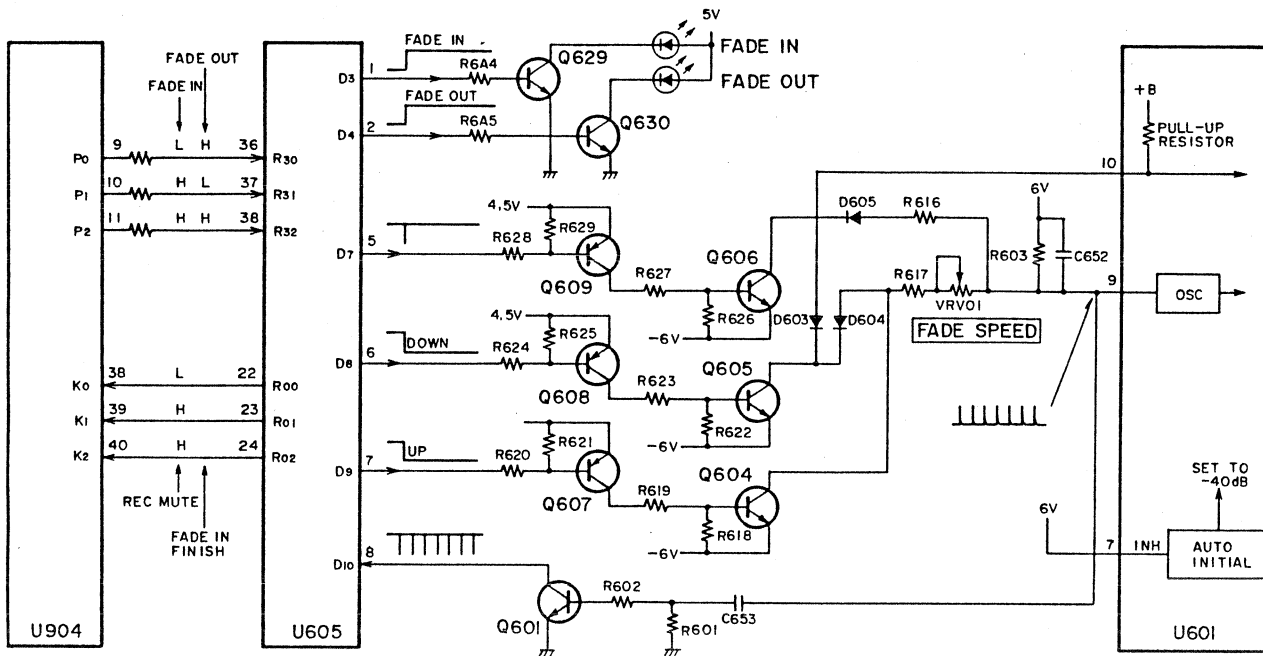


Fig. 11-1 Auto-fader Circuit

11-2 Electronic Attenuator

Figure 11-2 is a simplified block diagram of U601, and figure 11-3 is one of the attenuator.

The oscillator (clock) output is input to 2 two-way shift registers connected in cascade. The register data is output, received at a latch circuit, and changes the analogue switch. When pin 10 of U601 is High, fade in (up) occurs, and when Low,

fade out (down) occurs.

The fade in/out stops when 34 oscillator outpulses are detected at U605. For example, in fade out, as the count goes from 1-33, attenuation is increased in 2dB steps from 0 to -66 dB, and attenuation becomes infinite at 34 (The -68 dB step is not operational).

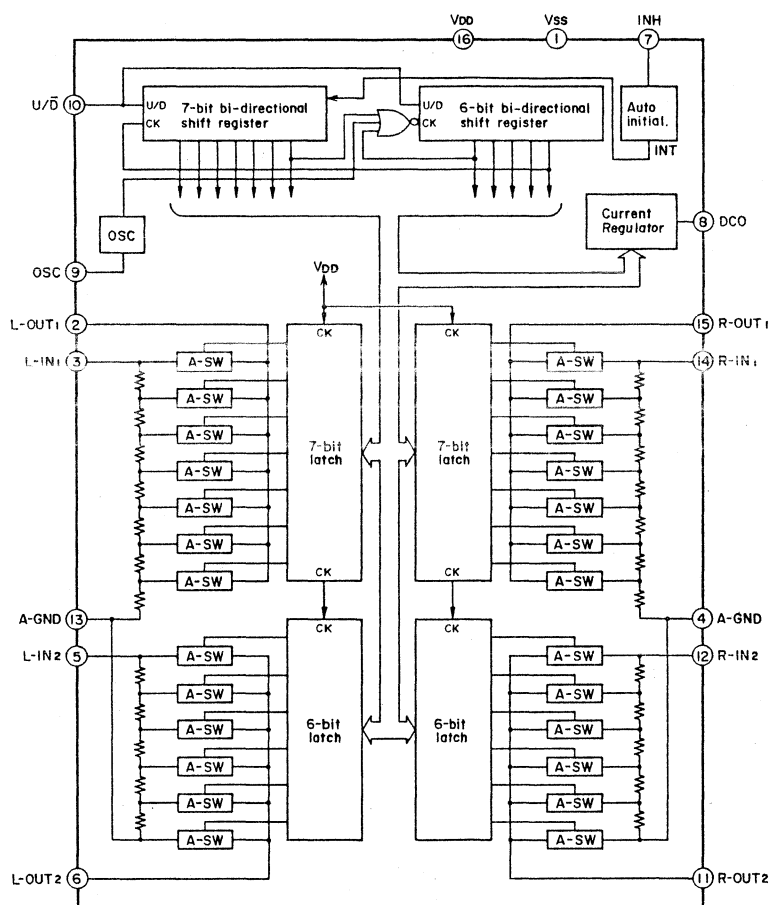


Fig. 11-2 TC9153P U601 Block Diagram

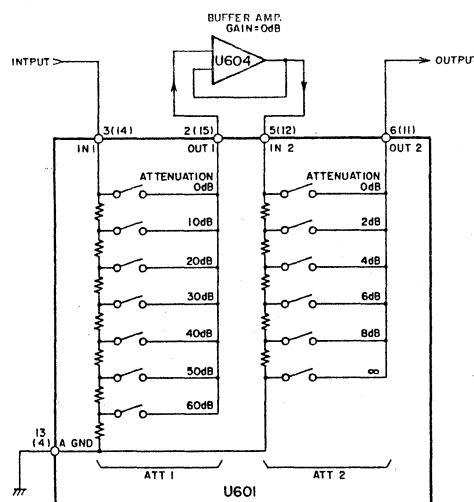


Fig. 11-3 U601 Attenuator Block Diagram

11-3 Initial Set

Pin 7 (INH) of U601 is set at High (+B) so that when it becomes Low it can stop U601 operation. However, if pin 7 is connected to +B the electronic attenuator will automatically preset to -40 dB at power on. To cancel that preset, and set attenuation to zero, the pin 5 output of U605 is used (refer to Fig. 11-1). About 0.5 seconds after the deck is turned on, a Low signal about 50ms in duration is output by pin 5 of U605. This signal turns on Q609 and Q606. When Q606 is turned on, U601's oscillator begins to oscillate. At that time, pin 10 of U601 is High through pull-up resistance, so the electronic attenuator begins fade in operation. In addition, the time constant set by C652 and R616 is short, so the oscillator frequency is high, ending fade in operation at once, and setting attenuation to zero. This initial set signal is output both at the start of fade in and the end of fade out.

11-4 Fade in

When the fade in switch is pushed, a Low signal is output from pin 5 and pin 6 of U605 for about 50 mseconds. Refer to figure 11-1. This pin 5 signal causes Q609 and Q606 to go on, and starts the oscillator. At that time, the signal from pin 6 of U605 turns on Q608 and Q605, and pin 10 of U601 drops to Low, causing U601 to start fade out operation, and the

electronic attenuator is set to infinite attenuation instantly. 50 mseconds later, pin 5 and pin 6 of U605 become High, and pin 7 becomes Low. The Low signal from pin 7 causes Q607 and Q604 to turn on, starting the oscillator. At that time pin 10 of U601 is High, so U601 starts fade in, and the electronic attenuator gradually runs from infinite, -66dB, -64dB, ... 0dB.

The fade speed control VRV01 controls the oscillator frequency. When the frequency is high, the fade speed is high, and when the frequency is low, the fade speed is slow. The oscillator frequency f_{OSC} is determined as follows:

$$f_{OSC} = \frac{1}{0.7 \times (R617 + VRV01) \times C622} \text{ (Hz)}$$

11-5 Fade out

For fade out, a Low signal is output from pin 6 of U605, turning on Q608 and Q605. When Q605 goes on, pin 10 of U601 becomes Low, causing U601 to begin fade out. After 34 pulses are input to pin 8 of U605, pin 6 of U605 goes High, and sends a REC MUTE signal to U904 at the same time, placing the deck into record mute mode.

50 mseconds later, a 50 msecond long Low signal is output from pin 5 of U605, returning the electronic attenuator to 0dB instantly, just as for power on.

12. Auto Calibration

12-1 Circuit Composition

Refer to figure 12-1.

Pin 30 of U605 is the right reel pulse input. This is the counter input to return the tape to the auto-calibrate start position when auto-calibration is complete or when it is stopped during operation.

Pins 40, 41, 42, of U605 control the LED display. They output Highs to control the memo, ref, and auto LEDs, respectively.

Pins 36, 37, and 38 of U605 are the control data inputs, and input the auto-calibration commands.

Pins 22, 23, and 24 of U605 are the control data outputs. These pins

output operational commands (REC/PLAY, FF, REW, STOP etc.) to the U904 mechanical computer during auto-calibration.

Pins 3 and 4 of U605 are the AF oscillator control signal outputs. There output the control for the frequency of the test signal oscillator in U602. When both pins are Low, the frequency is 400 Hz, when pin 3 is High it is 3kHz, and when pin 4 is High it is 12 kHz.

Pins 29, 28, 27, and 26 of U605 are the 4-bit data outputs, which output the data to indicate gain, EQ, and bias to U603.



Fig. 12-1 Auto-Calibration Circuit

Pins 32, 33, and 34 of U605 are select data output pins. These pins output selection data to determine if U603 checks the level, EQ, and bias, or whether to check the R or L channel.

Pin 25, U605 is the mute signal output, which operates as follows, outputting a High during auto-calibration: The U606 analogue switch is set to the test oscillator side; Q637 is turned on, turning off Q618.

To prevent noise from being recorded on the tape during record stop and start, a fixed envelope time is used for the bias frequency. For auto-calibration, however, bias must be changed rapidly, and so the envelope is cut out by turning off Q618.; The Dolby decoder is cut out during auto-calibration.; Muting is used on the monitor circuits (FL meter, output, phones) during auto-calibration.

Pin 39 of U605 is the comp input. The 4-bit data produced when the U607 comparator changes from High to Low becomes the data for level, EQ, and bias.

Pin 9, U605 is the comp reset output pin. When a High is output Q625

is turned on, and the charge of rectifier condenser C640 is discharged, resetting the U607 comparator circuit, and changing the output to High.

Pin 12 of U605 is the \bar{L}/R select output pin, which selects the play channel input to the comparator (Low is left, High is right).

Pin 13 of U605 is that HALT status signal.

Pin 19 of U605 is the $\overline{\text{HALT}}$ signal pin. When the deck power is turned off, the U605 stores its data in the RAM, cuts off all inputs and outputs, and enters HALT status. In HALT status, the clock oscillator stops, and data is maintained by the backup power supply (C657).

When deck power is turned off, Q632 goes off at once, pin 13 of U605 goes High, telling U605 that HALT status is in effect. U605 then processes data and inputs and outputs, and enters HALT when pin 19 goes Low.

Figure 12-2 shows the HALT circuitry, and figure 12-3 is the timing chart. Note that the circuitry has been altered from the chart shown in the service manual (3rd edition, April, 1984) to improve timing.

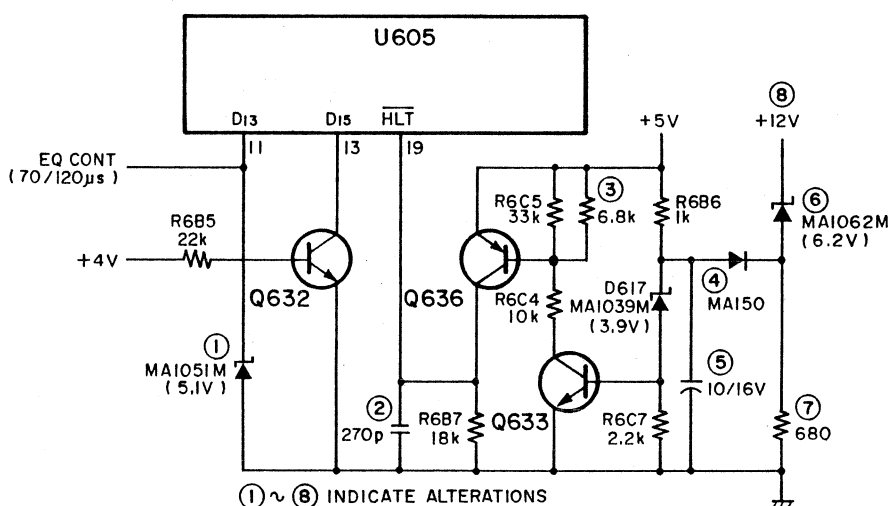


Fig. 12-2 HALT Circuitry

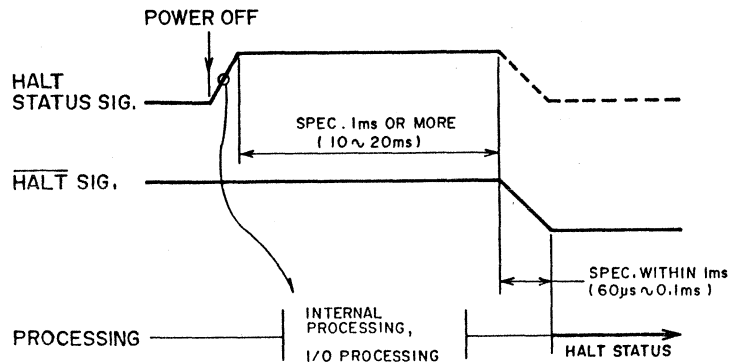


Fig. 12-3 Timing Chart for HALT

Pin 17 of U603 is the D/A 1 output. This is the bias control output pin, which outputs the 4-bit data in analogue form.

Pin 16 of U603 is the D/A 2 output, which supplies the reference level to the U607 comparator. This output is also converted to analogue from 4-bit data.

Pins 6-10 of U603 (not shown on figure 12-1) are condenser connection pins to maintain VCA, EQ and D/A 1 statuses.

The first half of the U608 is the buffer amplifier, and the second half is the rectifier (detector) circuit, which converts the play signal into DC signals.

12-2 Auto-calibration Process

The total process flow for auto-calibration is shown in figure 12-4. When auto-calibration is started, first a 400Hz signal is recorded on the right channel, which is played at the same time, allowing the level to be checked.

When the play output is normal, the level, EQ, and bias are calibrated, after which the tape is returned to the start position, completing the auto-calibration

process.

If the play output is missing or low, the tape is advanced forward for 2 seconds, at which point the process is repeated. If the play level is normal, calibration is executed, and if it is not normal, auto-calibration is cancelled, and the tape is returned. If calibration is complete the auto LED will light, and if cancelled, the REF LED will light.

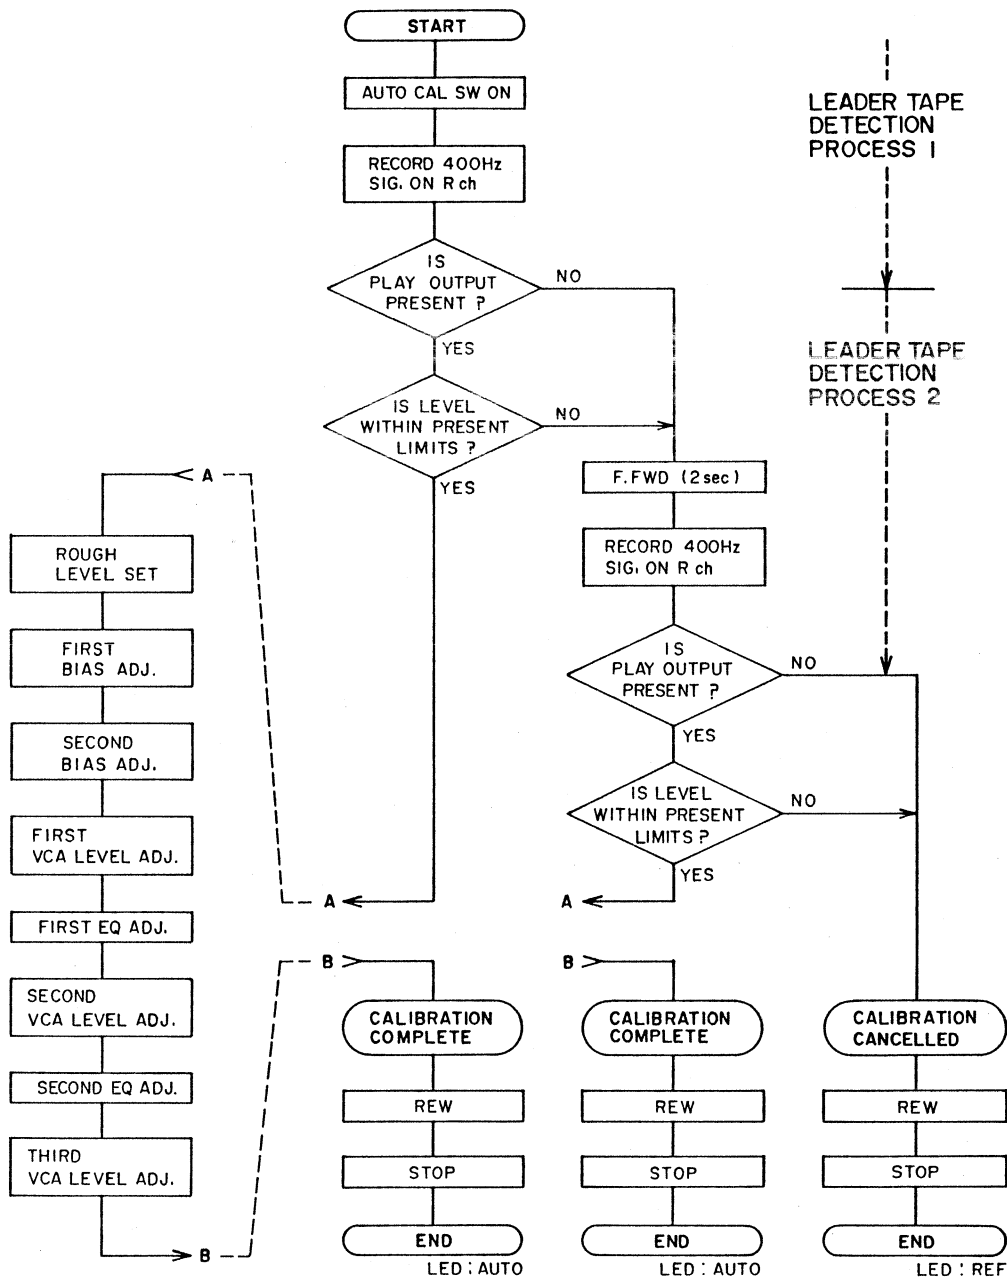


Fig. 12-4 Auto-Calibration Flowchart

12-3 Leader Tape Detection

When the auto-calibrate key is depressed and auto-calibrate is started, leader tape detection is performed as follows. Refer to figure 12-1 for the involved circuitry.

- (1) The deck enters the REC/PLAY mode. The mute out of U605 goes High, switching the analogue switch of U606 to the oscillator side. Pins 3 and 4 of U605 both go Low, so the oscillator frequency is 400 Hz.
- (2) For the first 10 mseconds, the mode select is 111, which discharges the hold condenser of U603, resetting the VCA L/R, the EQ L/R, and the D/A 1.
- (3) After U603 is reset, data is repetitively sent from U605 to U603 in accordance with the leader tape

detection data format showed in figure 12-5. Figure 12-6 shows the output formats. At that time, the VCA gain, EQ value and bias value are all set to a predetermined value by the 4-bit data, but the VCA gain of the right channel is set to maximum. Generally the amount of time needed to select a mode (EQ, VCA, D/A 1 bias), in other words, the time needed to supply the 4-bit data to a mode, is very short, but the data is maintained by the hold condenser connected to U603. As a result, the preset 400 Hz signal is output from pin 26 (18) of U603, as determined by the 4-bit data, and is recorded on the tape. The recorded signal is picked up at the play head.

	Mode select			4-bit data				Weight
	R ₂	R ₁	R ₀	D ₃	D ₂	D ₁	D ₀	
EQ R	0	0	1	0	1	0	1	5
VCA R	1	0	1	1	1	1	1	15 (VCA GAIN : MAX)
VCA L	1	0	0	1	0	0	0	8
EQ L	0	1	0	0	1	0	1	5
D/A 1 (BIAS)	1	1	0	0	1	1	0	6

Fig. 12-5 Leader Tape Detect Data Format

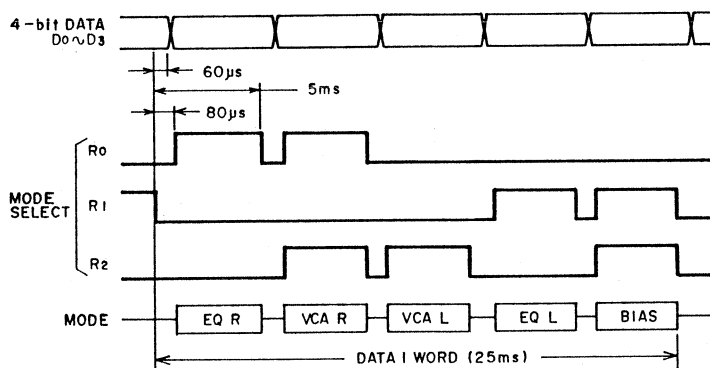


Fig. 12-6 Mode Selector Output Format

- (4) The \bar{L}/R select signal (pin 12 of U602) is High, so right channel play is selected. The right channel play signal passes through the buffer amplifier, and the rectifier circuit, and charges into C640 at the appropriate DC voltage. At that time, the potential across pin 3 of the U607 comparator is about 0.9 volts, which means pin 2 has a higher potential,

making that output on pin 1 Low (below referred to as comp in, as seen from the viewpoint of U605).

- (5) About 1000 ms after the start of the leader tape detect mode, the reset output pin of U605 goes High for 150 ms, turning on Q625, and discharging C640. As a result, comp in changes from Low to High.

(6) Reset out returns to Low, and when Q625 goes off, C640 begins to charge again. When pin 2 of U607 exceeds pin 3's potential, the comp in becomes Low again. If the leader tape is not redorded, and has no output, then the potential of pin 2 does not rise, and comp in does not go Low.

If, after reset out becomes Low, comp in does not go Low within 400 ms, U605 determines that it is leader tape, and runs the tape forward fast for 2 seconds, and then performs

leader tape detection again. (Figure 12-9).

(7) The process for the second leader tape detection is the same as for the first, but if the comp in does not become Low on the second time, auto-calibration is cancelled, the tape is rewound, and the unit stops. If auto-calibration is cancelled in midstream, the 4-bit data and the mode selector become the reference data format (see Fig. 12-12).

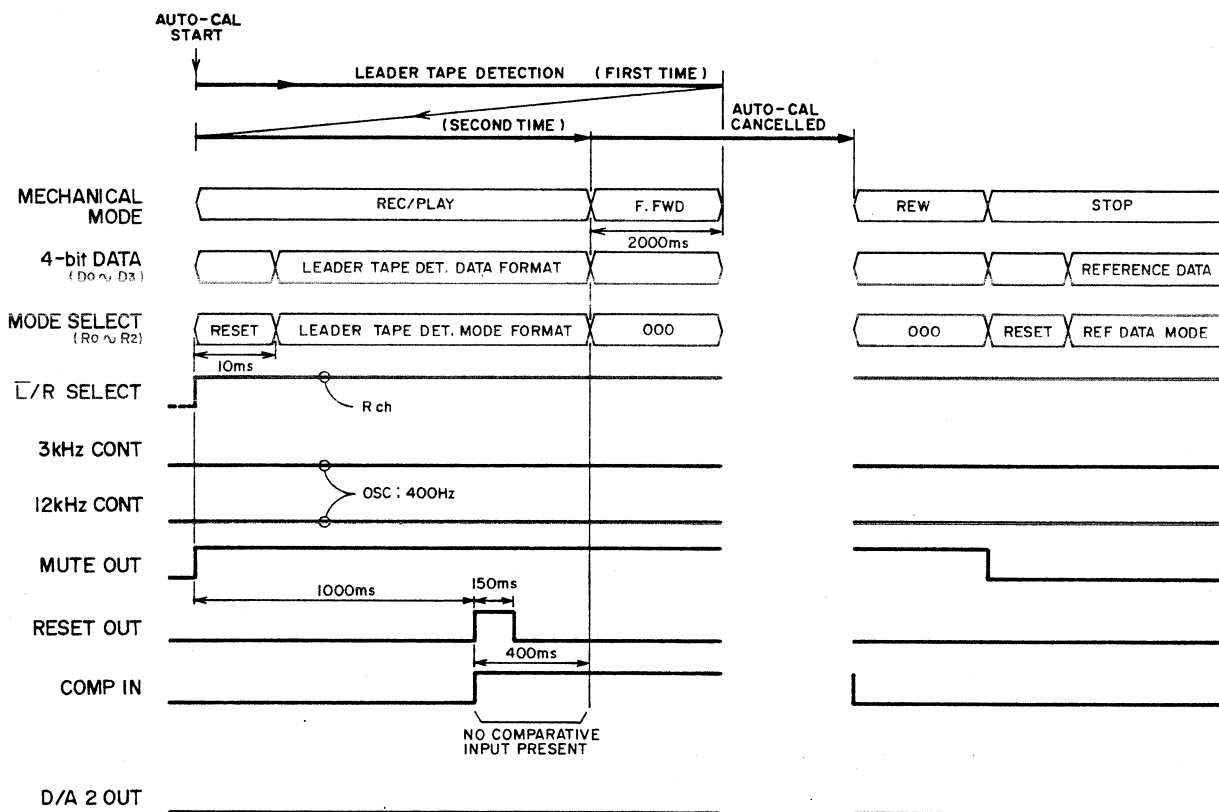


Fig. 12-7 Leader Tape Detection (1)

(8) After the reset out becomes Low in (6) above, if the comp in becomes Low within 400 ms, then it switches to comparative mode (refer to figures 12-8 and 12-9). This comparative mode checks if the recorded level is within the acceptable limits or not.

(9) In the comparative mode, D/A 2 is selected on U603 by the mode select signal, and the 4-bit data is converted to analogue (DC) signals by D/A 2, and applied to pin 3 of the U607 comparator.

(10) In the comparative mode, the values for VCA, EQ, and D/A 1 in U603 are maintained at the same as they were during leader tape detection mode by the hold condenser.

(11) The 4-bit data changes from 0000 to 1111, changing the D/A 2 output voltage from maximum to minimum.

(12) When 0000 4-bit data is detected, the potential of pin 3 exceeds that of pin 2 on U607, changing comp in from Low to High.

(13) In response to the changing 4-bit data, the potential of pin 3 of U607 falls in a step form, and when it drops below that of pin 2

(proportional to the play level DC potential), comp in changes from High to Low.

This change from High to Low (negative edge) is detected by U605, which determines if the recording level is within the acceptable range, and which moves to the next process (level adjustment) 5 ms later. (figure 12-10).

(14) After entering the comparative mode, if comp in does not go Low within 200 ms, U605 determines that there is a problem with the recording level, advances the tape FF 2 seconds, and performs the second leader tape detection.

(15) There are 2 possible reasons why the comp in cannot detect the negative edge in the comparative mode. The first is that the recording level is too low. If the tape sensitivity is extremely low, the potential of pin 3 will not drop below pin 2 even if the 4-bit data is 1111, and comp in remains High. The second possibility is that the recording level is too high. The VCA gain on the right channel is set to maximum during leader tape detection, and if the tape sensitivity is extremely high the potential of pin 3 might not exceed pin 2 even when the 4-bit data is 0000. As a result, comp in remains Low, and the negative edge is not detected.

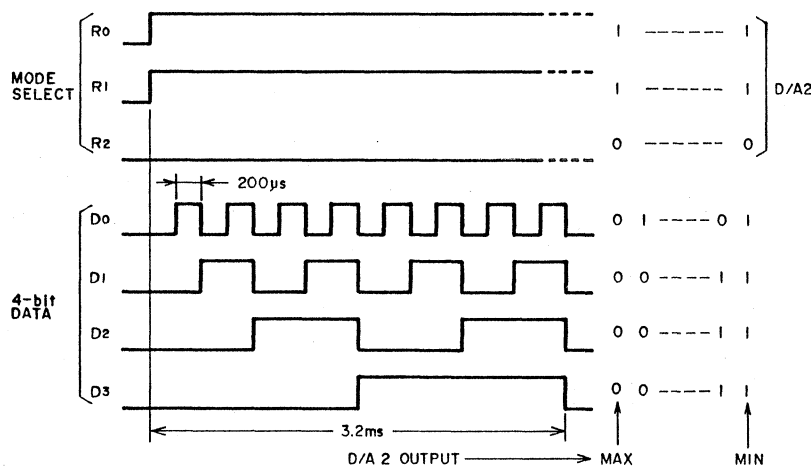


Fig. 12-8 Comparative Mode Data Format

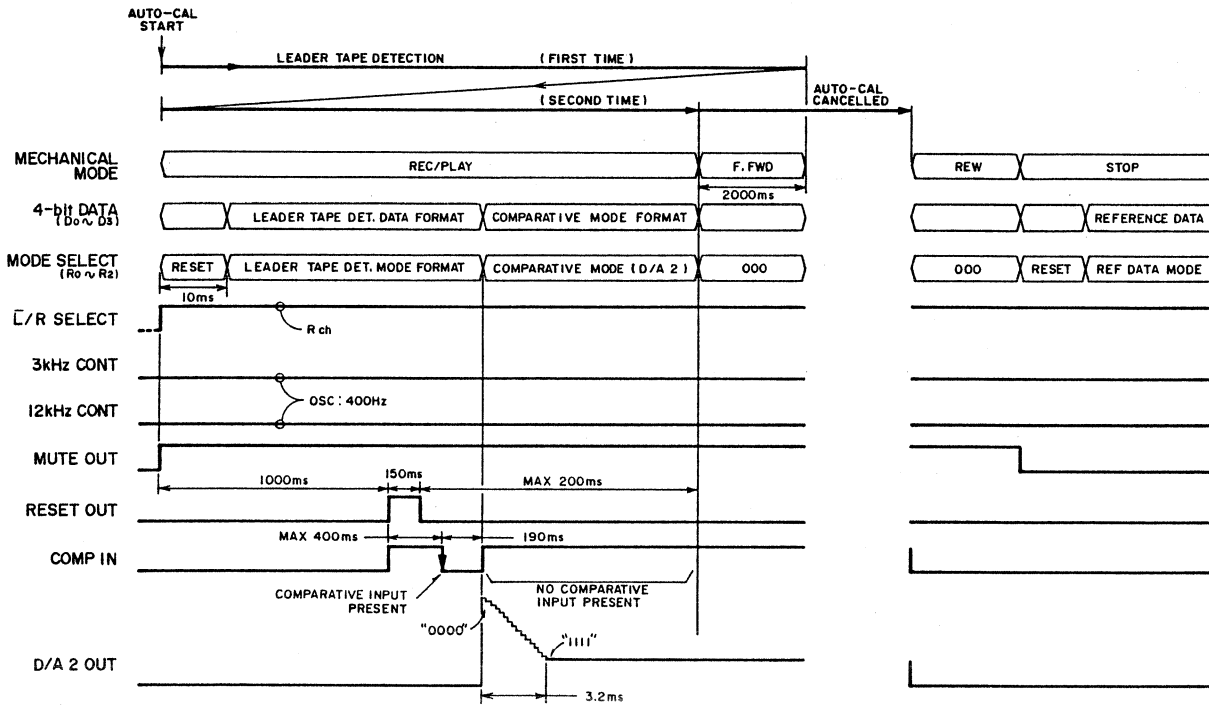


Fig. 12-9 Leader Tape Detection (2)

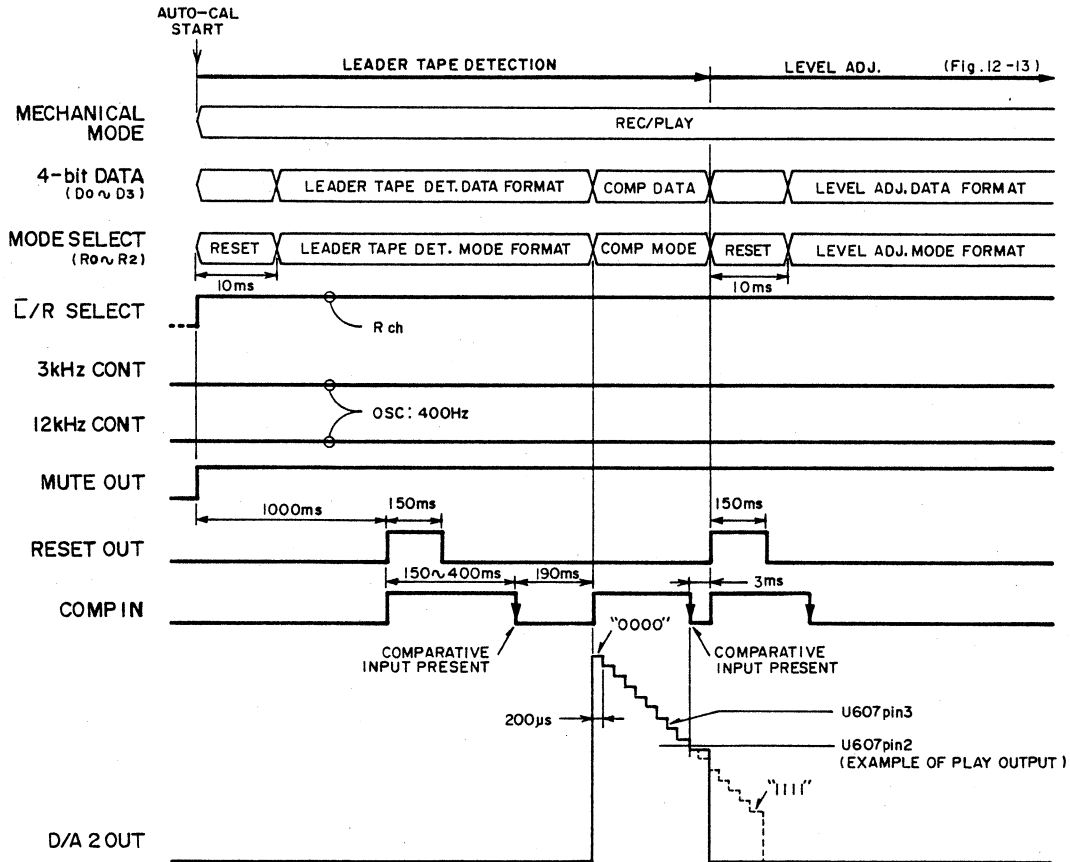


Fig. 12-10 Leader Tape Detection (Within preset level)

12-4 Level Adjustment (Rough)

Level adjustment is performed during the leader tape detection process. The data obtained during this adjustment is the rough data. Refer to the time chart in figure 12-13.

- (1) The mode select enters reset mode for 10 ms., discharging the hold condenser of U603, resetting the data stored at tape detection.
- (2) After reset, the 400 Hz, signal is recorded as per the level adjust data format (refer to figure 12-11). Note that for normal recording when not using auto-calibrate, VCA, EQ, and bias values are set by the reference data format.
- (3) Next, as for leader tape detection, a 150 ms long reset out signal is output, and the unit enters the comparative mode 190 ms after the comp in detects the negative edge. This comparative mode also operates in the same way as the leader tape detection. After comp in becomes Low, there is a 190 ms delay, until the recorded signal is picked up by the play head (there is a physical distance to travel involved).
- (4) When comp in of U605 detects the

negative edge in the comparative mode, the rough level data is determined from the 4-bit data. First of all, the 4-bit data (BCD) is converted into base 10 numbers.

Data name	D3	D2	D1	D0
Weight	2 ³	2 ²	2 ¹	2 ⁰
Data example	0	1	1	1

$$\rightarrow (0 \times 2^3) + (1 \times 2^2) + (1 \times 2^1) + (1 \times 2^0) \\ = 7 \text{ (decimal)}$$

- (5) A rough data decimal is computed from this base 10 number, changed to BCD to produce the rough level data, and is used to adjust the bias and EQ. If this base 10 value is greater than 8, the rough decimal number is 8 - (base 10 number - 8) = (16 - base 10 number). If 8 is greater than the base 10 number, then the rough decimal is 8 + (8 - base 10 number) = (16 - base 10 number).

For example, if the comparative match 4-bit data is 1001 '9', the rough level data will become 0111 '7'.

- (6) 3 ms after the comp in detects the negative edge in the comparative mode, it shifts to bias adjustment.

	Mode select			4-bit data				Weight
	R2	R1	R0	D3	D2	D1	D0	
EQ R	0	0	1	0	1	0	1	5
VCA R	1	0	1	0	1	1	0	6
VCA L	1	0	0	0	1	1	0	6
EQ L	0	1	0	0	1	0	1	5
D/A 1 (BIAS)	1	1	0	0	1	1	0	6

Fig. 12-11 Level Adjustment Data Format

	Mode select			4-bit data				Weight
	R2	R1	R0	D3	D2	D1	D0	
EQ R	0	0	1	0	1	1	0	6
VCA R	1	0	1	0	1	1	0	6
VCA L	1	0	0	0	1	1	0	6
EQ L	0	1	0	0	1	1	0	6
D/A 1 (BIAS)	1	1	0	0	1	1	0	6

Fig. 12-12 Reference Data Format

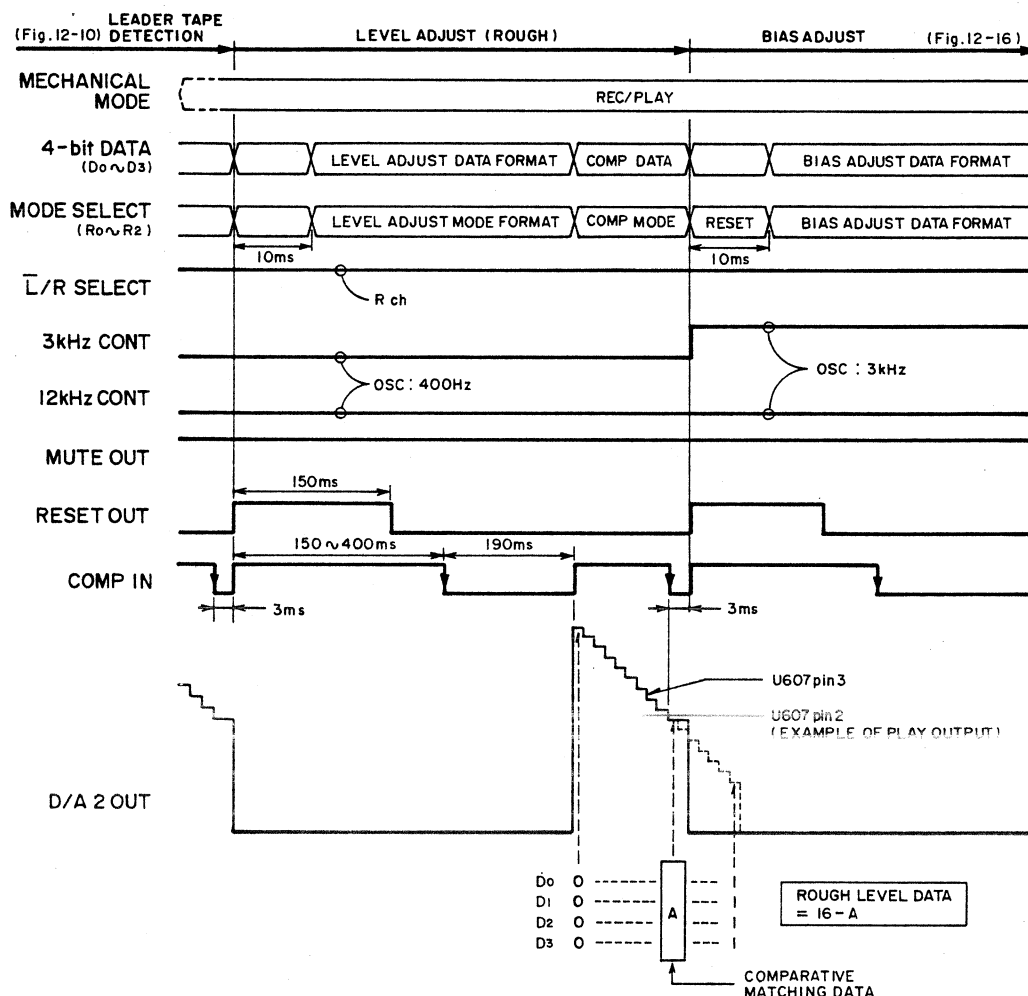


Fig. 12-13 Level Rough Adjustment

12-5 Bias Adjustment

Refer to figures 12-14 to 12-16. For bias adjustment, the 4-bit data (D/A 1) is changed one step at a time from 0000 to 1111, or 1111 to 0000, and the recording level is checked at each level, adjusting the bias value each time. Adjustment takes about 8 seconds to perform (250 ms x 32 steps). (1) The 4-bit data (D/A 1) is changed one step at a time from 1111 (minimum bias) to 0000 (maximum bias), and the recording level is checked in the comparative mode each step. The minimum comparative data is held,

yielding the minimum comparative data (maximum recording level). The 4-bit data at that point (bias value) is termed data A.

(2) The 4-bit data (D/A 1) is shifted 1 step at a time from 0000 (maximum bias) to 1111 (minimum bias), yielding data B through the same process.

(3) The bias data is computed using A and B values:

$$\text{bias data} = \frac{A + B}{2} - 1$$

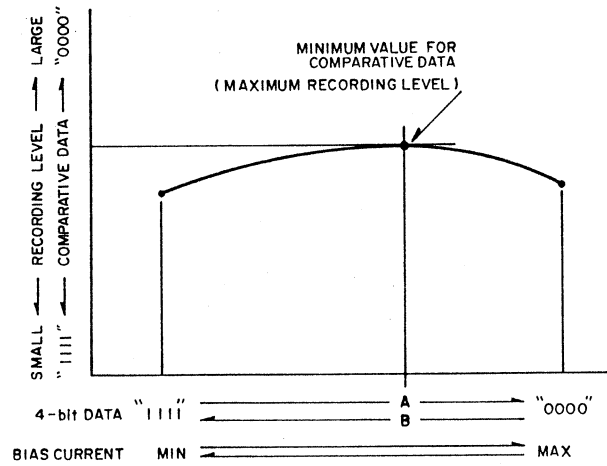


Fig. 12-14 Bias Adjustment

	Mode select			4-bit data				Weight
	R ₂	R ₁	R ₀	D ₃	D ₂	D ₁	D ₀	
EQ R	0	0	1	0	1	0	1	4
VCA R	1	0	1	*1				-
VCA L	1	0	0					
EQ L	0	1	0	0	1	0	1	4
D/A 1 (BIAS)	1	1	0	*2				

*1: Data determined by rough level adjust.

*2: 0000 \rightleftharpoons 1111 changes one step at a time.

Fig. 12-15 Bias Adjust Data Format

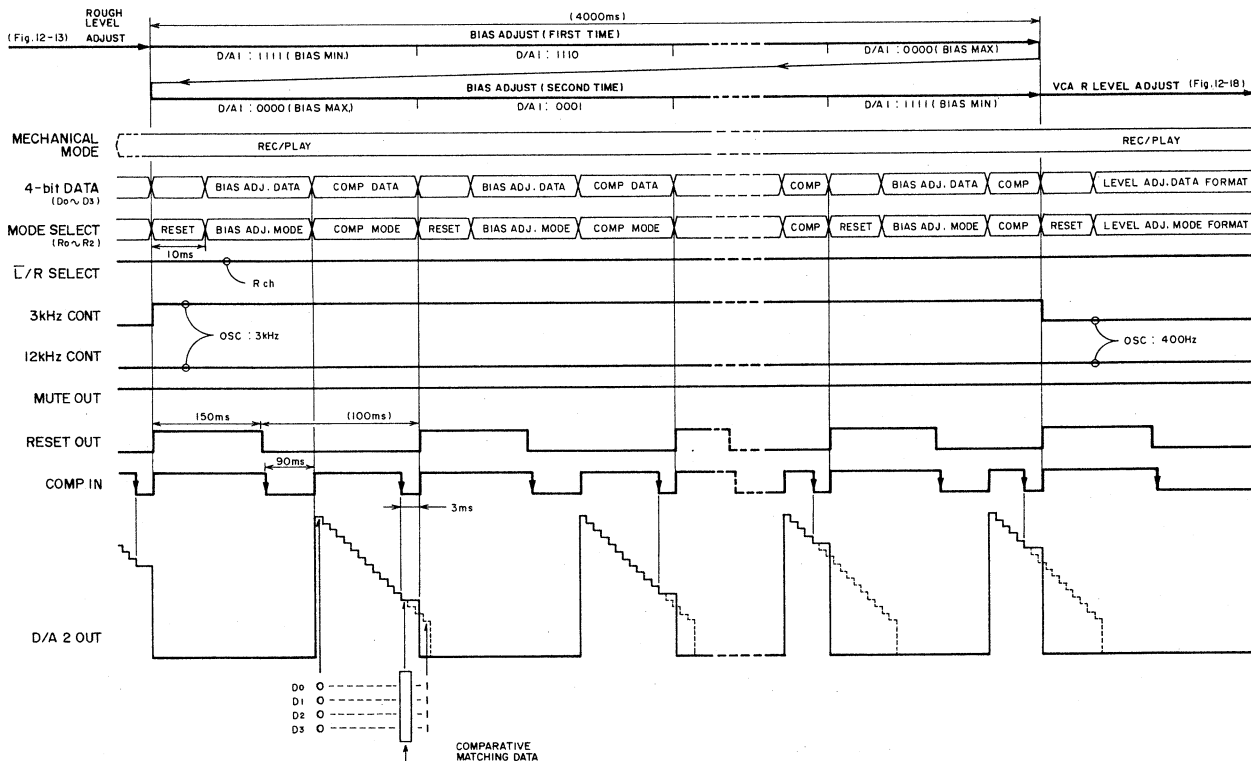


Fig. 12-16 Bias Adjustment

12-6 VCA Level Adjustment

VCA level adjustment is performed a total of three times after the completion of bias adjustment in the order VCA (R,L), EQ(R,L), VCA(R,L), EQ(R,L), VCA(R,L). Except for the fact that the data formats are different, the method is the same as described in 12-4 for rough level adjustment.

	Mode select			4-bit data			
	R ₂	R ₁	R ₀	D ₃	D ₂	D ₁	D ₀
EQ R	0	0	1	*3			
VCA R	1	0	1	*2			
VCA L	1	0	0	*2			
EQ R	0	1	0	*3			
D/A 1 (BIAS)	1	1	0	*1			

The data format is shown in figure 12-17, and the timing chart is figure 12-18. The auto-calibration process ends after the third VCA level adjustment, and the tape rewinds back to the start position, entering the REC/PAUSE mode.

- *1 Fix data received during bias adjust.
- *2 First time: data gained during right channel rough level adjustment is used on both channels.
Second time: right and left channel data gained from the first VCA level adjust is used.

Third time: right and left channel data gained during the second VCA level adjust is used. Data gained during the third time is fixed.

- *3 First time: both left and right channels use '0101 (weight 5).
Second time: right and left channel data gained during the first EQ adjust is used. Data gained during the second time is fixed.

Fig. 12-17 VCA, EQ Adjust Data Formats

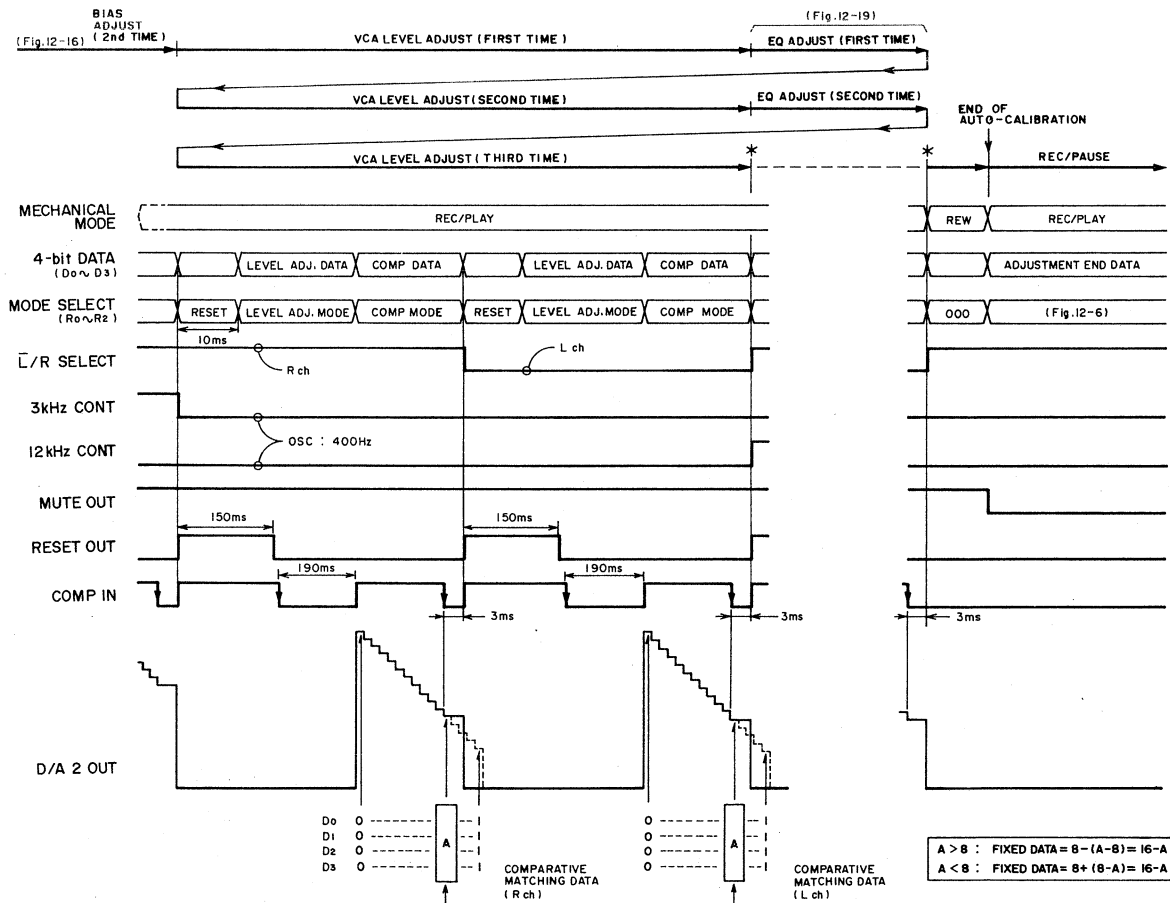


Fig. 12-18 VCA Level Adjustment

12-7 EQ Adjustment

EQ adjustment is performed twice, in the order of VCA(R,L), EQ(R,L), VCA(R,L), EQ(R,L), VCA(R,L). The adjustment process is the same as for the VCA level adjustment, except that a 12 kHz signal is used. The data format is shown in figure 12-17, and the timing chart is in figure 12-19.

The fixed EQ adjust data is computed from the A value gained during matching in the comparative mode as follows: If A is greater than 8, the fixed data is $8-(A-8)-1=(16-A)-1$. If 8 is greater than A, the fixed data is $8+(8-A)-1=(16-A)-1$.

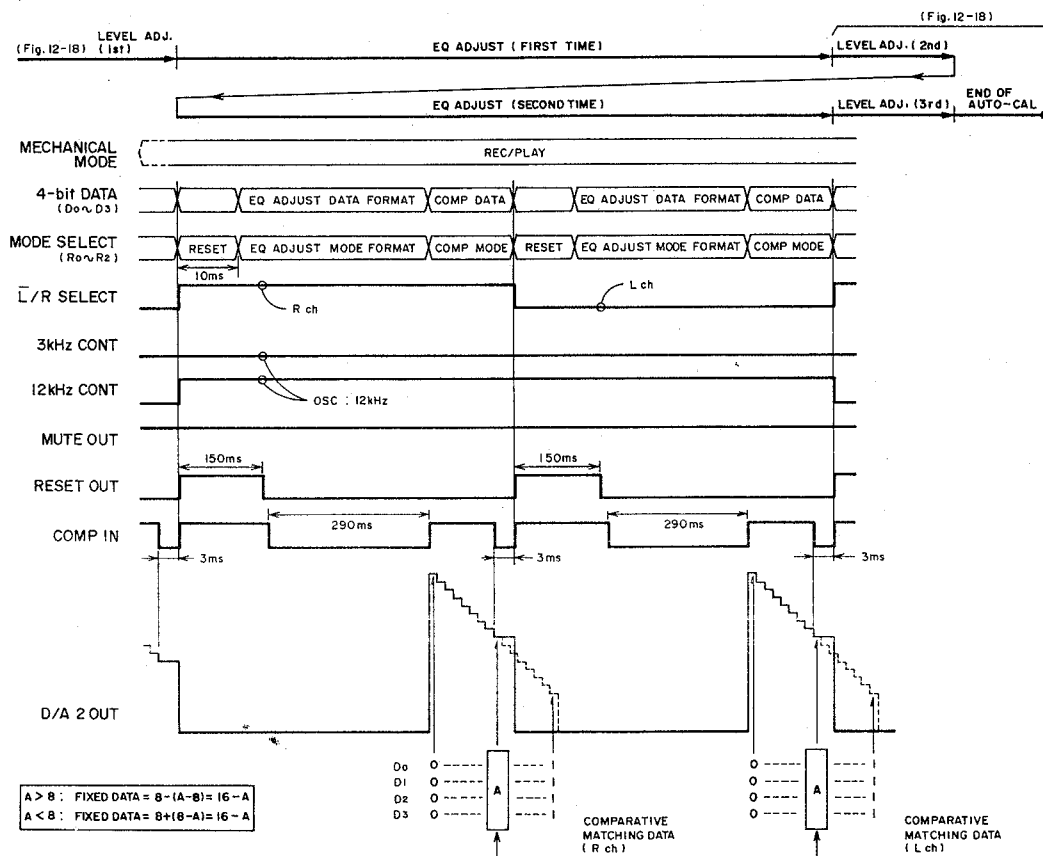


Fig. 12-19 EQ Adjustment